

# I600



## Installation manual

**Barco NV**

Beneluxpark 21, 8500 Kortrijk, Belgium

**Registered office: Barco (Wuxi) Technology Co., Ltd.**

No. 38, Chunhui Middle Road, XiShan District, 214101 Wuxi CHINA

注册办事处: 巴可(无锡)科技有限公司

中国无锡市锡山区春晖中路38号, 邮编214101

## Copyright ©

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of Barco.

## Changes

Barco provides this manual 'as is' without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

The latest edition of Barco manuals can be downloaded from the Barco web site [www.barco.com](http://www.barco.com).

## Trademarks

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.

## Guarantee and Compensation

Barco provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. On receipt, the purchaser must immediately inspect all delivered goods for damage incurred during transport, as well as for material and manufacturing faults Barco must be informed immediately in writing of any complaints.

The period of guarantee begins on the date of transfer of risks, in the case of special systems and software on the date of commissioning, at latest 30 days after the transfer of risks. In the event of justified notice of complaint, Barco can repair the fault or provide a replacement at its own discretion within an appropriate period. If this measure proves to be impossible or unsuccessful, the purchaser can demand a reduction in the purchase price or cancellation of the contract. All other claims, in particular those relating to compensation for direct or indirect damage, and also damage attributed to the operation of software as well as to other services provided by Barco, being a component of the system or independent service, will be deemed invalid provided the damage is not proven to be attributed to the absence of properties guaranteed in writing or due to the intent or gross negligence or part of Barco.

If the purchaser or a third party carries out modifications or repairs on goods delivered by Barco, or if the goods are handled incorrectly, in particular if the systems are operated incorrectly or if, after the transfer of risks, the goods are subject to influences not agreed upon in the contract, all guarantee claims of the purchaser will be rendered invalid. Not included in the guarantee coverage are system failures which are attributed to programs or special electronic circuitry provided by the purchaser, e.g. interfaces. Normal wear as well as normal maintenance are not subject to the guarantee provided by Barco either.

The environmental conditions as well as the servicing and maintenance regulations specified in this manual must be complied with by the customer.

## Patent protection

Please refer to [www.barco.com/about-barco/legal/patents](http://www.barco.com/about-barco/legal/patents).



# Table of contents

<b>1</b>	<b>Safety</b>	<b>7</b>
1.1	General considerations	8
1.2	Important safety instructions	9
1.3	Product safety labels	13
1.4	High Brightness precautions: Hazard Distance	14
1.5	HD for fully enclosed projection systems	16
1.6	HD in function of modifying optics	17
1.7	HD calculation of multi-projector stacks	17
1.8	Compliance	18
1.9	Download Product Manual	18
<b>2</b>	<b>Installation process</b>	<b>19</b>
2.1	Preparation process	20
2.2	Installation process	20
2.3	Additional install options	21
<b>3</b>	<b>Prepare to install</b>	<b>23</b>
3.1	Installation requirements	24
3.2	Unpacking the projector	26
3.3	Initial inspection	27
3.4	Projector orientations	27
3.5	Projector positioning	28
3.6	Projector shift range	29
3.7	Projector tilt range	29
3.8	Lens selection	30
3.9	Available lenses	30
<b>4</b>	<b>Installation procedures</b>	<b>33</b>
4.1	Lens installation	34
4.2	Lens safety cable installation	35
4.3	Basic remote batteries	35
4.4	Installing an input board	36
4.5	Connecting the projector with the power net	38
4.6	Power On the projector	38
4.7	Alignment of a table mounted projector	39
4.8	Software update	39

4.9	Power Off the projector .....	41
4.10	Lens removal .....	42
<b>5</b>	<b>UST lens .....</b>	<b>45</b>
5.1	Installing the UST lens support .....	46
5.2	Configure the UST 90° lens .....	48
<b>6</b>	<b>Scheimpflug (Boresight) .....</b>	<b>51</b>
6.1	Scheimpflug introduction .....	52
6.2	Scheimpflug adjustment.....	53
<b>7</b>	<b>Flight case and rigging frame .....</b>	<b>55</b>
7.1	Flight case.....	56
7.2	Rigging frame.....	56
<b>8</b>	<b>Dust filter .....</b>	<b>59</b>
8.1	Installing the dust filter .....	60
<b>9</b>	<b>Pulse SFP input use cases .....</b>	<b>61</b>
9.1	Use case 1: SFP+ transceiver + Fiber connection (integrated or separated).....	62
9.2	Use case 2: Neutrik OpticalCon Duo + SFP+ transceiver + internal fiber.....	62
9.3	Use case 3: Neutrik OpticalCon Quad + SFP+ transceiver + internal fiber.....	63
9.4	Use case 4: Loop-through mode .....	64
<b>A</b>	<b>Regulatory .....</b>	<b>65</b>
A.1	Trademark notice .....	66
	<b>Glossary .....</b>	<b>67</b>
	<b>List of tools .....</b>	<b>69</b>
	<b>Index .....</b>	<b>71</b>

# Safety

# 1

1.1	General considerations .....	8
1.2	Important safety instructions .....	9
1.3	Product safety labels.....	13
1.4	High Brightness precautions: Hazard Distance.....	14
1.5	HD for fully enclosed projection systems.....	16
1.6	HD in function of modifying optics .....	17
1.7	HD calculation of multi-projector stacks .....	17
1.8	Compliance.....	18
1.9	Download Product Manual .....	18

## About this document

Read this document attentively. It contains important information to prevent personal injury while installing and using the I600 product. Furthermore, it includes several cautions to prevent damage to the unit. Ensure that all safety guidelines, safety instructions and warnings mentioned in this chapter are understood and followed before installing the I600 product.

## Clarification of the term “I600” used in this document

When referring in this document to the term “I600” means that the content is applicable for following Barco products:

- I600-4K8, I600-4K10, I600-4K15

## Model certification name

- I600-4K8 : GPI-A
- I600-4K10 : GPI-B
- I600-4K15 : GPI-C



Barco provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. Observing the specification mentioned in this chapter is critical for optimal performance. Neglecting this can result in loss of warranty.

## 1.1 General considerations



**WARNING:** Be aware of suspended loads.



**WARNING:** When suspending loads, wear a hard hat to reduce the risk of personal injury.



**WARNING:** Be careful while working with heavy loads.



**WARNING:** Mind your fingers while working with heavy loads.



**WARNING:** In case of emergency, disconnect the device from the mains power supply. In case the power input at the projector side is not accessible, a readily accessible general disconnect device shall be incorporated.

### General safety instructions

- Before operating this equipment please read this manual thoroughly and retain it for future reference.
- All warnings on the unit and in its documentation manuals must be adhered to.
- Installation and preliminary adjustments must be performed by qualified Barco personnel or by authorized Barco service dealers.
- This product contains no user serviceable parts. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.
- All instructions for operating and use of this equipment must be followed precisely.
- All local installation codes must be adhered to.

### Notice on safety

This equipment is built in accordance with the requirements of the applicable international safety standards. These safety standards impose important requirements on the use of safety critical components, materials and insulation, in order to protect the user or operator against risk of electric shock and energy hazard and having access to live parts. Safety standards also impose limits to the internal and external temperature rises, radiation levels, mechanical stability and strength, enclosure construction and protection against the risk of fire. Simulated single fault condition testing ensures the safety of the equipment to the user even when the equipment's normal operation fails.

### Notice on optical radiation

This projector embeds a light source incorporating high brightness lasers. The laser light is processed through the projector's optical path. Native laser light is not accessible by the end user in any use case. The light exiting the projection lens has been diffused within the optical path, representing a larger source and lower brightness than native laser light. Nevertheless the projected light can represent a significant risk for the human eye and skin when exposed directly within the beam. This risk is not specifically related to the characteristics of laser light but solely to the high thermal induced energy of the light source, which is equivalent with lamp based systems. Thermal eye injury is possible when exposed within the Hazard Distance (HD). The HD is defined from the projection lens surface towards the position of the projected beam where the intensity equals the maximum permissible exposure as described in the chapter "Hazard Distance".

This projector is classified as a laser product under IEC 60825-1: 2014, EN 60825-1:2014+A11:2021. The projector, in particular the projection beam, is classified as a Risk Group (RG) under IEC EN 62471-5:2015.



**WARNING:** This projector has a built-in Class 4 laser module. Never attempt to disassemble or modify the laser module. Service only allowed by qualified service personnel.





**WARNING:** No direct exposure to the projection beam within the hazard distance shall be permitted for RG3 (Risk Group 3) IEC EN 62471-5:2015. Do not stare into the beam for RG2 (Risk Group 2) IEC EN 62471-5:2015.



**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## Optical radiation safety precautions

This projector is classified as CLASS 1 LASER PRODUCT - RISK GROUP 3.

### Users definition

These projectors are intended "FOR PROFESSIONAL USE ONLY", this means installation can only be carried out by trained and authorized persons.

Throughout this manual, the terms SERVICE PERSONNEL, INSTALLER refers to persons having appropriate technical training and experience necessary to be knowledgeable of potential hazards to which they are exposed (including, but not limited to HIGH VOLTAGE ELECTRIC and ELECTRONIC CIRCUITRY, HIGH TEMPERATURES and HIGH BRIGHTNESS SOURCES) in performing a task, and of measures to minimize the potential risks to themselves or other persons.

The term USER or OPERATOR of RG2 projectors refers to any other person than SERVICE PERSONNEL or INSTALLER. The term USER or OPERATOR of RG3 projectors refers to any person trained and authorized to operate professional RG3 projectors. The USER or OPERATOR may only perform the maintenance tasks set forth in the user manual or the maintenance tasks for which they are trained and authorized. All other maintenance tasks and service tasks must be performed by qualified SERVICE PERSONNEL.

## 1.2 Important safety instructions

### To prevent the risk of electrical shock

- This product should be operated from a mono phase AC power source. Ensure that the mains voltage and capacity match the projectors electrical ratings. If you are unable to install the AC requirements, contact your electrician. Do not defeat the purpose of grounding.
- This apparatus must be grounded (earthed) via the supplied 3 conductor AC power cable. If none of the supplied power cables are the correct one, consult your dealer.
- Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord. To disconnect the cord, pull it out by the plug. Never pull the cord itself.
- Do not operate the projector with a damaged cord. Replace the cord.
- Do not operate the projector if the projector has been dropped or damaged - until it has been examined and approved for operation by a qualified service technician.
- Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
- If an extension cord is necessary, a cord with a current rating at least equal to that of the projector should be used. A cord rated for less amperage than the projector may overheat.
- Do not expose this projector to rain or moisture.
- Do not immerse or expose this projector in water or other liquids.
- Do not spill liquid of any kind on this projector.
- Should any liquid or solid object fall into the cabinet, unplug the set and have it checked by qualified service personnel before resuming operations.
- Do not disassemble this projector, always take it to an authorized trained service person when service or repair work is required.
- Do not use an accessory attachment which is not recommended by the manufacturer.
- Lightning - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the device due to lightning and AC power-line surges.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
- If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.

- Ensure that the main power cord complies with the national regulations at the site where the equipment is used.
- Do not use unauthorized replacements.
- Make sure that no objects enter into the vents and openings of the set.
- The projector is designed for indoor use only. Never operate the unit outdoors.

## To prevent personal injury

- To prevent injury and physical damage, always read this manual and all labels on the system before powering the projector or adjusting the projector.
- To prevent injury, take note of the weight of the projector. The projector weighs about 23.7 kg (52.3 lbs) without lens and rigging frame.
- To prevent injury, ensure that the lens and all covers are correctly installed. See installation procedures.
- Warning: high intensity light beam. NEVER look into the lens ! High luminance could result in damage to the eye.
- **Warning: extremely high brightness projector:** This projector embeds extremely high brightness (radiance) lasers; this laser light is processed through the projectors optical path. Native laser light is not accessible by the end user in any use case. The light exiting the projection lens has been diffused within the optical path, representing a larger source and lower radiance value than native laser light. Nevertheless the projected light represents a significant risk for the human eye when exposed directly within the beam. This risk is not specific related to the characteristics of laser light but solely to the high thermal induced energy of the light source; which is comparable with lamp based systems. Thermal retinal eye injury is possible when exposed within the Hazard Distance. The Hazard Distance (HD) is defined from the projection lens surface towards the position of the projected beam where the irradiance equals the maximum permissible exposure as described in the chapter [“High Brightness precautions: Hazard Distance”](#), page 14.
- Based on international requirements, no person is allowed to enter the projected beam within the zone between the projection lens and the related Hazard Distance (HD). This shall be physically impossible by creating sufficient separation height or by placing optional barriers. Within the restricted area operator training is considered sufficient. The applicable separation heights are discussed in [“High Brightness precautions: Hazard Distance”](#), page 14.
- Don't put your hand in front of the beam.
- This product contains no user serviceable parts. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.
- A special device (“rigged frame”) based on an external frame must be used when the projector is deployed in a hanging configuration, or when several projector must be stacked. See installation manuals for the correct use of these devices.
- Never stack more than 2 projectors in a hanging configuration (truss) and never stack more than 3 projectors in a base stand configuration (table mount).
- When using the projector in a hanging configuration, always mount 2 safety cables. See installation manual for the correct use of these cables.
- Do not place this equipment on an unstable cart, stand, or table. The product may fall, causing serious damage to it and possible injury to the user.
- It is hazardous to operate without lens or shield. Lenses, shields or ultra violet screens shall be changed if they have become visibly damaged to such an extent that their effectiveness is impaired. For example by cracks or deep scratches.
- Never point or allow light to be directed on people or reflective objects within the HD zone.
- All operators shall have received adequate training and be aware of the potential hazards.
- In case of using an external cooling system position the hoses of the cooling system so that they will not be tripped over, pulled, or contact hot surfaces.

## To prevent fire hazard

- Do not place flammable or combustible materials near the projector!
- Barco projection products are designed and manufactured to meet the most stringent safety regulations. This projector radiates heat on its external surfaces and from ventilation ducts during normal operation, which is both normal and safe. Exposing flammable or combustible materials into close proximity of this projector could result in the spontaneous ignition of that material, resulting in a fire. For this reason, it is absolutely necessary to leave an “exclusion zone” around all external surfaces of the projector whereby no flammable or combustible materials are present. The exclusion zone in the exhaust area must be not less than 100 cm (40”). The exclusion zone on the intake area must be not less than 50 cm (20”).

- Do not place any object in the projection light path at close distance to the projection lens output. The concentrated light at the projection lens output may result in damage, fire or burn injuries.
- Do not cover the projector or the lens with any material while the projector is in operation. Keep flammable and combustible materials away from the projector at all times. Mount the projector in a well ventilated area away from sources of ignition and out of direct sun light. Never expose the projector to rain or moisture. In the event of fire, use sand, CO<sub>2</sub> or dry powder fire extinguishers. Never use water on an electrical fire. Always have service performed on this projector by qualified service personnel. Always insist on genuine Barco replacement parts. Never use non-Barco replacement parts as they may degrade the safety of this projector.
- Ensure no misalignment can occur. Prolonged exposure of wooden walls at close distance (< 20 cm) can represent a fire risk. After alignment the projector shall be securely mounted to the pedestal.
- Slots and openings in this equipment are provided for ventilation. To ensure reliable operation of the projector and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the projector too close to walls, or other similar surface. This projector should never be placed near or over a radiator or heat register. This projector should not be placed in a built-in installation or enclosure unless proper ventilation is provided.
- Projection rooms must be well ventilated or cooled in order to avoid build up of heat. It is necessary to vent hot exhaust air from projector and cooling system to the outside of the building.
- Let the projector cool completely before storing. Remove cord from the projector when storing.

### To prevent battery explosion

- Danger of explosion if battery is incorrectly installed.
- Replace only with the same or equivalent type recommended by the manufacturer.
- For disposal of used batteries, always consult federal, state, local and provincial hazardous waste disposal rules and regulations to ensure proper disposal.

### To prevent projector damage

- This apparatus must be grounded (earthed) via the supplied 3 conductor AC power cable.
- Always remove lens cap before switching on the projector. If the lens cap is not removed, it may melt due to the high energy light emitted through the lens. Melting the lens cap may permanently damage the surface of the projection lens.
- The air inlets of the projector must be cleaned on a regular basis. Cleaning the booth area would be monthly-minimum. Neglecting this could result in disrupting the air flow inside the projector, causing overheating. Overheating may lead to the projector shutting down during operation.
- The projector must always be installed in a manner which ensures free flow of air into its air inlets.
- If more than one projector is installed in a common projection booth, the exhaust air flow requirements are valid for EACH individual projector system. Note that inadequate air extraction or cooling will result in decreased life expectancy of the projector as a whole as well as causing premature failure of the lasers.
- In order to ensure that correct airflow is maintained, and that the projector complies with Electromagnetic Compatibility (EMC) and safety requirements, it should always be operated with all of its covers in place.
- Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. The device should not be placed in a built-in installation or enclosure unless proper ventilation is provided.
- Ensure that nothing can be spilled on, or dropped inside the projector. If this does happen, switch off and remove all power from the projector. Do not operate the projector again until it has been checked by qualified service personnel.
- Do not block the projector cooling fans or free air movement around the projector.
- Do not use this equipment near water.
- **Special care for Laser Beams:** Special care should be used when DLP projectors are used in the same room as high power laser equipment. Direct or indirect hitting of a laser beam on to the lens can severely damage the Digital Mirror Devices™ in which case there is a loss of warranty.
- Never place the projector in direct sunlight. Sunlight on the lens can severely damage the Digital Mirror Devices™ in which case there is a loss of warranty.
- Save the original shipping carton and packing material. They will come in handy if you ever have to ship your equipment. For maximum protection, repack your set as it was originally packed at the factory.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Never use strong solvents, such as thinner or benzene, or abrasive

cleaners, since these will damage the cabinet. Stubborn stains may be removed with a cloth lightly dampened with mild detergent solution.

- To ensure the highest optical performance and resolution, the projection lenses are specially treated with an anti-reflective coating, therefore, avoid touching the lens. To remove dust on the lens, use a soft dry cloth. For lens cleaning follow the instructions precisely as stipulated in the projector manual.
- Only connect the projector to signal sources and voltages as described in the technical specification. Connecting to unspecified signal sources or voltages may lead to malfunction and permanent damage of the unit.
- Allowed ambient temperature range:  $t_a = 5^{\circ}\text{C}$  ( $41^{\circ}\text{F}$ ) to  $40^{\circ}\text{C}$  ( $104^{\circ}\text{F}$ )
- Rated humidity = 10% RH to 80% RH Non-condensed.
- Do not operate the projector outside its temperature and humidity specifications as this may result in overheating and malfunction.

## On servicing

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage potentials and risk of electric shock.
- Refer all servicing to qualified service personnel.
- Attempts to alter the factory-set internal controls or to change other control settings not specially discussed in this manual can lead to permanent damage to the unit and cancellation of the warranty.
- Replacement parts: When replacement parts are required, be sure the service technician has used original Barco replacement parts or authorized replacement parts which have the same characteristics as the Barco original part. Unauthorized substitutions may result in degraded performance and reliability, fire, electric shock or other hazards. Unauthorized substitutions may void warranty.
- Safety check: Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

## Malfunction unit

Remove all power from the product and refer servicing to qualified service technicians under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled into the equipment.
- If the product has been exposed to rain or water.
- If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of the other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

## Stacking and transporting

- Stack maximum 2 rental flight cases high. Never higher.
- Surface on which flight case is standing must be level to ensure that the total load is evenly spread out among the four wheels. The surface must also be able to support the load safely.
- Before stacking or transporting flight cases, check the wheels and their fixation screws for wear or defects.
- Before stacking or transporting flight cases, check that the four lock handles on each flight case are in good working order and locked securely.
- When stacked, make sure the wheels of the upper flight case are precisely positioned in the stacking dishes of the flight case below.
- Stacked flight cases may not be moved. Before stacking, the lower flight case must already be in its final resting position before placing the second upon it.
- Never stack loaded flight cases in a truck or other transport medium, unless each flight case is rigidly strapped tight.
- In the event of a wheel breaking, flight cases must be rigidly strapped tight to prevent a stack collapsing.
- Use an appropriate forklift to raise flight cases and take the necessary precautions to avoid personnel injury.

## Safety Data Sheets for Hazardous Chemicals

For safe handling information on chemical products, consult the Safety Data Sheet (SDS). SDSs are available upon request via [safetydatasheets@barco.com](mailto:safetydatasheets@barco.com).

## 1.3 Product safety labels

### Light beam related safety labels

Safety labels explanation and location:

Refer to user manual for further information!



Hazard RG3:  
Not for household use symbol.



Hazard RG3:  
Optical radiation warning symbol.



<p>WARNING! DO NOT LOOK INTO THE BEAM. NO DIRECT EYE EXPOSURE TO THE BEAM IS PERMITTED. CLASS 1 LASER PRODUCT RG3. HAZARD DISTANCE: REFER TO THE SAFETY MANUAL. IEC 60825-1:2014   CAN/CSA-E60825-1:15 EN 60825-1:2014+ A11: 2021   EN/IEC 62471-5:2015</p> <p>警告! 請勿直視光束。眼睛不要直接曝露在光束中 1類激光產品RG3 危害距離: 參見用戶手冊 IEC 60825-1:2014   CAN/CSA-E60825-1:15 EN 60825-1:2014+ A11: 2021   EN/IEC 62471-5:2015</p> <p>THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR LASER PRODUCTS UNDER 21 CFR 1040, EXCEPT WITH RESPECT TO THOSE CHARACTERISTICS AUTHORIZED BY VARIANCE NUMBER 2016-V-0144 EFFECTIVE ON DECEMBER 12, 2019.</p> <p>EMC This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.</p>	<p>ATTENTION! NE PAS REGARDER LE FAISCEAU. EVITER TOUTE EXPOSITION DIRECTE DES YEUX AU FAISCEAU. PRODUIT LASER DE CLASSE 1 RG3. DISTANCE DE SECURITE: CONSULTER LE MANUEL DE SECURITE. IEC 60825-1:2014   CAN/CSA-E60825-1:15 EN 60825-1:2014+ A11: 2021   EN/IEC 62471-5:2015</p> <p>警告! 請勿注視光源。禁止眼睛曝露在光源照射範圍 雷射危險等級: 1類雷射產品RG3 安全危害距離: 請參考安全手冊 IEC 60825-1:2014   CAN/CSA-E60825-1:15 EN 60825-1:2014+ A11: 2021   EN/IEC 62471-5:2015</p> <p>THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR LASER PRODUCTS UNDER 21 CFR 1040, EXCEPT WITH RESPECT TO THOSE CHARACTERISTICS AUTHORIZED BY VARIANCE NUMBER 2016-V-0144 EFFECTIVE ON DECEMBER 12, 2019.</p> <p>CANADA This Class A digital apparatus complies with the Canadian ICES-003. Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.</p> <p>警告使用者: 此為甲類資訊技術設備, 於居住環境中使用時, 可能會造成射頻擾動, 在此種情況下, 使用者會被要求採取某些適當的對策。</p>
--	--



**WARNING! DO NOT LOOK INTO THE BEAM. NO DIRECT EYE EXPOSURE TO THE BEAM IS PERMITTED. CLASS 1 LASER PRODUCT RG3. HAZARD DISTANCE: REFER TO THE SAFETY MANUAL.**

**ATTENTION! NE PAS REGARDER LE FAISCEAU. EVITER TOUTE EXPOSITION DIRECTE DES YEUX AU FAISCEAU. PRODUIT LASER DE CLASSE 1 RG3. DISTANCE DE SECURITE: CONSULTER LE MANUEL DE SECURITE.**

**警告! 請勿直視光束。眼睛不要直接曝露在光束中 1類激光產品RG3 危害距離: 參見用戶手冊**

**警告! 請勿注視光源。禁止眼睛曝露在光源照射範圍雷射危險等級: 1類雷射產品RG3 安全危害距離: 請參考安全手冊**

IEC 60825-1:2014 | EN 60825-1: 2014+ A11: 2021 | CAN/CSA-E60825-1: 15 | EN/IEC 62471-5:2015

THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR LASER PRODUCTS UNDER 21 CFR 1040, EXCEPT WITH RESPECT TO THOSE CHARACTERISTICS AUTHORIZED BY VARIANCE NUMBER 2016-V-0144 EFFECTIVE DECEMBER 12, 2019.

EMC This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

警告: 此為A級產品, 在居住環境中, 運行此設備可能會造成無線電干擾。

警告使用者: 此為甲類資訊技術設備, 於居住環境中使用時, 可能會造成射頻擾動, 在此種情況下, 使用者會被要求採取某些適當的對策。

CANADA This Class A digital apparatus complies with the Canadian ICES-003. Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

## 1.4 High Brightness precautions: Hazard Distance



### HD

Hazard Distance (HD) is the distance measured from the projection lens at which the intensity or the energy per surface unit becomes lower than the applicable exposure limit on the eye or on the skin. The light beam is considered (to be) unsafe for exposure if the distance from a person to the light source is less than the HD.

### Restriction Zone (RZ) based on the HD

The HD depends on the amount of lumens produced by the projector and the type of lens installed. See chapter “HD in function of modifying optics”, page 17.

To protect untrained end users (as cinema visitors, spectators) the installation shall comply with the following installation requirements: Operators shall control access to the beam within the hazard distance or install the product at a height that will prevent spectators' eyes from being in the hazard distance. Radiation levels in excess of the limits will not be permitted at any point less than 2.0 meter (SH) above any surface upon which persons other than operators, performers, or employees are permitted to stand or less than 1.0 meter (SW) lateral separation from any place where such persons are permitted to be. In environments where unrestrained behavior is reasonably foreseeable, the minimum separation height should be greater than or equal to 3.0 meter to prevent potential exposure, for example by an individual sitting on another individual's shoulders, within the HD.

These values are minimum values and are based on the guidance provided in IEC 62471-5:2015 section 6.6.3.5.

The installer and user must understand the risk and apply protective measures based upon the hazard distance as indicated on the label and in the user information. Installation method, separation height, barriers, detection system or other applicable control measure shall prevent hazardous eye access to the radiation within the hazard distance.

For example, projectors that have a HD greater than 1 m and emit light into an uncontrolled area where persons may be present should be positioned in accordance with “the fixed projector installation” parameters, resulting in a HD that does not extend into the audience area unless the beam is at least 2.0 meter above the floor level. In environments where unrestrained behavior is reasonably foreseeable, the minimum separation height should be greater than or equal to 3.0 meter to prevent potential exposure, for example by an individual sitting on another individual's shoulders, within the HD. Sufficiently large separation height may be achieved by mounting the image projector on the ceiling or through the use of physical barriers.

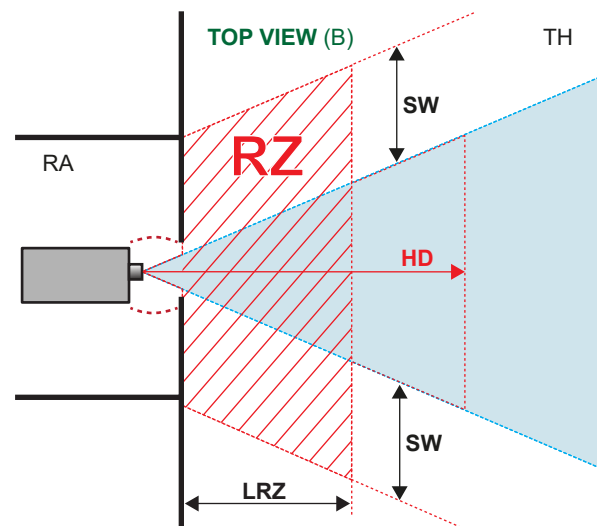
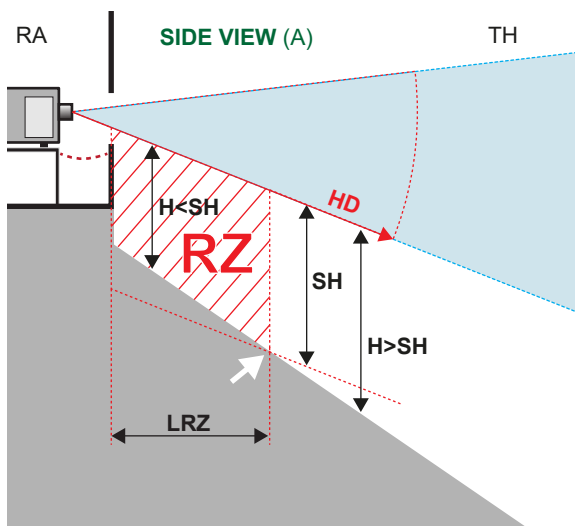


Image 1-1

- A** Side view
- B** Top view
- RA** Restricted Access location (boot area of projector).
- TH** Theater
- RZ** Restriction Zone in the theater

- HD** Hazard Distance
- LRZ** Length Restriction Zone in the theater
- H** Height between surface floor and the light beam
- SH** Separation Height
- SW** Separation Width

Based on national requirements, no person is allowed to enter the projected beam within the zone between the projection lens and the related hazard distance (HD). This shall be physically impossible by creating sufficient separation height or by placing barriers. The minimum separation height takes into account the surface upon which persons other than operator, performers or employees are permitted to stand.

On [Image 1–2](#) a typical setup is displayed. It must be verified if these minimum requirements are met. If required a restricted zone (RZ) in the theater must be established. This can be done by using physical barrier, like a red rope as illustrated in [Image 1–2](#).

The restricted area sticker can be replaced by a sticker with only the symbol.

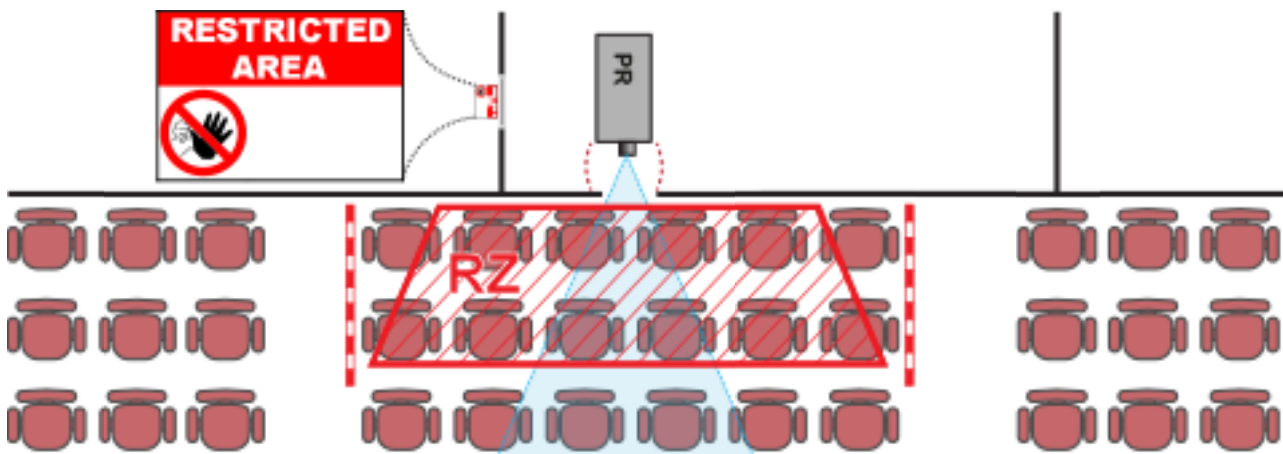


Image 1–2

## USA market

For LIPs (Laser Illuminated Projectors) installed in the USA market other restriction zone conditions apply.

LIPs for installation in restrained environment (cinema theaters, business rooms, class rooms, museums ...) shall be installed at height vertically above the floor such that the bottom plane of the hazard distance zone shall be no lower than 2.5 meters above the floor. Horizontal clearance to the hazard distance zone shall be not less than 1 meter. Alternatively, in case the height of the separation barrier for the horizontal clearance is at least 1 meter high then the horizontal clearance (SW) can be reduced to:

- 0 meter if the height of the hazard zone is minimum 2.5 meter.
- 0.1 meter if the height of the hazard zone is minimum 2.4 meter.
- 0.6 meter if the height of the hazard zone is minimum 2.2 meter.

LIPs for installations in unrestrained environment (concerts, ...) shall be installed at a height vertically above the floor such that the bottom plane of the Hazard distance Zone shall be no lower than 3 meters above the floor. Horizontal clearance to the hazard distance zone shall be not less than 2.5 meters. Any human access horizontally to the Hazard Zone, if applicable, shall be restricted by barriers. If human access is possible in an unsupervised environment, the horizontal or vertical clearances shall be increased to prevent exposure to the hazard distance zone.

The LIP shall be installed by Barco or by a trained and Barco-authorized installer or shall only be transferred to laser light show variance holders. This is applicable for dealers and distributors since they may need to install the LIP (demo install) and/or they transfer (sell, rent, lease) the LIP. Dealers and distributors shall preserve sales and installation records for a period of 5 years. Variance holders may currently hold a variance for production of Class IIIB and IV laser light shows and/or for incorporating RG3 LIPs. Laser light show variance for RG3 LIPs can be requested by mailing the application to [RadHealthCustomerService@fda.hhs.gov](mailto:RadHealthCustomerService@fda.hhs.gov).

The installation checklist for laser illuminated RG3 projectors must be fully completed after the installation. The installation checklist can be downloaded from the Barco website. The installer shall preserve the checklist for a period of 5 years. A copy can remain on-site.

Install one or more readily accessible controls to immediately terminate LIP projection light. The power input at the projector side is considered as a reliable disconnect device. When required to switch off the projector, disconnect the power cord at the projector side. In case the power input at the projector side is not accessible (e.g. truss mount), the socket outlet supplying the projector shall be installed nearby the projector and be easily accessible, or a readily accessible general disconnect device shall be incorporated in the fixed wiring.

## 1.5 HD for fully enclosed projection systems



### HD

Hazard Distance (HD) is the distance measured from the projection lens at which the intensity or the energy per surface unit becomes lower than the applicable exposure limit on the eye or on the skin. The light beam is considered (to be) unsafe for exposure if the distance from a person to the light source is less than the HD.

### Restriction Zone (RZ) based on the HD

The projector is also suitable for rear projection applications; projecting a beam onto a diffuse coated projection screen. As displayed in [Image 1–3](#) two areas should be considered: the restricted enclosed projection area (RA) and the observation area (TH).

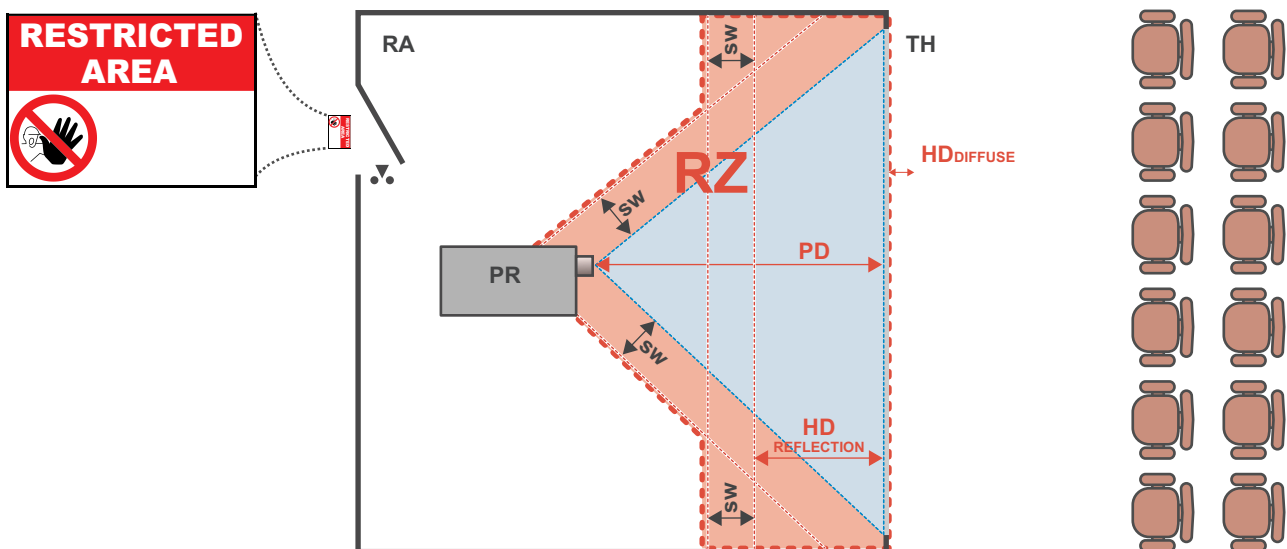


Image 1–3

**RA** Restricted Access location (enclosed projection area).  
**PR** Projector.  
**TH** Theater (observation area).

**RZ** Restriction Zone.  
**PD** Projection Distance.  
**SW** Separation Width. Must be minimum 1 meter.

For this type of setup 3 different HD shall be considered:

- HD as discussed in [“High Brightness precautions: Hazard Distance”](#), page 14, relevant for intrabeam exposure.
- $HD_{\text{reflection}}$  : the distance that has to be kept restrictive related to the reflected light from the rear projection screen.
- $HD_{\text{diffuse}}$  : the relevant distance to be considered while observing the diffuse surface of the rear projection screen.

As described in [“High Brightness precautions: Hazard Distance”](#), page 14, it is mandatory to create a restricted zone within the beam areas closer than any HD. In the enclosed projection area the combination of two restricted zones are relevant: The restricted zone of the projected beam toward the screen; taking into account 1 meter Separation Width (SW) from the beam onward. Combined with the restricted zone related to the rear reflection from the screen ( $HD_{\text{reflection}}$ ); also taking into account a 1 meter lateral separation.

The  $HD_{\text{reflection}}$  distance equals 25% of the difference between the determined HD distance and the projection distance to the rear projection screen. To determine the HD distance for the used lens and projector model see chapter [“HD in function of modifying optics”](#), page 17.

$$HD_{\text{reflection}} = 25\% (HD - PD)$$

The light emitted from the screen within the observation shall never exceed the RG2 exposure limit, determined at 10 cm. The  $HD_{\text{diffuse}}$  can be neglected if the measured light at the screen surface is below 5000 cd/m<sup>2</sup> or 15000 LUX.



## 1.6 HD in function of modifying optics

### Hazard distance

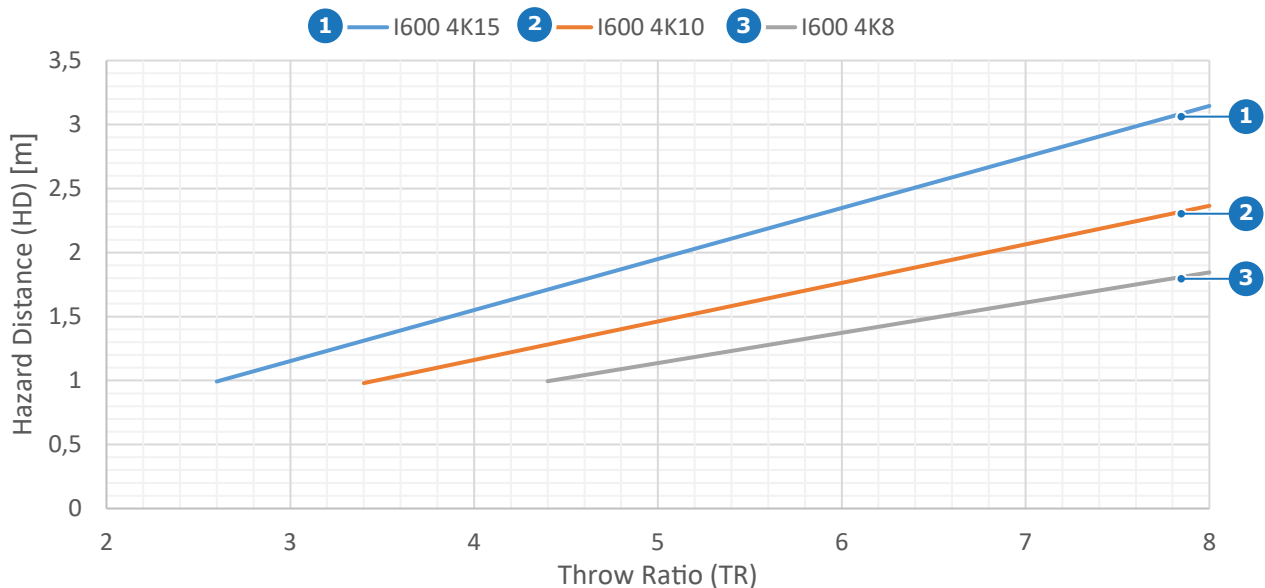


Image 1–4

**HD** Hazard Distance  
**TR** Throw Ratio



No hazard distance measures applicable when the hazard distance is shorter than 1 meter. Like with any bright light source, do not stare into the beam and prevent close exposure to children.

## 1.7 HD calculation of multi-projector stacks

Sometimes two or more projectors are stacked (projecting on the same surface). In this case, because of the overlap of the images, possibly a system Hazard Distance needs to be applied instead of a single projector hazard distance.

Only projectors stacked along one axis (horizontal or vertical) should be considered. Physical stacking of projectors in two dimensions (for example 2x2), can be reduced to separate “N”x1 systems.

The information needed is:

- The Hazard Distance (**HD**) of a single projector with the given lens.
- The distance (**h**) between two adjacent projector lens centers in the stack.



For 3 or more projectors, in case the distances between adjacent lenses are not equal, take the shortest distance.


HD calculation:

- For stacking two-projectors:
  - **If the single projector hazard distance  $HD \geq 9 \cdot h$** , then the system hazard distance to implement is  $1.15 \cdot HD$ .
  - **If the single projector hazard distance  $HD < 9 \cdot h$** , then keep the original HD and risk zone per projector.
- For stacking “N” projectors along the same axis, “N” being 3 or more:
  - **If the single projector hazard distance  $HD \geq 12 \cdot h$** , then the system hazard distance to implement is  $(\frac{N}{2} + 0.15) \cdot HD$ .
  - **If the single projector hazard distance  $9 \cdot h \leq HD < 12 \cdot h$** , then the system hazard distance to implement is  $1.15 \cdot HD$ .

- If the single projector hazard distance  $HD < 9 \cdot h$ , then keep the original HD and risk zone per projector.

## 1.8 Compliance

### UK Compliance

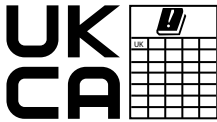

This product is fit for use in the UK.

**Authorised Representative:** Barco UK Ltd

**Address:** Building 329, Doncastle Road  
Bracknell RG12 8PE, Berkshire, United Kingdom

### L'information des consommateurs sur la règle de tri



## 1.9 Download Product Manual

### Download product manual

Product manuals and other related documentation are available online at <https://www.barco.com>. Search or browse to the product support page or scan the QR code on the product ID-label or on the box label. To see all service documentation (e. g., spare part list, service manuals, field loadable software ...) you must be registered and logged in.

**IMPORTANT!** Read Installation instructions before connecting equipment to the mains power supply.

# Installation process

# 2

2.1	Preparation process.....	20
2.2	Installation process.....	20
2.3	Additional install options.....	21

## About this chapter

This chapter, and by extension this whole document, the **I600 installation manual**, gives an overview of all the different stages in the installation process that has to be followed in chronological order to set the I600 projector up and running. The stages are grouped in three processes: Preparation, Installation and Options. Each stage is briefly described and refers to more detailed step by step procedures in this manual or reference is made to other online product manuals.

This manual does not describe the Pulse graphic user interface. Refer to the **Pulse software user guide** for all software features of the projector. Refer to the **I600 user guide** for info about general projector parts, compliance information, product specifications and much more.



The Pulse software has regular new releases due to continuous improvements. Hence, the **Pulse OSD** user guide is subject to updates. Download the latest version of the user guide from the Barco website using following link: <https://www.barco.com/support>.



## 2.1 Preparation process

### Prepare for installation

1. Ensure that you understand all safety topics described in the chapter [“Safety”, page 7](#).
2. Check if all installation requirements are fulfilled such as:
  - the environmental conditions of the installation area,
  - the electrical facilities,
  - cooling requirements,
  - the capabilities of the supporting structure (table/ceiling)
  - etc ... for more info see chapter [“Installation requirements”, page 24](#).
3. Unpack the projector or pull out the projector from its flight case. See chapter [“Unpacking the projector”, page 26](#) or see chapter [“Flight case”, page 56](#).
4. In case of a first install perform an initial inspection of the projector. See [“Initial inspection”, page 27](#).
5. Define the installation position of the projector. For detailed info and possibilities see chapters:
  - [“Projector orientations”, page 27](#).
  - [“Projector positioning”, page 28](#).
  - [“Projector shift range”, page 29](#).
  - [“Projector tilt range”, page 29](#)
6. Select the lens that will best fit for the application. See chapter [“Lens selection”, page 30](#), and [“Available lenses”, page 30](#).

## 2.2 Installation process

### Physical installation process overview

1. Installation of the projector in the desired position. Take following points into account:
  - Ensure that the physical setup of projector complies with all safety requirements such as the hazard distance restriction zone etc. See safety chapter [“High Brightness precautions: Hazard Distance”, page 14](#).
  - Projector configuration:
    - In case of a standing installation:
      - Use a solid pedestal to place a single I600 projector on (with or without rigging frame)
      - Use a solid pedestal and I600 rigging frames for stacking the I600 projectors up to maximum 3 units high.
    - In case of a hanging installation:
      - Use the I600 rigging frames to suspend up to maximum 2 stacked I600 projectors (Table Mount or Ceiling Mount).
      - Use a I600 rigging frame to hang one I600 projector in portrait (wall mount)
  -  *Note:* For detailed instructions on how to use (install, suspend, stack, adjust, ...) the I600 rigging frame see separate documentation of the I600 rigging frame.
  -  *Note:* Ceiling mount and wall mount of a single I600 projector can be realized without I600 rigging frame but then a 3rd party interface needs to be added between the projector and the surface to attach the projector on.
2. Connecting the I600 projector with the power net. See chapter [“Connecting the projector with the power net”, page 38](#).  
Ensure that the power net complies with the main power requirements of the projector. Refer to chapter [“Installation requirements”, page 24](#).
3. Installation of the selected projection lens for the application. For detailed instructions see [“Lens installation”, page 34](#).



**Warning:** Some projection lenses, more specific the heavy UST lenses, require a lens support. See chapter “[Available lenses](#)”, page 30, to know which lenses are subject to a lens support bracket. For installation instructions see chapter “[UST lens](#)”, page 45.



**Caution:** Install the lens safety cable in case the projector is mounted above people. For detailed instructions see “[Lens safety cable installation](#)”, page 35. For ordering info see Barco website.

4. Installation of the batteries of the Remote Control Unit (RCU). See chapter “[Basic remote batteries](#)”, page 35.
5. Switch on the projector and start image projection. See “[Power On the projector](#)”, page 38. Following options are possible to control the projector:
  - using the Remote Control Unit. See I600 user guide and Pulse OSD user guide.
  - using the Local Keypad. See I600 user guide and Pulse OSD user guide.
  - Using Pulse Prospector. See Pulse Prospector user guide.
6. Projector registration. Upon first startup of the projector, you will have the option to register the projector. Consult the **Projector Registration** user guide for more information if you want to do so.
7. Acclimatize and configure the installed projection lens. Calibrate the lens and potential focus drift.
  - To calibrate the mounted lens, use the Lens calibration menu in the GUI or Pulse Prospector.
  - To calibrate the focus drift, use Pulse Prospector.

For detailed information, see Pulse OSD and Pulse Prospector user guide.

8. Alignment of the projected image with the screen. Activate an internal test pattern to focus, zoom and shift the lens until the projected image is aligned with the screen. Use for that the:
  - Focus, Zoom and Shift buttons of the RCU.
  - Lens adjustment button of the Local Keypad.
  - Pulse Prospector software.



**Warning:** In case a lens support is installed ensure that all lens support brackets are detached from the lens body before adjusting the horizontal and vertical shift. After shift adjustment disable the shift features in the Pulse software and fasten all lens support brackets. See chapter “[UST lens](#)”, page 45.

To level the projector with the screen, adjust the feed of the projector in case of a table mount installation (see “[Alignment of a table mounted projector](#)”, page 39), or adjust the rotation of the rigging frame in case of a suspended installation.

If needed change the projector orientation (e.g. Front/Table, Front/Ceiling, Rear/Table, Rear Ceiling).

9. Check for the latest projector software package. See chapter “[Software update](#)”, page 39.
10. Safely shutdown the projector after usage. See chapter “[Power Off the projector](#)”, page 41.

## 2.3 Additional install options

### Overview

1. Installation of an optional input board (e.g. **Quad DP 1.2 input** or the **SFP input** ) or replacing an input board.
  - for installation see “[Installing an input board](#)”, page 36.
  - for configuring the SFP input see “[Pulse SFP input use cases](#)”, page 61.
2. Installation of the **WiFi** dongle. Plug the USB WiFi dongle in an available USB port.
3. Installation of the dust filter. See chapter “[Dust filter](#)”, page 59.



# 3

## Prepare to install

3.1	Installation requirements .....	24
3.2	Unpacking the projector .....	26
3.3	Initial inspection .....	27
3.4	Projector orientations .....	27
3.5	Projector positioning .....	28
3.6	Projector shift range .....	29
3.7	Projector tilt range .....	29
3.8	Lens selection .....	30
3.9	Available lenses .....	30

### About this chapter

Read this chapter thoroughly before installing the projector. It contains important information concerning installation requirements for the projector, such as minimum and maximum allowed ambient temperature, humidity conditions, required safety area around the installed projector, required power, etc.

In addition, careful consideration of things such as image size, projector placement and type of screen to use are critical to the optimum use of this projection system.



Barco provides a guarantee relating to manufacturing as part of the legally stipulated terms of guarantee. Observing the specification mentioned in this chapter is critical for the projector performance. Neglecting this can result in loss of warranty.

## 3.1 Installation requirements



**WARNING:** Ensure that the physical environment in which the projector is installed, complies at all times with the environmental requirements summarized in this chapter! Never use the projector in case not all requirements are fulfilled. Neglecting will damage the projector and will void the warranty.

### Environment conditions

Environment	Operating	Non-Operating
Ambient temperature	5°C (41°F) to 40°C (104°F)	-20°C (-4°F) to 60°C (140°F)
Humidity	10% RH to 80% RH Non-condensed	10% RH to 90% RH Non-Condensed
Altitude	0 m (0 Ft) to 2500 m (8202 Ft)	-60 m (-197 Ft) to 10000 m (32810 Ft)
Air cleanness	Clean office environment <sup>1</sup>	n.a.

- For fixed installs it is advised to keep margins from the environmental requirements of the projector.
- On installs where the environment is outside the projector environmental requirements a climate case must be used.
- Dust filters must be monitored and replaced on time.



Let the projector acclimatize after unpacking. Neglecting this may result in a startup failure of the Light Processor.

### Keep projector air inlets and outlet free

The projector has 1 air inlet channel and 1 air outlet. The air outlet is located at the front side of the projector. The air inlet is located at the back side of the projector.

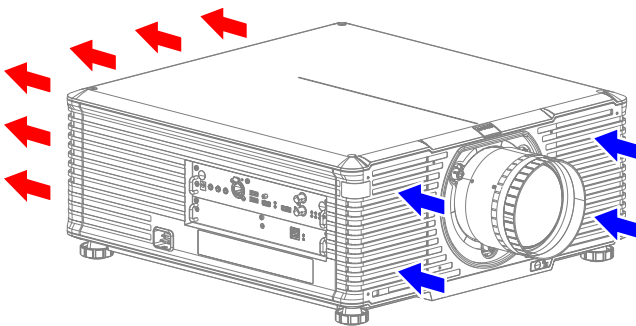


Image 3-1



**WARNING:** Keep the air inlets and outlet at all times free.

### Cooling requirements

The projector is fan cooled and must be installed with sufficient space around the projector front, minimum 10 cm (4 inch) to ensure sufficient air flow. It should be used in an area where the ambient temperature, as measured at the projector air inlets, does not exceed 40°C (104°F).

Make sure to not install the backside of the projector near walls or other solid objects. Make sure there is a minimum distance of 40 cm (15.7 inch) between the air outlet on the backside and the nearest solid object. If mounted too close to a solid object, the hot air from the air outlets may find its way back into the air inlets of the projector, which will rapidly increase the temperature inside the projector.

1. Equivalent with cleanroom standard ISO 14644-1 ISO Class 9.



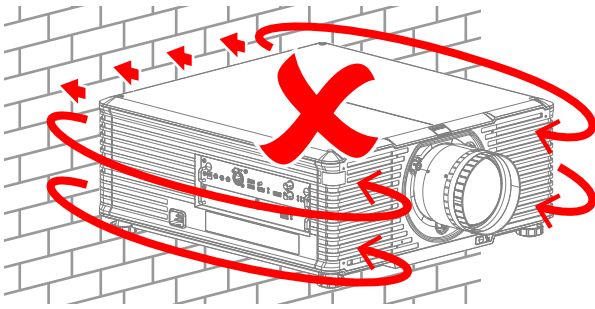


Image 3-2

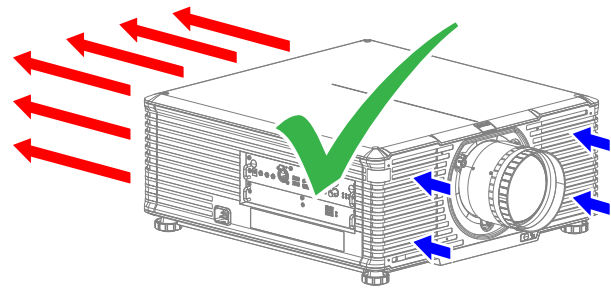


Image 3-3



Since the projector is foreseen to be stacked while in the rigging frame, the minimum distance space around the top and bottom air inlets should be the distance between two stacked projectors while in the rigging frame.

## Clean air environment

The projector must always be mounted in a manner which ensures the free flow of clean air into the projectors ventilation inlets.

Do not operate the projector in environments with excessive dust. The projector must be installed in environments where the amount of dust particles is as low as expected in a standard office environment.

The environment must be clean and free from hostile airborne particles which may have harmful effects, such as – and not limited to - airborne contaminants produced by smoke or snow machines, contaminants derived from chemical products such as (and not limited to) disinfectants, conducting types of dust, excessive dust. These contaminants deposit a thin layer of greasy residue on the projectors internal optics and electronic boards, degrading performance and leading to failures.

Failure to take suitable precautions to protect the projector from the effects of air contaminants as mentioned above will culminate in extensive and irreversible damage. If the specified environmental conditions cannot be guaranteed, the projector must be removed, or switched off and fully protected until the requirements are fulfilled. Devices or structures to extract or shield contaminated air well away from the projector are a prerequisite, if this is not a feasible solution then the projector must be relocated to a clean air environment.

Contact Barco in case uncertainty exist on the environmental conditions prior to install and operate the projector.

Only ever use the manufacturer's recommended cleaning kit which has been specifically designed for cleaning optical parts, never use industrial strength cleaners on the projector's optics as these will degrade optical coatings and damage sensitive optoelectronics components. Failure to take suitable precautions to protect the projector from the effects of persistent and prolonged air contaminants will culminate in extensive and irreversible ingrained optical damage. At this stage cleaning of the internal optical units will be noneffective and impracticable. Damage of this nature is under no circumstances covered under the manufacturer's warranty and may deem the warranty null and void. In such a case the client shall be held solely responsible for all costs incurred during any repair. It is the clients responsibility to ensure at all times that the projector is protected from the harmful effects of hostile airborne particles in the environment of the projector. The manufacturer reserves the right to refuse repair if a projector has been subject to knowingly neglect, abandon or improper use.

## Main Power requirements

The projector operates from a nominal mono phase power net with a separate earth ground PE.

Power requirements : 100V-240V (+/-10%), 15A-6A, 50-60Hz

The power cord required to connect the projector with the power net is delivered with the projector.

## Projector Weight

Do not underestimate the weight of the projector. The projector weights about 23.7 kg (52.3 lb) without lens. Be sure that the pedestal on which the projector has to be installed is capable of handling five (5) times the complete load of the system.

## 3.2 Unpacking the projector

### What has to be done

The projector is delivered in a cardboard box. Furthermore, to provide protection during transportation, the projector is surrounded with polymeric foam. Once the projector has arrived at the installation site, it needs to be removed from the box in a safe manner, without damaging the projector.

### Required tools

Cutter knife

### How to unpack

1. Open the cardboard box.
2. Remove the small box with accessories (manuals, remote control, etc. ) placed on side of the projector.
3. Lift the projector and surrounding foam out of the cardboard box.

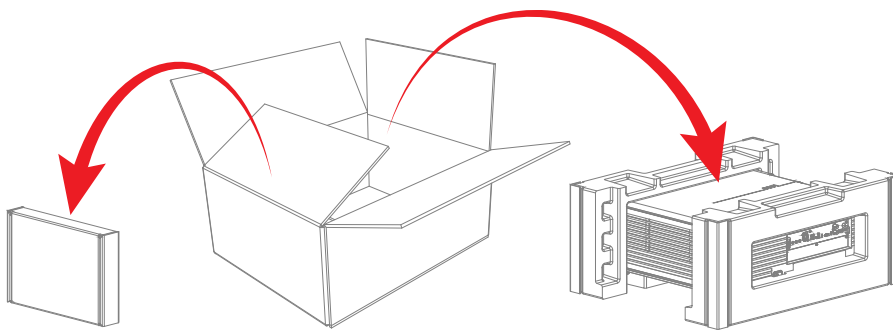


Image 3-4

4. Remove the surrounding foam from the projector.

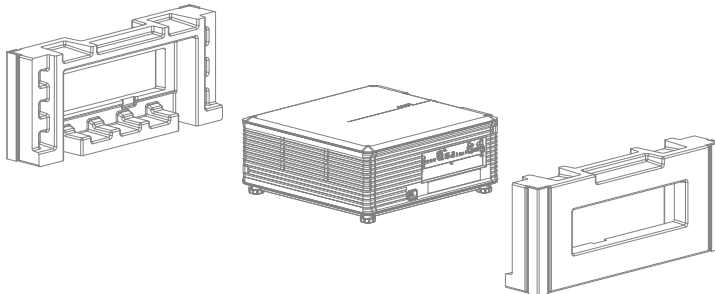


Image 3-5

5. Place the projector on solid and stable surface, then remove the protected plastic bag.



Save the original shipping cardboard box and packing material. They will be necessary if you ever have to ship your projector. For maximum protection, repack your projector as it was originally packed at the factory.



A plastic lens holder cover is placed into the lens opening of the projector. It's recommended to reuse this cover each time you transport the projector. This to prevent intrusion of dust and foreign particles.



The lens is delivered in a separate box.

## 3.3 Initial inspection

### General

Before shipment, the projector was inspected and found to be free of mechanical and electrical defects. As soon as the projector is unpacked, inspect for any damage that may have occurred in transit. Save all packing material until the inspection is completed. If damage is found, file claim with carrier immediately. The Barco Sales and Service office should be notified as soon as possible.

### Box content

After unpacking the projector it is recommended to check if all following items were included:

- One power cord of 2.5 m (3G1, 16A, 250VAC)
- One quick-start guide
- One safety manual
- One web site reference sheet
- One remote control unit (RCU)

### Mechanical check

This check should confirm that there are no broken knobs or connectors, that the cabinet and panel surfaces are free of dents and scratches, and that the operating panel is not scratched or cracked. The Barco Sales and Service office should be notified as soon as possible if this is not the case.

## 3.4 Projector orientations

### Supported projector orientations

The projector can be installed on a table or upside down on the ceiling and this in a front projection or rear projection configuration. Depending on the physical configuration of the projector the projected image has to be rotated and/or mirrored as well. The projected image can be adapted via the menu *Installation > Orientation*. Possible orientations are:

1. Front / Table (F/T)
2. Front / Ceiling (F/C)
3. Rear / Table (R/T)
4. Rear / Ceiling (R/C)

### Front projection

The projector is installed, either in a table mount or ceiling mount configuration, at the same side of the screen as the audience.

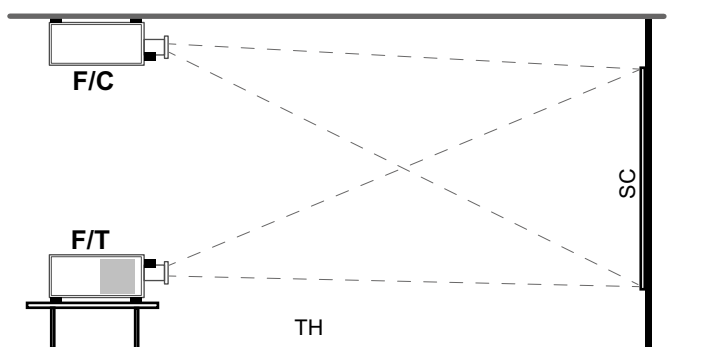


Image 3-6

- FC** Front/Ceiling projection
- FT** Front/Table projection
- SC** Screen
- TH** Theater (Audience area)

## Rear projection

The projector is installed, either in a table mount or ceiling mount configuration, at the other side of the screen opposite the audience.

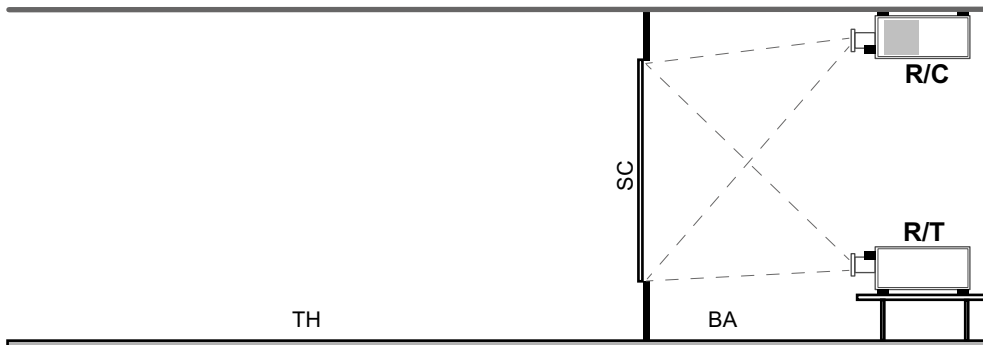


Image 3-7

**RC** Rear/Ceiling projection  
**RT** Rear /Table projection  
**SC** Screen

**BA** Backstage area  
**TH** Theater (Audience area)



Some lenses (e.g. UST lenses) may require that the projector orientation needs to be adapted for the desired outcome.

## 3.5 Projector positioning

### Positioning the projector

The projector should be installed at right angles (horizontally and vertically) to the screen at a distance PD. Note the distance (A) between lens centre and table surface is slightly variable. This distance (A) is nominal 132 mm in case all feet are turned in completely and the vertical lens shift is set to zero (0).

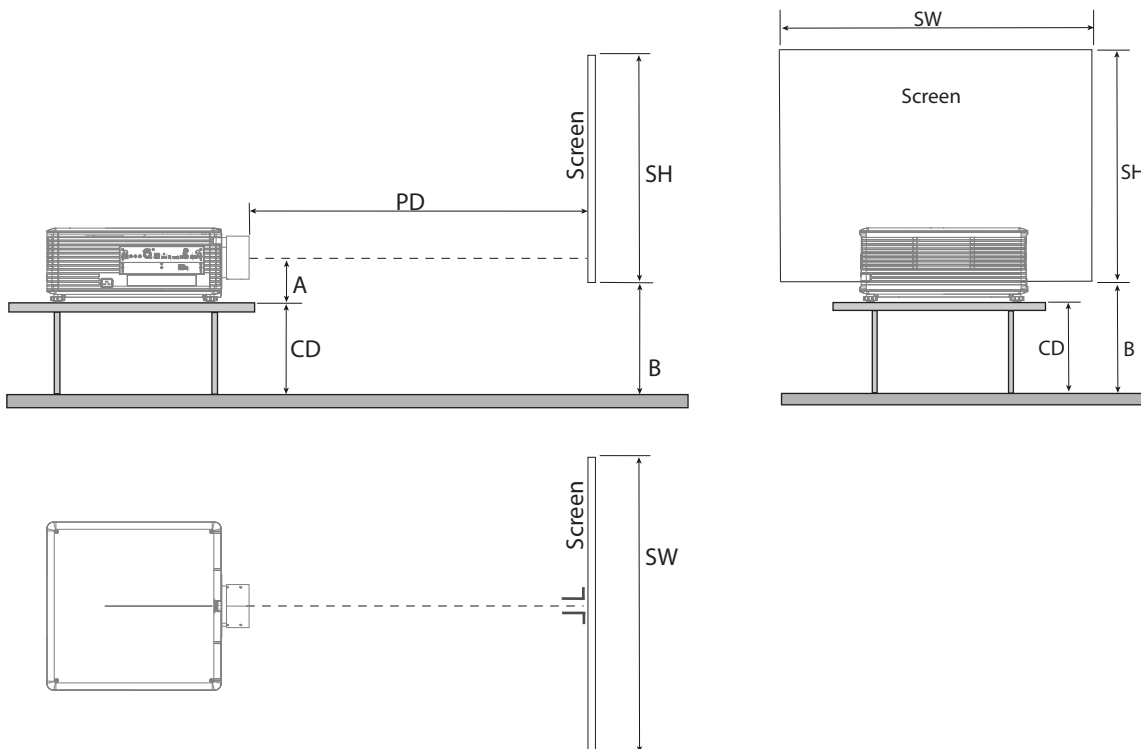


Image 3-8

## On axis / off axis projection

The position of the projector with reference to the screen may also be different depending on the installation. Basically the projector can be positioned in On-Axis or Off-Axis configuration. On-Axis configuration means that the projector is positioned so as to have the centre of the lens coinciding with the centre of the screen. Off-Axis projection is obtained by shifting the lens up, down, left or right. Several parameters can be calculated determining the position in any installation.

Formula to calculate the distance CD for On-Axis projection:  $CD = SH/2 + B - A$

## 3.6 Projector shift range

### Horizontal and vertical shift range

The lens can be shifted with respect to the DMD (P) which result in a shifted image on the screen (Off-Axis). A 100% shift means that the centre point of the projected image is shifted by half the screen size. In other words, the centre point of the projected image falls together with the outline of the image in an On-Axis projection. Due to mechanical and optical limitations it's recommended to keep the shift values within the field of view (F) as illustrated below. Within these shift ranges the projector and lens perform excellently. Configuring the projector outside these shift ranges will result in a slight decline of image quality.

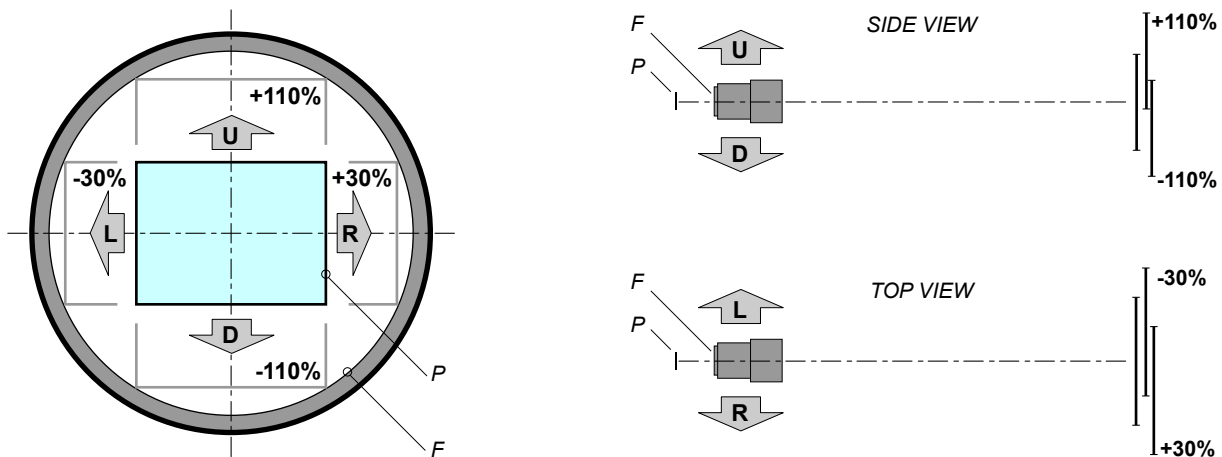


Image 3-9 Vertical and horizontal shift range.

- P** DMD.
- F** Field of view.
- U** Up (Table view)
- D** Down (Table view)
- L** Left (Table view)
- R** Right (Table view)



It is mechanical possible to shift outside the recommended field of view, but it will result in a decline of image quality depending on the used lens and the zoom position of the used lens. Furthermore, shifting too much in both directions will result in a blurred image corner.



Best image quality is projected in the On-Axis configuration.

## 3.7 Projector tilt range

### Horizontal and vertical tilt range

The projector can be rotated and mounted at any angle.

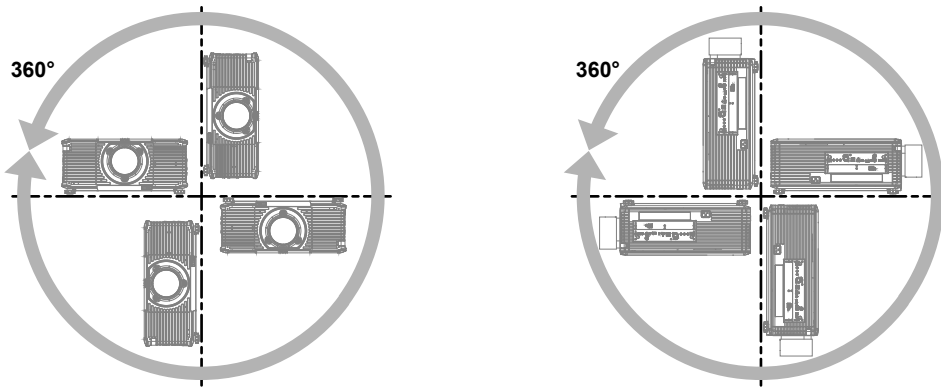


Image 3–10

## 3.8 Lens selection

### How to select the right lens

1. Determine the required screen width (SW).
2. Determine the approximate position of the projector in the room.
3. Start up the *Lens Calculator* on the Barco website: <https://lenscalculator.barco.com/> to determine the possible lenses for your configuration.

The Lens Calculator window opens.

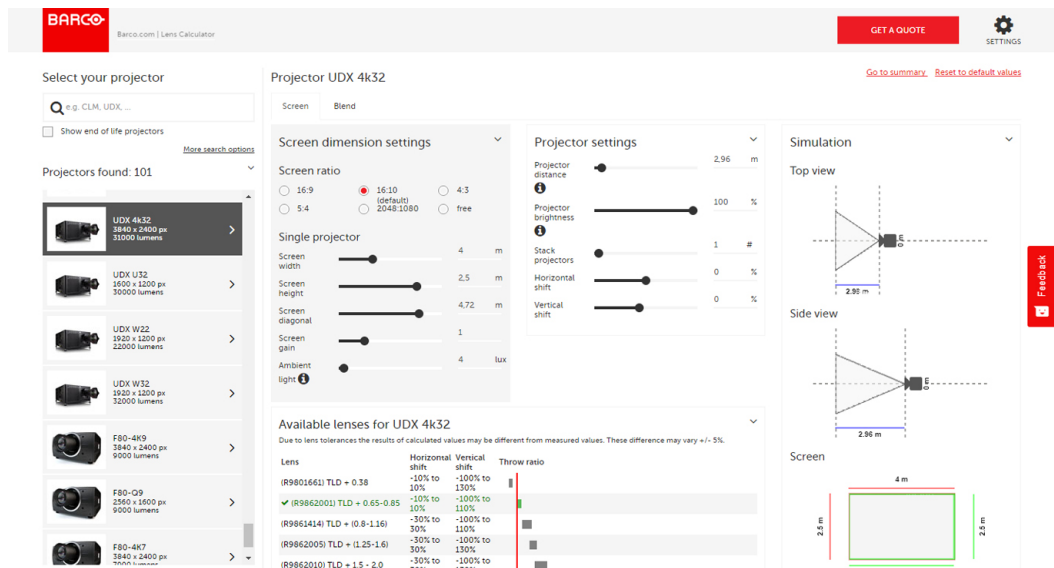


Image 3–11 Lens calculator



The Lens Calculator can also be used to determine the position of the projector when the lens type and screen width is known.











Due to lens tolerances the results of calculated values may be different from measured values. These difference may vary +/- 5%.

## 3.9 Available lenses



Use the online *Lens Calculator* tool to determine the possible lenses for your configuration. See “Lens selection”, page 30.

## ILD lenses

Order No	Name (Screening) / Comments	Image	Resolution	Throw Range
R9803077	ILD lens 0.37 : 1 (requires lens support)		4K UHD 0.8"	(0.37 : 1)
R9803076	ILD lens 0.5 : 1 (requires lens support)		4K UHD 0.8"	(0.5 : 1)
R9803072	ILD lens 0.65 - 0.8 : 1		4K UHD 0.8"	(0.65 - 0.8 : 1)
R9803071	ILD lens 0.8 - 1.0 : 1		4K UHD 0.8"	(0.8 - 1.0 : 1)
R9803070	ILD lens 1.0 - 1.4 : 1		4K UHD 0.8"	(1.0 - 1.4 : 1)
R9803061	ILD lens 1.4 - 2.1 : 1		4K UHD 0.8"	(1.4 - 2.1 : 1)
R9803075	ILD lens 2.1 - 4.0 : 1		4K UHD 0.8"	(2.1 - 4.0 : 1)
R9803073	ILD lens 4.0 - 7.4 : 1		4K UHD 0.8"	(4.0 - 7.4 : 1)



This table only takes into account active lenses at the moment of release of this manual. Lenses that have become end-of life or end-of service are not taken into account. Consult the Barco website for the most up-to-date information on active lenses.



**WARNING:** In case the projector is installed above the head of people, then the projection lens must be secured with a lens safety cable. See chapter [“Lens safety cable installation”](#), page 35.



For lenses that requires a lens support, see See [“UST lens”](#), page 45.





# Installation procedures

# 4

4.1	Lens installation.....	34
4.2	Lens safety cable installation .....	35
4.3	Basic remote batteries .....	35
4.4	Installing an input board .....	36
4.5	Connecting the projector with the power net.....	38
4.6	Power On the projector .....	38
4.7	Alignment of a table mounted projector.....	39
4.8	Software update .....	39
4.9	Power Off the projector .....	41
4.10	Lens removal .....	42

## About this chapter

This chapter describes all basic procedures for the physical installation of the projector.

## 4.1 Lens installation

### Prerequisites

Some ILD Ultra Short Throw (UST) lenses require a lens support. See chapter “Available lenses”, page 30, to know if the lens support is required for the lens. The lens support must be (partially) installed before installing the projection lens. See chapter “UST lens”, page 45.

### How to install

1. Verify if the projector is switched off or that the projector shutter is activated (shutter is activated when the shutter icon on the projector keypad is red).
2. Make sure to remove all protective caps present on the lens and lens holder.
3. Gently insert the lens in the lens holder while aligning the **short red line** on the lens body with the red line on the projector top cover (reference 1).

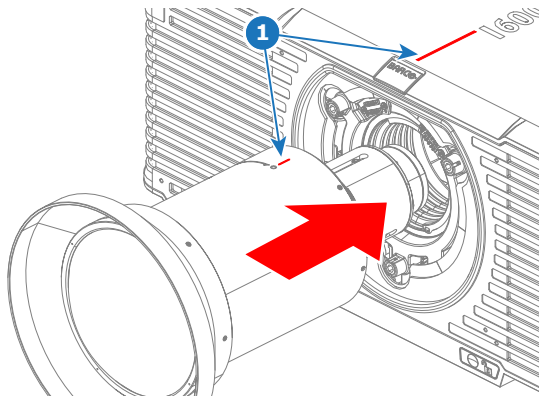


Image 4-1

4. Once the lens is completely inserted, rotate the lens body clockwise until the **long red line** on the lens body is aligned with the red line on the projector top cover.

A click indicates that the lens mount mechanism is locked.

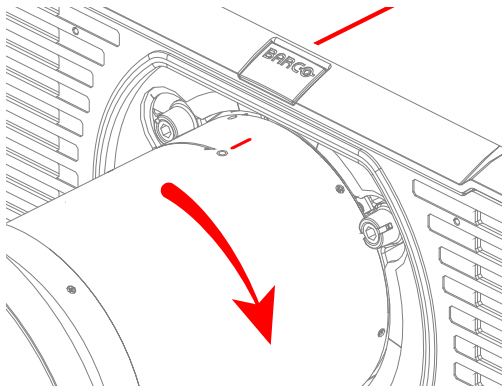


Image 4-2

5. Check if the lens is securely locked by trying to rotate the lens body counter clockwise. This should not be possible!

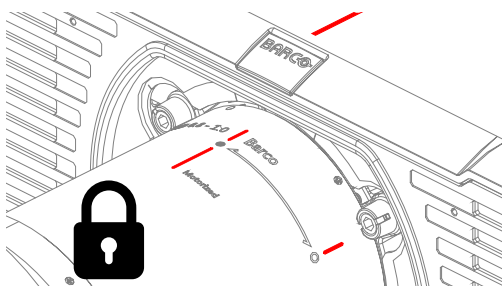


Image 4-3



**WARNING:** In case the projector is installed above the head of people, then the projection lens must be secured with a lens safety cable. See chapter “[Lens safety cable installation](#)”, page 35.

## 4.2 Lens safety cable installation

### When to use the lens safety cable

The projection lens must be secured with a safety cable in any circumstance where the projector is mounted above people.



For ordering information see Barco website: <https://www.barco.com>

### How to install

1. Check if the safety cable and its accessories are in good condition (not damaged).
2. Put the safety cable around the lens body and guide one cable end through the loop (reference 1 [Image 4-4](#)) of the other end to create a lasso.
3. Apply some cable clips (reference 2 [Image 4-4](#)) on the lens body to keep the safety cable in position.
4. Pull the lasso tight around the lens body and fixate this position with the cable clamp (reference 3 [Image 4-4](#)).



**Warning:** Ensure that the loop cable and the cable going through the loop are clamped together.

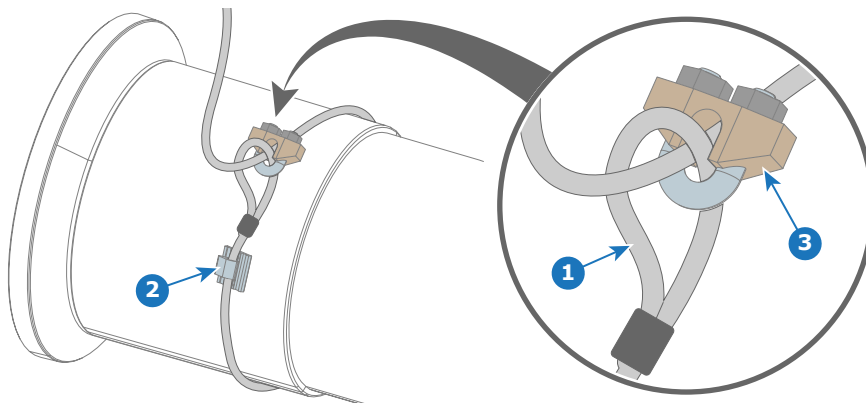


Image 4-4

5. Attach the other end of the safety cable with the projector body, rigging frame, truss installation, or ceiling.



**Note:** The safety cable is mounted as backup so that the drop distance is as small as possible. Keep the possible drop distance of the lens as short as possible!

## 4.3 Basic remote batteries

### Battery placement & replacement

The basic remote control is powered by two (2) standard AAA batteries. The needed batteries are not included in the packaging.

The battery compartment is on the back side of the basic remote control. The following image illustrates how to open the battery compartment.

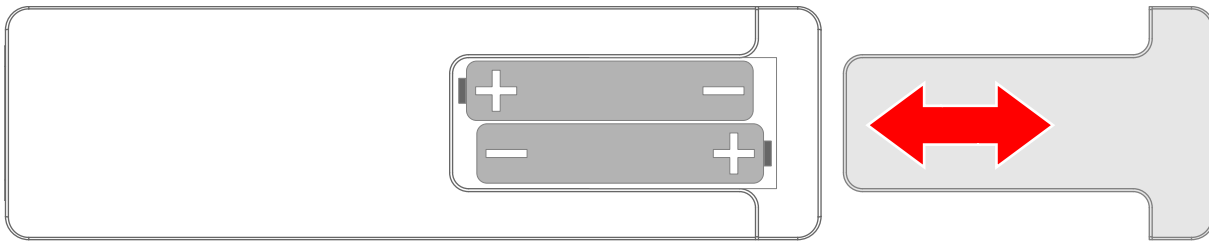


Image 4-5 Position of batteries in basic remote.



**CAUTION:** Replace batteries with the correct battery type. Only use AAA size batteries. There is a risk of explosion if the battery is replaced with an incorrect type.

Make sure the polarities match the + and - marks, as depicted on the inside of the battery compartment. There is a risk of explosion if the batteries are installed incorrectly.

## 4.4 Installing an input board



**CAUTION:** Always wear a wrist band which is connected to the ground while handling the electrostatic discharge (ESD) sensitive parts.



This procedure assumes that no optional input board is installed and that the optional input slot is sealed with a dummy cover plate. However, the same procedure is applicable in case an input board of any type is installed and need to be replaced.

### Required tools

Torx screwdriver T10

### How to install

1. Switch off the projector and unplug the power cord of the projector. See procedure “Power Off the projector”, page 41.
2. Loosen the 3 captive screws (reference 1) of the dummy cover plate of the optional input slot. Use a Torx screwdriver T10.

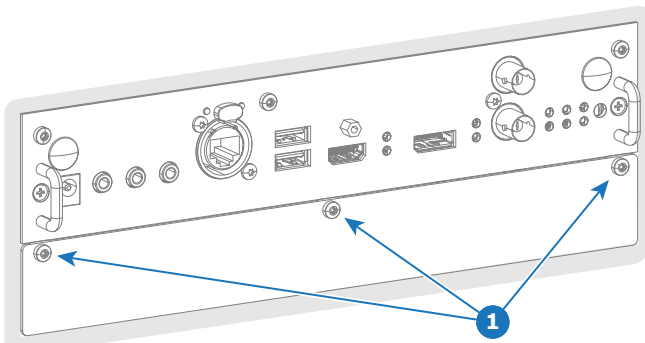


Image 4-6

3. Remove the dummy cover plate from the input slot.

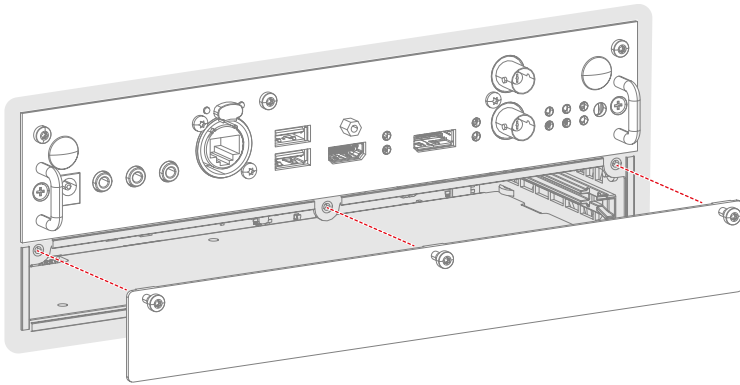


Image 4-7

4. Slide the input board in the input slot. Make sure the board seats in its sliders and is completely inserted in the slot.

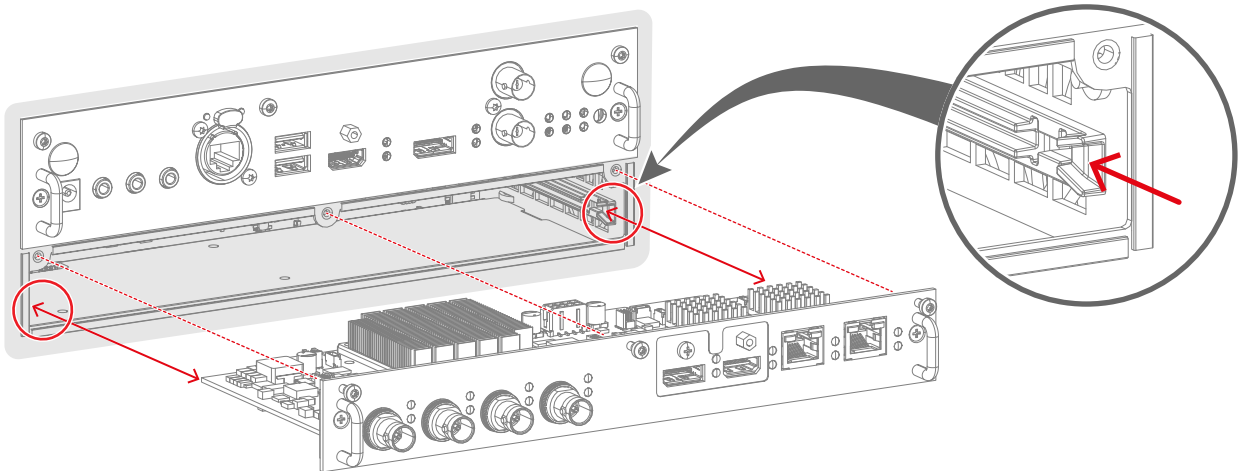


Image 4-8 The “Pulse Quad Combo Input” is used in this illustration.

5. Tighten the 3 captive screws (reference 2) of the input board.

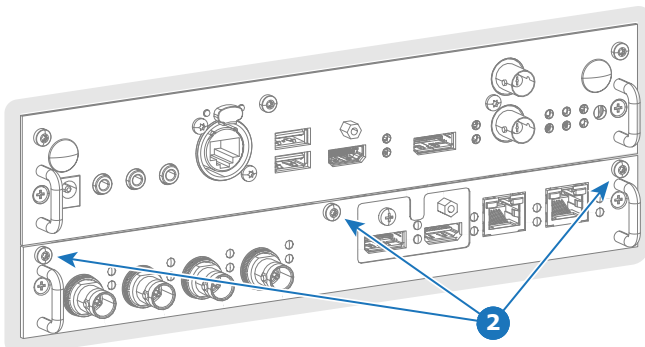


Image 4-9

6. Plug in the power cord of the projector and switch the projector on. See procedure “[Power On the projector](#)”, page 38.
7. Update the firmware of the installed input board. See procedure “[Software update](#)”, page 39.



*Tip:* Use the complete software package to install the firmware via Pulse Prospector or USB stick. When a complete new software image is placed on the projector, all programmable components will be updated with the latest version.



**CAUTION:** Always install the dummy cover plate in case the optional input slot is not used.

## 4.5 Connecting the projector with the power net



**CAUTION:** Use only the power cord provided with the projector.



**WARNING:** Do not attempt operation if the AC supply and cord are not within the specified voltage and power range.

### Prerequisites

Before connecting the projector with the main power net, check if the main power net meets the specification as described in the chapter “[Installation requirements](#)”, page 24.

### How to connect with local power net

1. Connect the female side of the power cord with the power input socket of the projector.

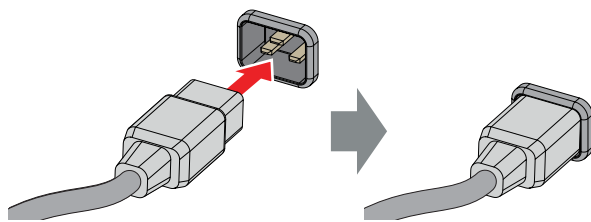


Image 4–10



**CAUTION:** Once the projector is switched from ready or on mode to standby mode, the cooling fans will continue to run for approximately 30 seconds to ensure that the projector and light source have sufficiently cooled, at which point the fans will automatically decrease to standby. To avoid thermal stress that can lead to premature light source failure, never unplug the power cord while the cooling fans are running. Never unplug the power cord to power down the projector, first switch off the power switch and then unplug the power cord.

## 4.6 Power On the projector

### How to power on the projector

1. Ensure that the mains input of the projector is connected with the power net.

The projector starts up to **READY** mode as soon as the projector is connected with power net. The **Power on/off** button will blink until **Ready** mode is achieved. Once in **Ready** mode, the **Power on/off** button will be lit **WHITE**. The start up screen is displayed on the touch panel. Once the startup is completed, the status screen will be displayed.



Image 4–11

2. Press the **Power on/off** button on the projector, or the **Power On** button on the remote control.

The projector will continue to **ON** mode. The **Power on/off** button will blink until the projector is ready for projection. Once the projector is fully started up, the **Power on/off** button will be lit **BLUE**.



Image 4–12

## 4.7 Alignment of a table mounted projector

### How to align

1. Place the projector in the desired location. Take into account the zoom range of the used lens and the size of the screen.
2. Project one of the internal hatch patterns on the screen.
3. Turn the adjustable feet in or out until the projected hatch pattern has a perfect rectangle shape and is leveled.

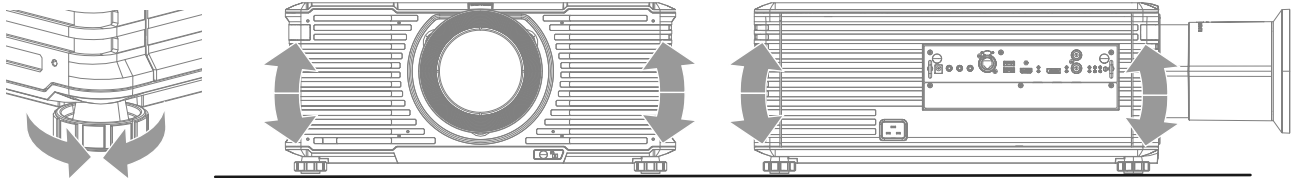


Image 4-13

When this is achieved, the projector is set horizontal and vertical at right angles to the screen.

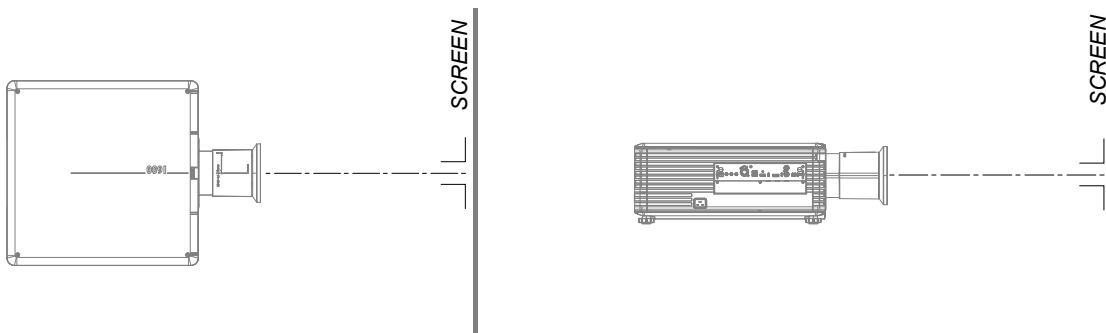


Image 4-14

## 4.8 Software update



**CAUTION:** Do not power off or unplug the projector while the software update is ongoing. Similarly, do not remove the USB flash drive while the software update is ongoing.

### Prerequisites

First download the latest projector software package from the Barco's website.

### Required tools

USB flash drive

### How to update the software using Pulse Prospector

1. Ensure the projector is in Ready mode.
2. Connect to Pulse Prospector of the projector.
3. Log in as Power user or higher
4. Select *Service > Firmware > Update* in the sidebar.
5. Drag and drop the projector update file in to the dotted area in the *Firmware Update* pane.

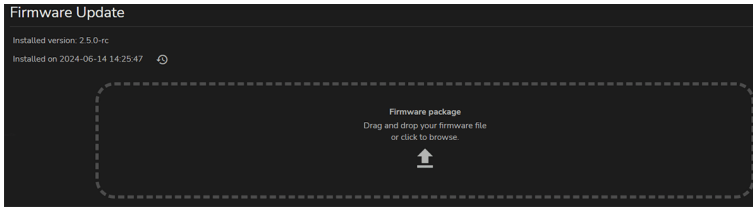




Image 4–15

-  **Note:** Do NOT turn off, power down, or remove mains power supply while the upgrade is in progress.
-  **Note:** During the firmware update, the projector will restart at some point in the process.

The firmware update process will start, and continue until finished.



For more info on the Pulse Prospector, see the Pulse Prospector user guide.

## How to update the software if the projector isn't connected to the network

1. Take a clean USB flash drive and create the following folder structure:

```
/Barco/Firmware
```



**Note:** Make sure the flash drive is compatible either with FAT32 or NTFS<sup>2</sup>.

2. Place the correct projector update file (format .fw) in the Firmware folder.
3. Ensure the projector is in Ready mode.
4. Log in with the credentials of Power user or higher.
5. Plug the flash drive in the USB port on the Communication Panel.

A window will be prompted with the available software update packages.

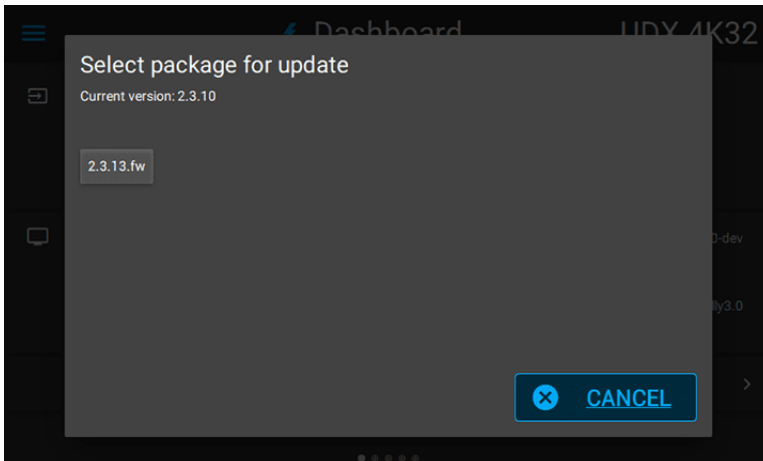


Image 4–16 Example of software packages available on the flash drive.

6. Select the desired package and confirm.  
A software update dialog will be prompted, requesting confirmation.

2. NTFS is only supported from Pulse 2.5 and later.



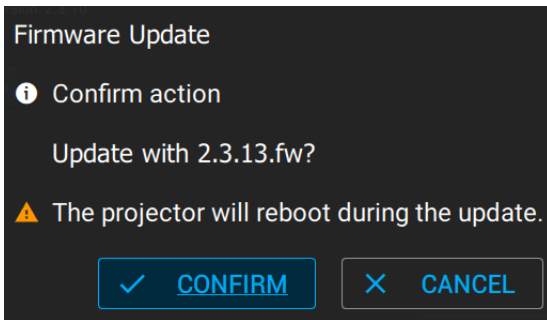



Image 4–17 Example of a Software update dialog prompt

7. Select *Confirm* to start the software update process.

 **Note:** Once initiated, the update procedure can take up to 20 minutes to complete. During this process the projector will reboot at least once. The LCD display will show the current status of the update during the update process.

8. Once the LCD display shows that the update process has been completed, it is safe to remove the USB flash drive.




**CAUTION:** While it is technically possible to “downgrade” the software to an older version using this method, it is **NOT** recommended and should be avoided as much as possible. Certain features will no longer be supported, projectors can display unwanted behavior during the downgrade and in some rare cases, this may even bring damage to the device. Always contact Barco if you want to make sure a downgrade will not hurt your device.

## 4.9 Power Off the projector


### How to power off the projector

1. While the projector is in **ON** mode, press and hold the **Standby** button on the local keypad, or the **Power Off** button on the remote control, to shut down the light source of the projector.

 **Note:** If the **auto lights source off** feature is enabled in the service menu (see Pulse user guide) the projector will automatically go to **READY** mode after a time-out (default 15 minutes).

The projector will switch from **ON** to **READY** mode first in order to run through a cool down phase.

2. While the projector is in **READY** mode, press and hold the **Standby** button on the local keypad, or the **Power Off** button on the remote control, to bring the projector from the **READY** mode in the **STANDBY** mode.

 **Note:** If the **auto standby** feature is enabled in the service menu (see Pulse user guide) the projector will automatically go to **STANDBY** mode after a time-out (default 15 minutes).

3. While the projector is in **STANDBY** mode, press and hold the **Standby** button on the local keypad, or the **Power Off** button on the remote control, to bring the projector from the **STANDBY** mode in the **ECO STANDBY** mode.

 **Note:** If the **auto standby** feature is enabled in the service menu (see Pulse user guide) the projector will automatically go to **ECO STANDBY** mode after a time-out (default 15 minutes).



Some actions like apply a grey test pattern are done during the two minutes of the cool down phase in order to minimize the potential effect of burn-in and increase the projector lifetime.



**CAUTION:** Never switch off the projector by means of unplugging mains cord or by cut down of mains power.



Barco advises to keep the projector always powered and use the **ECO STANDBY** mode for low power consumption.

## How to unplug the projector

1. Follow the previous power off procedure to switch off the projector.
2. Wait at least two minutes.



**Caution:** It is very important to wait few minutes before unplugging the power cord. If the cool down phase is not adhered, projector lifetime could be degraded.

3. Remove the power cord from the AC outlet.

## 4.10 Lens removal

### Prerequisites

Some lenses are installed with a lens support. The lens support must be detached from the lens body before removing the lens from the projector. See chapter “UST lens”, page 45.

### How to remove the lens

1. Verify if the projector is switched off or that the projector shutter is activated (shutter is activated when the shutter icon on the projector keypad is red).
2. Support the lens with one hand.
3. Push the lens unlock button with the other hand while rotating the lens a few degrees counter clock wise.

The lens unlock button is located bottom right of the lens holder.

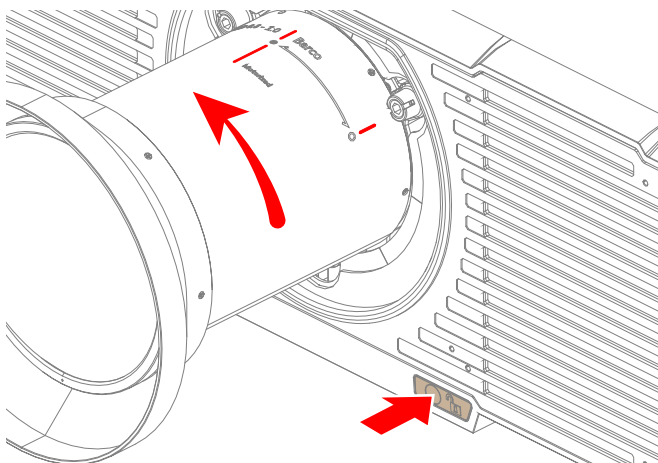


Image 4–18

4. Hold the lens with both hands and rotate it further counter clockwise until the **short red line** on the lens body is aligned with the red line on the projector top cover (reference 1).

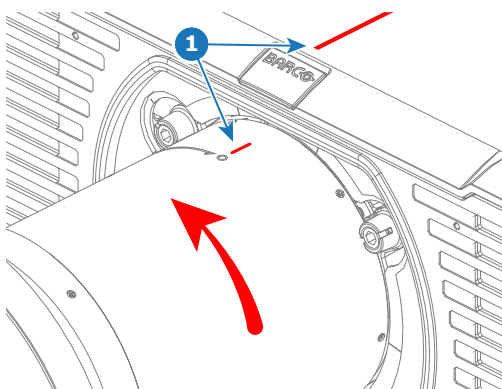


Image 4–19

5. Pull the lens straight out of the lens holder.

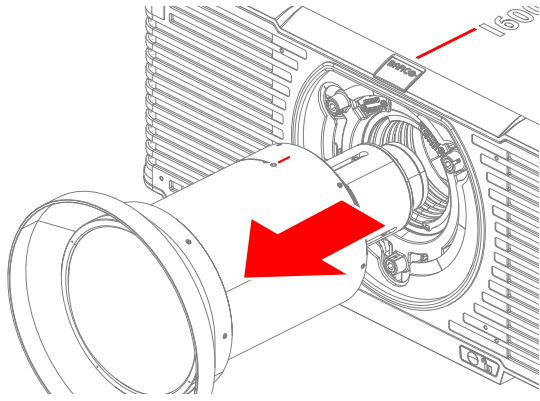


Image 4-20

6. Mount protective caps on the lens and lens holder.



# UST lens

# 5

5.1	Installing the UST lens support .....	46
5.2	Configure the UST 90° lens .....	48

## 5.1 Installing the UST lens support

### Prerequisites

The ILD lens 0.37 UST has a 90° projection angle. Ensure that the lens is configured (left, right, top or bottom) as desired before installing the lens. For lens configuring instructions see chapter [“Configure the UST 90° lens”, page 48](#)

### Required tools

- Allen wrench 6 mm
- Allen wrench 3 mm

### Required parts


UST lens support kit for I600

### How to install

1. Turn the projector upside down.

 *Note:* Use a clean blanket to prevent scratches on the projector top cover.

2. Install the bottom plate of the lens support on the bottom side of the projector. Use 4 bolts M8 x 20 bolts (reference 1).

 *Note:* The M8 fixation points for ceiling mount are used.

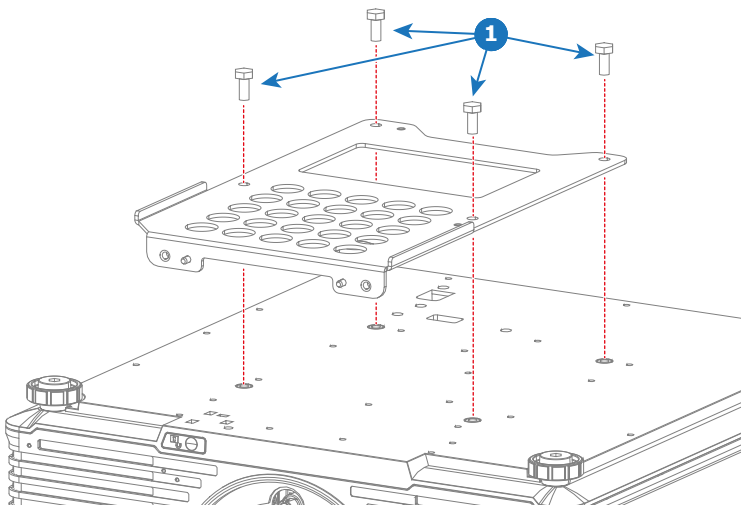


Image 5-1

3. Place the projector back on its feet.
4. Install the 3 bottom brackets of the lens support. Do not tighten the screws (reference 12 and 13) of the bottom brackets 2 and 3. Provide each screw with a plain washer.

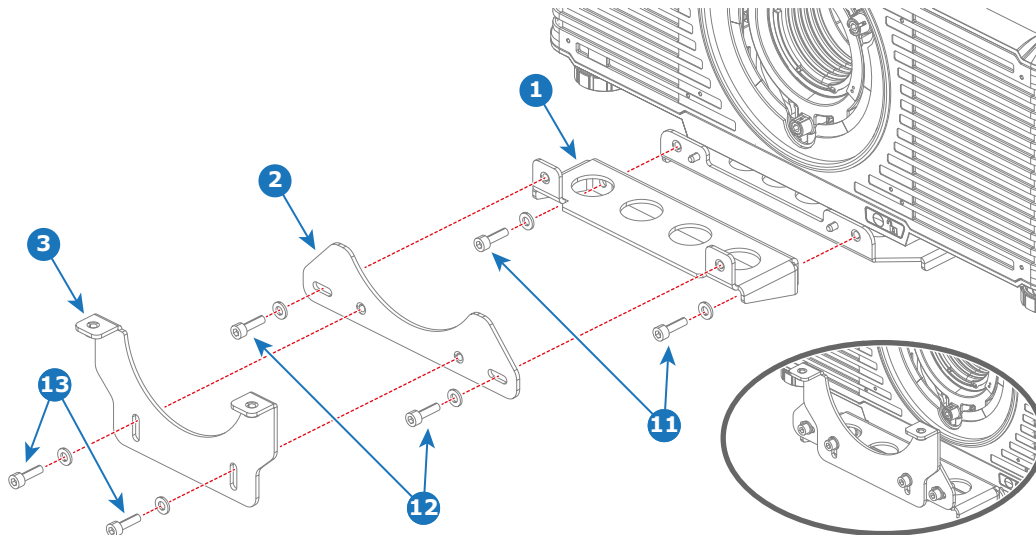


Image 5-2

5. Install the UST lens. For detail lens installation instructions see chapter “[Lens installation](#)”, page 34.

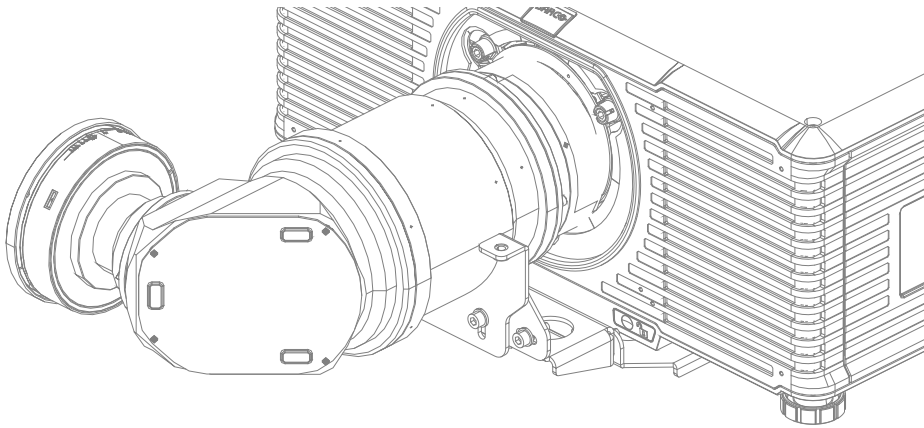


Image 5-3

6. Place the projector in its final location, project an image and adjust the horizontal and vertical shift if needed.
7. Disable the vertical and horizontal lens shift of the projector. Use the Pulse OSD or Prospector to disable lens shift.
- For more info on how to disable lens shift, see the Pulse OSD or Pulse Prospector user guides.
8. Slide the two bottom brackets (reference 2 and 3) towards the lens body and firmly tighten the four screws (reference 12 and 13).

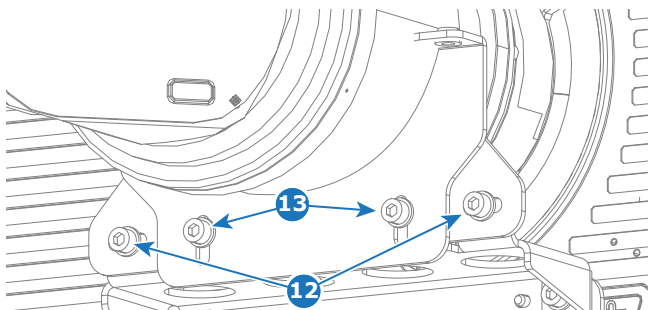


Image 5-4

9. Install the top bracket (reference 4) of the lens support. Fasten with two screws and plain washers (reference 14)

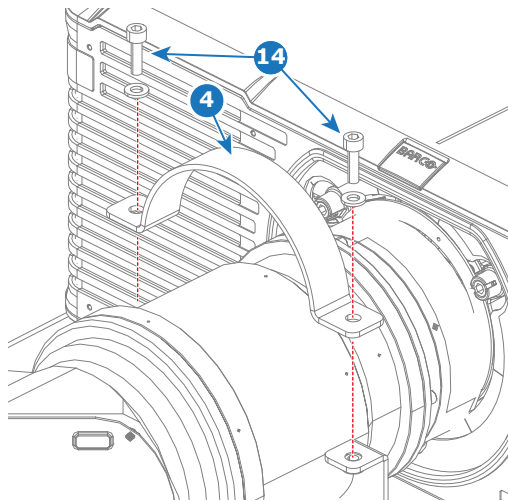


Image 5-5

## 5.2 Configure the UST 90° lens

### Possible configurations

The lens body can be rotated per 90° relative to the lens flange containing the electrical socket towards the lens holder. However, the most common configuration is probably with the lens output oriented to the left seen from the rear side of the projector in table mount.

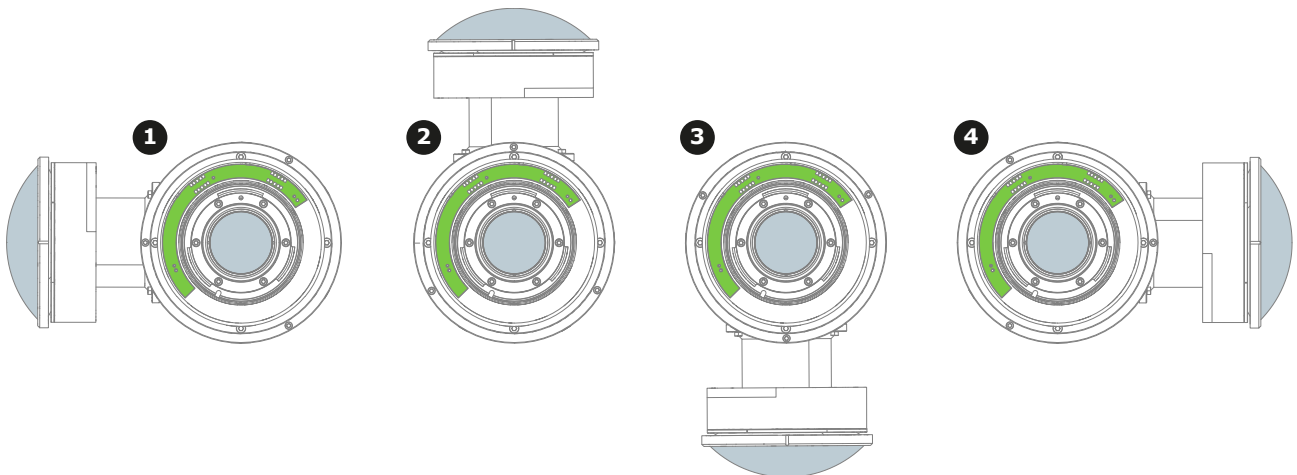


Image 5-6 UST 90° lens configurations.


- 1 Left (default)
- 2 Up
- 3 Down
- 4 Right

### Required tools

Allen wrench 3 mm

### How to configure

1. Remove the lens flange (reference 2 [Image 5-7](#)) from the lens body (reference 1 [Image 5-7](#)). Use a 3 mm Allen wrench to release the 4 bolts (reference 3 [Image 5-7](#)).
2. Carefully place the lens flange back on the lens body in the desired orientation (up, left, down or right).

 **Note:** Make sure the gears fit together.



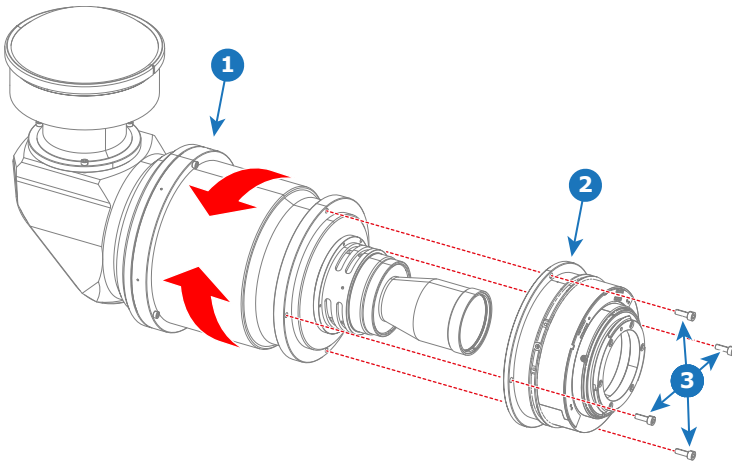


Image 5-7

3. Fasten the lens flange with 4 bolts.



# Scheimpflug (Boresight)

# 6

6.1	Scheimpflug introduction .....	52
6.2	Scheimpflug adjustment.....	53

## 6.1 Scheimpflug introduction

### What is Scheimpflug?

The lens holder has to be adjusted so that the "sharp focus plane" of the projected image falls together with the plane of the screen (Fp1→Fp2). This is achieved by changing the distance between the DMD plane and the lens plane (Lp1→Lp2). The closer the lens plane comes to the DMD plane the further the sharp focus plane will be. It can occur that you won't be able to get a complete focused image on the screen due to a tilt (or swing) of the lens plane with respect to the DMD plane. This is also known as Scheimpflug's law. To solve this the lens plane must be placed parallel with the DMD plane. This can be achieved by turning the lens holder to remove the tilt (or swing) between lens plane and DMD plane (Lp3→Lp4).

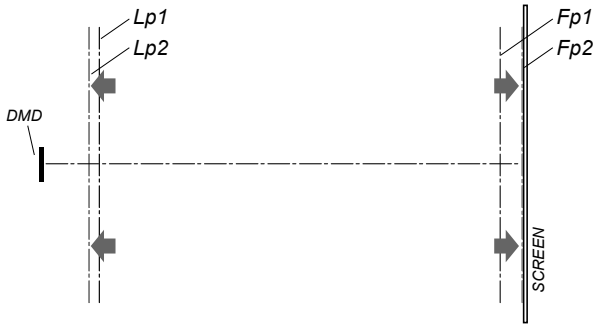


Image 6-1

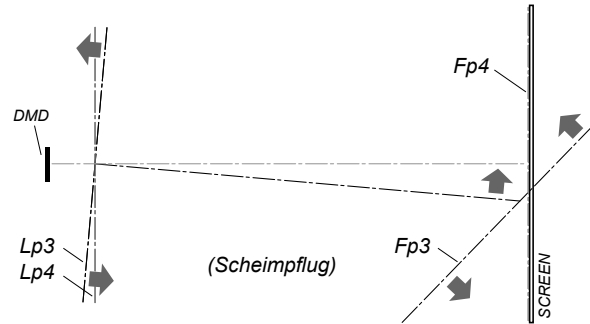


Image 6-2



#### Scheimpflug principle

The "plane of sharp focus" can be changed so that any plane can be brought into sharp focus. When the DMD plane and lens plane are parallel, the plane of sharp focus will also be parallel to these two planes. If, however, the lens plane is tilted with respect to the DMD plane, the plane of sharp focus will also be tilted according to geometrical and optical properties. The DMD plane, the principal lens plane and the sharp focus plane will intersect in a line below the projector for downward lens tilt.

### Scheimpflug adjustment points

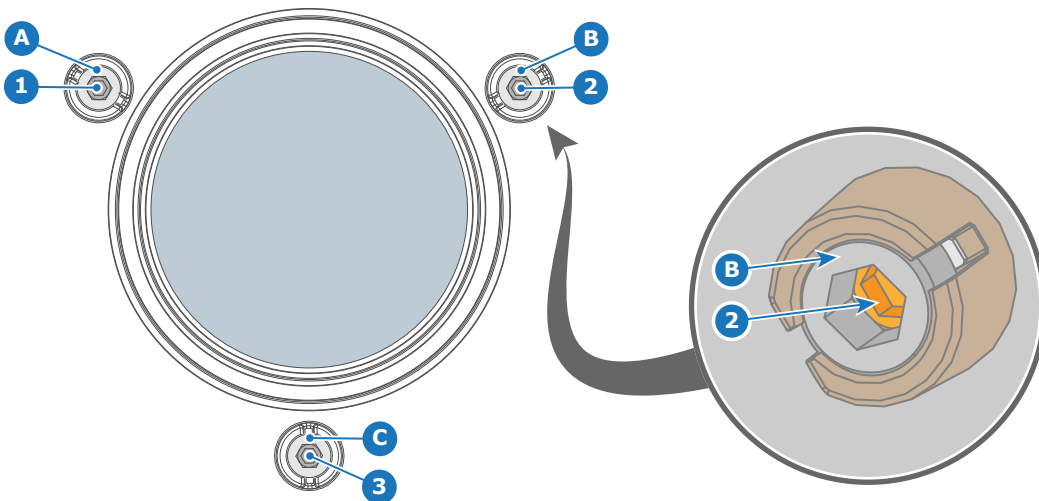


Image 6-3 Scheimpflug adjustments points on Lens holder - Projector front view. (Shape of the lens may vary with the model)

- 1 Scheimpflug adjustment screw
- 2 Scheimpflug adjustment screw
- 3 Scheimpflug adjustment screw

- A Scheimpflug lock nut
- B Scheimpflug lock nut
- C Scheimpflug lock nut

### When to apply Scheimpflug?

Only apply a Scheimpflug correction in case the overall focus of the projected image is not equally sharp (can be caused if the projector is **NOT in parallel** with the screen or a previous misaligned Scheimpflug). Take into account that the consequence of applying Scheimpflug correction upon a screen not in parallel with the

projector is that the projected image differs from the rectangle shaped image. In other words “**distortion**” of the projected image occurs. **Masking** will be required to solve the distortion.

The disadvantage of Masking is loss of content. Therefore it is strongly **recommended** to place the projector **in parallel** with the projection screen and use the **SHIFT** functionality of the lens holder older to match the projected image with the projection screen. In case the SHIFT range is not sufficient then the projector can be tilted and Scheimpflug can be applied.

## 6.2 Scheimpflug adjustment

### Required tools

- Allen wrench 5 mm
- Allen wrench 4 mm
- Torque wrench with hex socket of 5 mm

### Preparation steps

1. Verify that the throw ratio of the installed lens matches the requirements of the installation area (projection distance and screen size).
2. Check that the lens is correctly installed, and lens shift is in centre position.
3. Project the internal **Focus-Green** test pattern.
4. Zoom the lens to its widest opening (maximum image size on the screen).
5. Loosen the 3 Scheimpflug lock nuts a few turns (reference A, B and C).

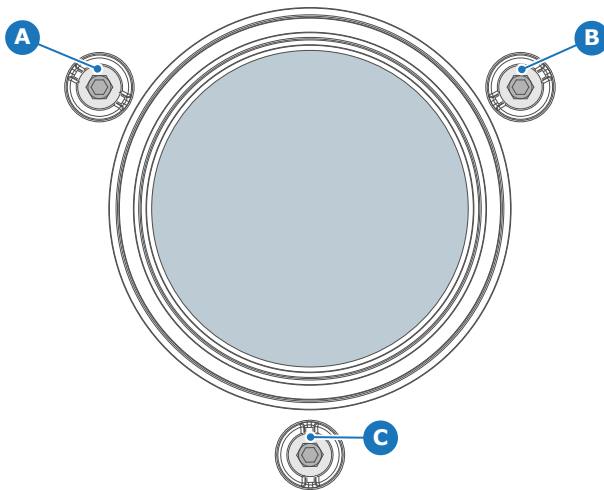


Image 6-4

6. Optimize the focus of the projected image in the center of the screen (F) using the motorized focus control (Local keypad or remote control).

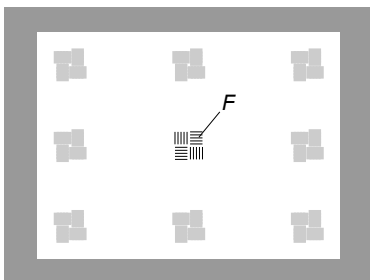


Image 6-5

## Scheimpflug adjustment steps

1. Sharpen the image at the bottom right corner of the screen by turning the upper left Scheimpflug adjustment screw either clockwise or counterclockwise (reference 1) Use a 4 mm Allen wrench.

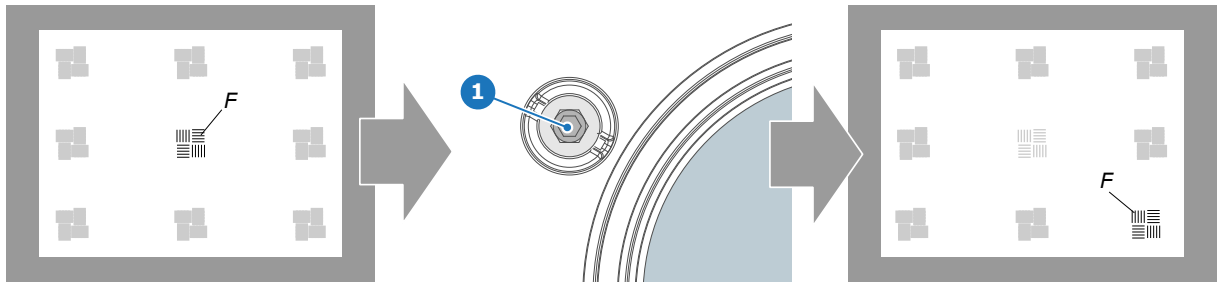


Image 6-6

As a result of this action, the focus in the center will fade a bit. This is expected behavior.

2. Sharpen the image at the lower left corner of the screen by turning the upper right Scheimpflug adjustment screw (reference 2).

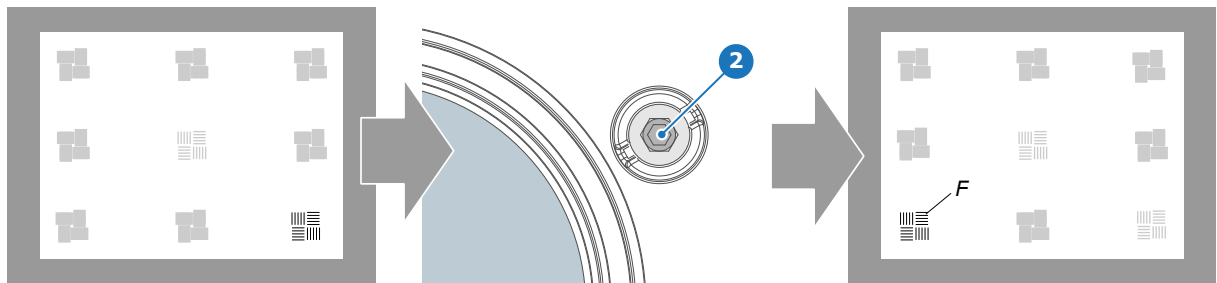


Image 6-7

3. Sharpen the image at the top center of the screen by turning the lower Scheimpflug adjustment screw (reference 3).

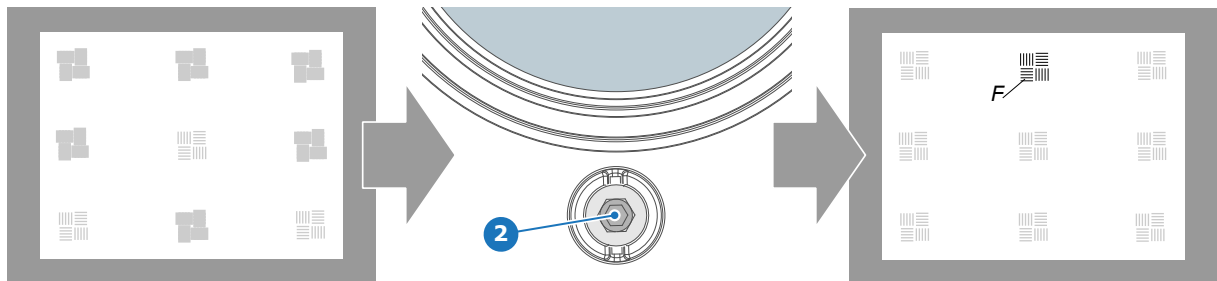


Image 6-8

4. Optimize the focus of the projected image in the center of the screen (F) using the motorized focus control (Local keypad or remote control).
5. Repeat from step 1 until the projected focus pattern is as sharp as possible in the center, left, right, top and bottom of the screen.
6. Fasten all 3 Scheimpflug lock nuts (reference A, B and C Image 6-4). Use a torque wrench with a torque of 6 Nm.

# Flight case and rigging frame

# 7

7.1	Flight case .....	56
7.2	Rigging frame.....	56

## About flight case and rigging frame

The projector can also be delivered with rigging frame installed inside a flight case.



The I600 flight case and I600 rigging frame are not yet available for the market. See Barco website for availability.

## 7.1 Flight case

### About the flight case

The flight case is designed to transport the I600 in a safe and secure manner. There's also sufficient space in the flight case to place the projector while mounted in its rigging frame. The four caster wheels, provided with breaks, and the four handles make the flight case easy to handle. The floor of the flight case wagon is equipped with two small covered compartments to store the remote control and the rigging clamps.

The dimensions of the flight case are optimal for maximum utilization of the floor area of a truck. The cover of the flight case has four stacking dishes, which allows to stack the flight cases.



Image 7-1



**WARNING:** Maximum stack 2 flight cases high. Never higher.

## 7.2 Rigging frame

### About the rigging frame

The rigging frame is designed for the Barco I600 projectors, and can not be used for other equipment. See rigging frame specific documentation for how to install the projector in to the frame. Projector and rigging frame are normally delivered complete assembled together if ordered.





Image 7-2



# Dust filter

# 8

8.1	Installing the dust filter .....	60
-----	----------------------------------	----

## 8.1 Installing the dust filter

### Required tools

Torx screwdriver T10

### How to install

1. Place the dust filter foam (Image 8–1 reference 2) in the dust filter holder (Image 8–1 reference 1).
2. Position the dust filter assembly (foam + holder) on the front cover of the projector.

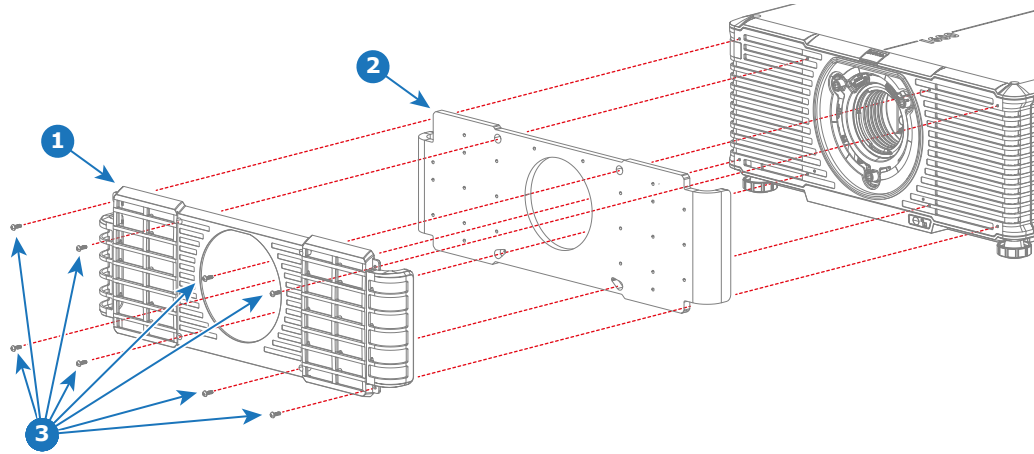


Image 8–1

3. Fasten the dust filter assembly with 8 screws (Image 8–1 reference 3). Use a Torx screwdriver T10.

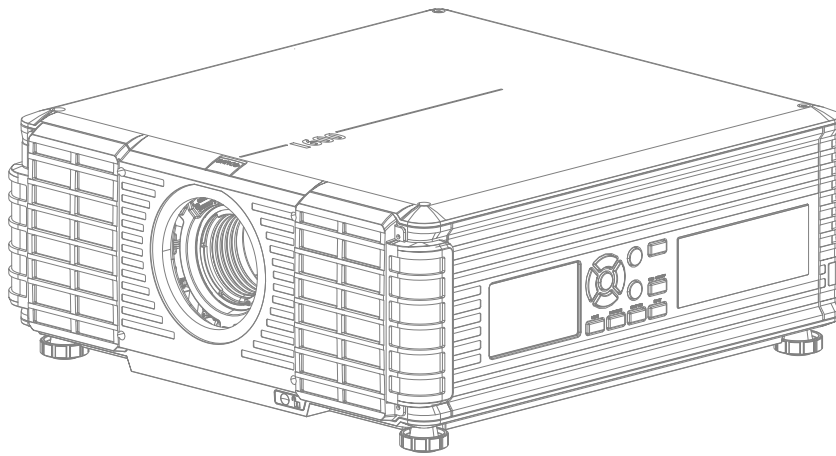


Image 8–2 Dust filter installed.

# Pulse SFP input use cases

# 9

9.1	Use case 1: SFP+ transceiver + Fiber connection (integrated or separated) .....	62
9.2	Use case 2: Neutrik OpticalCon Duo + SFP+ transceiver + internal fiber .....	62
9.3	Use case 3: Neutrik OpticalCon Quad + SFP+ transceiver + internal fiber .....	63
9.4	Use case 4: Loop-through mode .....	64

## About this chapter

This chapter describes the several use cases of the SFP input. Each use case requires a different configuration of the SFP input. The SFP input needs to be configured before it is inserted in its slot of the Input & Communication module.

## 9.1 Use case 1: SFP+ transceiver + Fiber connection (integrated or separated)

### SFP+ transceiver + Fiber connection (integrated or separated)

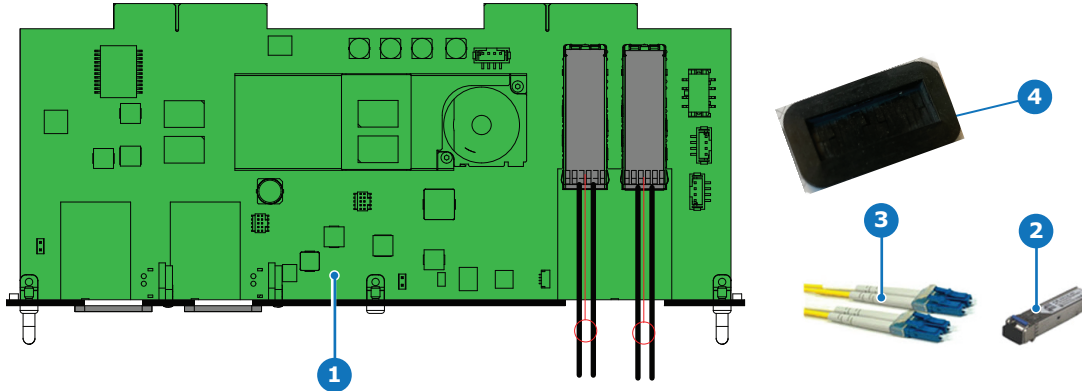


Image 9-1

- 1 SFP input board
- 2 SFP+ fiber transceiver
- 3 Fiber optic cable
- 4 Dustproof Gasket



Barco delivers only the SFP input and SFP+ fiber transceivers. The customer has to buy the SFP+ transceiver and the optional breakout adapter or the fiber integrated cable.

### How to configure the SFP input

1. Remove the plate covering the access to the SFP cages.
2. Insert the SFP+ transceivers
3. Connect the breakout adapter.
4. Install the SFP input in its slot of the Input & Communication module. See procedure “Installing an input board”, page 36.
5. Insert the dust proof gasket in the opening where the covering plate was removedd

## 9.2 Use case 2: Neutrik OpticalCon Duo + SFP+ transceiver + internal fiber

### Neutrik OpticalCon Duo + SFP+ transceiver + internal fiber

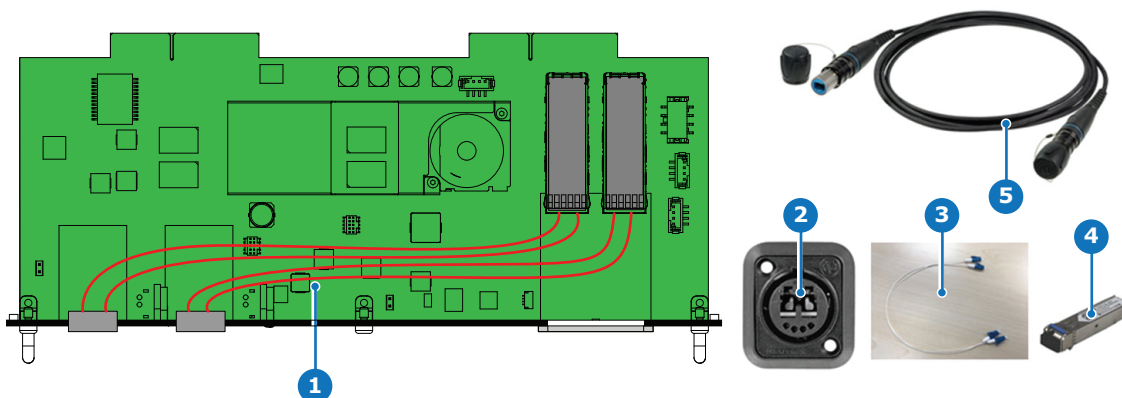


Image 9-2

- |   |                        |   |                        |
|---|------------------------|---|------------------------|
| 1 | SFP input board        | 4 | SFP+ fiber transceiver |
| 2 | Neutrik OpticalCon DUO | 5 | Cable                  |
| 3 | Internal fiber cable   |   |                        |



Barco delivers only the SFP input and SFP+ fiber transceivers. The customer has to buy the SFP+ transceiver and the optional breakout adapter or the fiber integrated cable.

### How to configure the SFP input

1. Remove both plates covering the access to the Neutrik connector locations.
2. Mount the Neutrik OpticalCon Duo connectors.
3. Remove the plate covering the access to the SFP cage and insert the SFP+ transceivers.
4. Re-install the cover plate.
5. Mount the optical internal cables between the Neutrik connectors and the SFP+ transceivers.
6. Install the SFP input in its slot of the Input & Communication module. See procedure “[Installing an input board](#)”, page 36.

## 9.3 Use case 3: Neutrik OpticalCon Quad + SFP+ transceiver + internal fiber

### Neutrik OpticalCon Quad + SFP+ transceiver + internal fiber

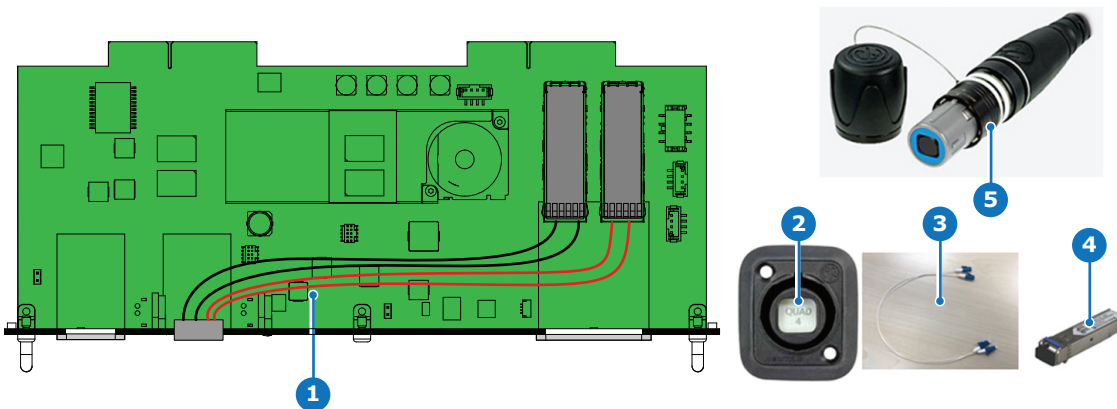


Image 9–3

- |   |                         |   |                        |
|---|-------------------------|---|------------------------|
| 1 | SFP input board         | 4 | SFP+ fiber transceiver |
| 2 | Neutrik OpticalCon Quad | 5 | Advanced quad cable    |
| 3 | Internal fiber cable    |   |                        |



Barco delivers only the SFP input and SFP+ fiber transceivers. The customer has to buy the SFP+ transceiver and the optional breakout adapter or the fiber integrated cable.

### How to configure the SFP input

1. Remove one plate covering the access to a Neutrik connector location.
2. Mount the Neutrik OpticalCon Quad connector.
3. Remove the plate covering the access to the SFP cage and insert the SFP+ transceivers.
4. Re-install the cover plate.
5. Mount the optical internal cables between the Neutrik connector and the SFP+ transceivers.
6. Install the SFP input in its slot of the Input & Communication module. See procedure “[Installing an input board](#)”, page 36.

## 9.4 Use case 4: Loop-through mode

### Loop-through mode

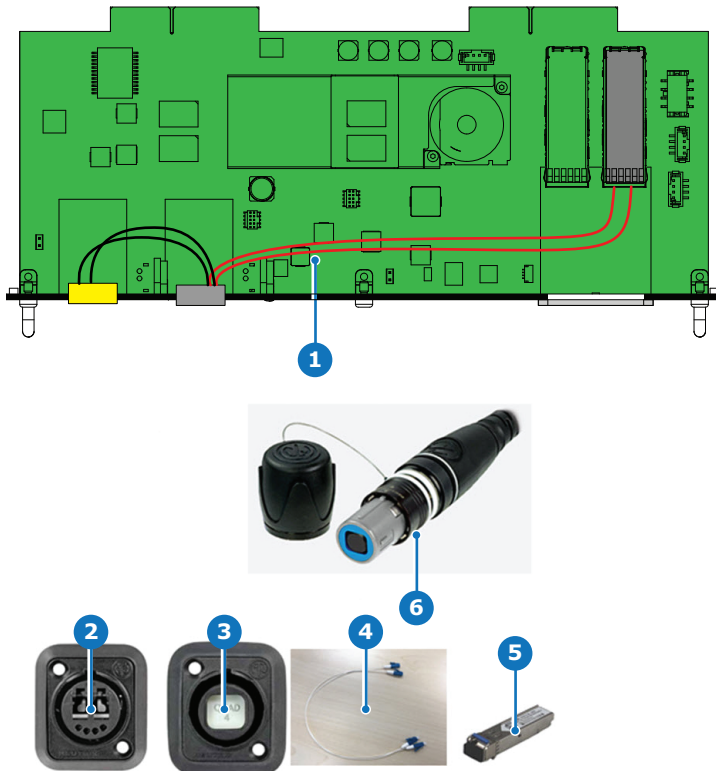


Image 9-4

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>1 SFP input board</li> <li>2 Neutrik OpticalCon Duo</li> <li>3 Neutrik OpticalCon Quad</li> </ul> | <ul style="list-style-type: none"> <li>4 Internal fiber cable</li> <li>5 SFP+ fiber transceiver</li> <li>6 Advanced Quad cable</li> </ul> |
|--|---|



Barco delivers only the SFP input and SFP+ fiber transceivers. The customer has to buy the SFP+ transceiver and the optional breakout adapter or the fiber integrated cable.

### How to configure the SFP input

1. Remove both plates covering the access to a Neutrik connector locations.
2. Mount the Neutrik OpticalCon Quad connector and the Neutrik OpticalCon Duo.
3. Remove the plate covering the access to the SFP cage and insert the SFP+ transceivers.
4. Re-install the cover plate.
5. Mount the fiber internal cables between the Neutrik OpticalCon Quad and the SFP+ transceivers.
6. Mount the fiber internal cables between the Neutrik OpticalCon Quad and the Neutrik OpticalCon Duo.
7. Install the SFP input in its slot of the Input & Communication module. See procedure [“Installing an input board”](#), page 36.



# Regulatory

# A

A.1 Trademark notice.....66

## A.1 Trademark notice

### HDMI™

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

### DisplayPort™

DisplayPort™, the DisplayPort™ logo and DisplayPortHDR™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries.

### USB Type-C™

USB Type-C and USB-C are a registered trademarks of USB Implementers Forum

### DLP™

DLP® and the DLP logo are registered trademarks of Texas Instruments.



All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

# Glossary

## **HD**

Hazard Distance (HD) is the distance measured from the projection lens at which the intensity or the energy per surface unit becomes lower than the applicable exposure limit on the eye or on the skin. The light beam is considered (to be) unsafe for exposure if the distance from a person to the light source is less than the HD.

## **Light Processor**

Heart of the projector, unit inside the projector which creates the image to be projected on the screen.

## **Scheimpflug principle**

The "plane of sharp focus" can be changed so that any plane can be brought into sharp focus. When the DMD plane and lens plane are parallel, the plane of sharp focus will also be parallel to these two planes. If, however, the lens plane is tilted with respect to the DMD plane, the plane of sharp focus will also be tilted according to geometrical and optical properties. The DMD plane, the principal lens plane and the sharp focus plane will intersect in a line below the projector for downward lens tilt.



# List of tools

Allen wrench 3 mm  
Allen wrench 4 mm  
Allen wrench 5 mm  
Allen wrench 6 mm  
Cutter knife  
Torque wrench with hex socket of 5 mm  
Torx screwdriver T10  
USB flash drive



# Index

## A

Adjust  
  Boresight 53  
  Scheimpflug 53  
Alignment 39

## B

Basic RCU  
  Batteries 35  
Boresight 51

## C

Compliance 18  
Configure  
  UST 90° 48  
Connect  
  Power 38  
Cooling requirements 24

## D

Download  
  Product manual 18  
Dust filter 59

## E

Enclosed projection 16  
Environment conditions 24

## F

Flight case 55–56

## G

General considerations 8

## H

Hazard Distance 14, 16  
  Modifying optics 17  
  Multi-projector 17  
  Projector stacks 17  
Hazardous Chemicals 13  
High Brightness precautions 14

## I

Info tri 18  
Initial inspection 27  
  Box content 27  
Instal  
  Safety cable 35  
Install  
  Dust filter 60  
  Input board 36  
  Lens 34  
  Lens support 46  
  Options 21  
  Prepare 23  
  Procedures 33  
  Requirements 24  
Installation process  
  Physical installation 20  
  Preparations 20  
Installation requirements  
  Clean air 25  
  Environment conditions 24

## L

Lens  
  Remove 42  
  Safety cable 35  
Lens selection 30  
Lens support 45  
Lenses  
  Available 30  
  Lens selection 30

## M

Mechanical check 27

## N

Notice

Optical radiation 8

Notice on safety 8

## O

Off axis 29

On axis 29

Options

Install 21

Orientations 27

## P

Positioning 28

Power Off 41

Power On 38

Process

Install 19

Projector

Off axis 28

On axis 28

Orientations 27

Positioning 28

Weight 25

## R

RCU batteries 35

Rear projection 16

Regulatory information 65

Rigging frame 55–56

## S

Safety 7

Battery explosion 11

Fire hazard 10

Hazard Distance 14, 16

Hazardous Chemicals 13

Personal injury 10

Projector damage 11

Safety Data Sheet (SDS) 13

Servicing 12

Stacking 12

Safety Data Sheet (SDS) 13

Safety instructions 9

Safety labels 13

Scheimpflug 51–52

Introduction 52

Scheimpflug's law 52

SFP

Configuratio 61–64

Use cases 61–64

Shift range 29

Software update 39

Software upgrade 39

Switching Off 41

Switching On 38

## T

Tilt range 29

Trademarks 66

## U

UK Compliance 18

Unpacking 26

Use cases

SFP input 61–64

User definition 9

## W

WEEE 18

Weight

Projector 25







R5917790 /01 | 2024-07-18

[www.barco.com](http://www.barco.com)