

I600



User guide

Barco NV

Beneluxpark 21, 8500 Kortrijk, Belgium

Registered office: Barco (Wuxi) Technology Co., Ltd.

No. 38, Chunhui Middle Road, XiShan District, 214101 Wuxi CHINA

注册办事处: 巴可(无锡)科技有限公司

中国无锡市锡山区春晖中路38号, 邮编214101

Copyright ©

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of Barco.

Changes

Barco provides this manual 'as is' without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

The latest edition of Barco manuals can be downloaded from the Barco web site www.barco.com.

Trademarks

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.

Guarantee and Compensation

Barco provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. On receipt, the purchaser must immediately inspect all delivered goods for damage incurred during transport, as well as for material and manufacturing faults Barco must be informed immediately in writing of any complaints.

The period of guarantee begins on the date of transfer of risks, in the case of special systems and software on the date of commissioning, at latest 30 days after the transfer of risks. In the event of justified notice of complaint, Barco can repair the fault or provide a replacement at its own discretion within an appropriate period. If this measure proves to be impossible or unsuccessful, the purchaser can demand a reduction in the purchase price or cancellation of the contract. All other claims, in particular those relating to compensation for direct or indirect damage, and also damage attributed to the operation of software as well as to other services provided by Barco, being a component of the system or independent service, will be deemed invalid provided the damage is not proven to be attributed to the absence of properties guaranteed in writing or due to the intent or gross negligence or part of Barco.

If the purchaser or a third party carries out modifications or repairs on goods delivered by Barco, or if the goods are handled incorrectly, in particular if the systems are operated incorrectly or if, after the transfer of risks, the goods are subject to influences not agreed upon in the contract, all guarantee claims of the purchaser will be rendered invalid. Not included in the guarantee coverage are system failures which are attributed to programs or special electronic circuitry provided by the purchaser, e.g. interfaces. Normal wear as well as normal maintenance are not subject to the guarantee provided by Barco either.

The environmental conditions as well as the servicing and maintenance regulations specified in this manual must be complied with by the customer.

Patent protection

Please refer to www.barco.com/about-barco/legal/patents.

Table of contents

1	Safety	9
1.1	General considerations	10
1.2	Important safety instructions	11
1.3	Product safety labels	15
1.4	High Brightness precautions: Hazard Distance	16
1.5	HD for fully enclosed projection systems	18
1.6	HD in function of modifying optics	19
1.7	HD calculation of multi-projector stacks	19
1.8	Compliance	20
1.9	Download Product Manual	20
2	I600 introduction	21
2.1	Projector orientation	22
2.2	Projector components	22
2.3	Projector airflow	22
2.4	Projector status	23
2.5	Pulse Prospector	24
3	Local keypad	25
3.1	Local keypad functions	26
3.2	Local keypad backlight	26
3.3	LCD touch panel	27
4	Basic Remote Control Unit	29
4.1	Basic remote functions	30
4.2	Basic remote batteries	30
5	Pulse Remote Control Unit	33
5.1	Pulse RCU functions	34
5.2	Pulse RCU battery installation	34
5.3	Pulse RCU on/off button	36
5.4	Pulse RCU “button pressed indicator”	36
5.5	Pulse RCU “RGB filter” button	36
5.6	Pulse RCU “Projector OSD on/off” button	37
5.7	Using the XLR connector of the RCU	37
5.8	Using the mini-jack connector of the RCU	37
5.9	Pulse RCU silicone protection sleeve (optional)	38

6	Powering On/Off	39
6.1	Power modes	40
6.2	Power On the projector	40
6.3	Power Off the projector	40
6.4	Power mode transitions	41
7	Inputs & Communication	43
7.1	Control & Communication module	44
7.2	Pulse Quad Combo input Mk II	45
7.3	Pulse Quad Combo input Mk III	46
7.4	Pulse Quad DP 1.2 input	47
7.5	Pulse SFP input	48
8	Projector maintenance	51
8.1	Software update	52
8.2	Cleaning the lens	53
8.3	Cleaning the exterior of the projector	54
A	Specifications	55
A.1	I600-4K8 specifications	56
A.2	I600-4K10 specifications	57
A.3	I600-4K15 specifications	59
A.4	Specifications SDI inputs	61
A.5	Specifications HDMI inputs	62
A.6	Specifications HDBaseT inputs	63
A.7	Specifications DisplayPort 1.2 inputs	64
A.8	Specifications SFP inputs	65
B	Dimensions	67
B.1	Projector outer dimensions	68
B.2	Mounting holes bottom plate	69
C	Video timing tables	71
C.1	Overview video timings	72
C.2	Overview video timings SDI Inputs	73
C.3	Overview video timings HDMI 2.0 inputs	74
C.4	Overview video timings DisplayPort 1.2 inputs	75
C.5	Overview video timings HDBaseT inputs	78
D	Regulatory	81
D.1	Contact information	82
D.2	Production information	82
D.3	Product compliance EU	82
D.4	Product compliance UK	83
D.5	Product compliance US	83
D.6	Product compliance Turkey	83
D.7	Product compliance EAC	84
D.8	Product compliance China	84
D.9	Product compliance Taiwan	85
D.10	Trademark notice	87
D.11	Product privacy statement	87
	Glossary	89
	Index	91

Safety

1

1.1	General considerations	10
1.2	Important safety instructions	11
1.3	Product safety labels.....	15
1.4	High Brightness precautions: Hazard Distance.....	16
1.5	HD for fully enclosed projection systems.....	18
1.6	HD in function of modifying optics	19
1.7	HD calculation of multi-projector stacks	19
1.8	Compliance.....	20
1.9	Download Product Manual	20

About this document

Read this document attentively. It contains important information to prevent personal injury while installing and using the I600 product. Furthermore, it includes several cautions to prevent damage to the unit. Ensure that all safety guidelines, safety instructions and warnings mentioned in this chapter are understood and followed before installing the I600 product.

Clarification of the term “I600” used in this document

When referring in this document to the term “I600” means that the content is applicable for following Barco products:

- I600-4K8, I600-4K10, I600-4K15

Model certification name

- I600-4K8 : GPI-A
- I600-4K10 : GPI-B
- I600-4K15 : GPI-C



Barco provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. Observing the specification mentioned in this chapter is critical for optimal performance. Neglecting this can result in loss of warranty.

1.1 General considerations



WARNING: Be aware of suspended loads.



WARNING: When suspending loads, wear a hard hat to reduce the risk of personal injury.



WARNING: Be careful while working with heavy loads.



WARNING: Mind your fingers while working with heavy loads.



WARNING: In case of emergency, disconnect the device from the mains power supply. In case the power input at the projector side is not accessible, a readily accessible general disconnect device shall be incorporated.

General safety instructions

- Before operating this equipment please read this manual thoroughly and retain it for future reference.
- All warnings on the unit and in its documentation manuals must be adhered to.
- Installation and preliminary adjustments must be performed by qualified Barco personnel or by authorized Barco service dealers.
- This product contains no user serviceable parts. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.
- All instructions for operating and use of this equipment must be followed precisely.
- All local installation codes must be adhered to.

Notice on safety

This equipment is built in accordance with the requirements of the applicable international safety standards. These safety standards impose important requirements on the use of safety critical components, materials and insulation, in order to protect the user or operator against risk of electric shock and energy hazard and having access to live parts. Safety standards also impose limits to the internal and external temperature rises, radiation levels, mechanical stability and strength, enclosure construction and protection against the risk of fire. Simulated single fault condition testing ensures the safety of the equipment to the user even when the equipment's normal operation fails.

Notice on optical radiation

This projector embeds a light source incorporating high brightness lasers. The laser light is processed through the projector's optical path. Native laser light is not accessible by the end user in any use case. The light exiting the projection lens has been diffused within the optical path, representing a larger source and lower brightness than native laser light. Nevertheless the projected light can represent a significant risk for the human eye and skin when exposed directly within the beam. This risk is not specifically related to the characteristics of laser light but solely to the high thermal induced energy of the light source, which is equivalent with lamp based systems. Thermal eye injury is possible when exposed within the Hazard Distance (HD). The HD is defined from the projection lens surface towards the position of the projected beam where the intensity equals the maximum permissible exposure as described in the chapter "Hazard Distance".

This projector is classified as a laser product under IEC 60825-1: 2014, EN 60825-1:2014+A11:2021. The projector, in particular the projection beam, is classified as a Risk Group (RG) under IEC EN 62471-5:2015.



WARNING: This projector has a built-in Class 4 laser module. Never attempt to disassemble or modify the laser module. Service only allowed by qualified service personnel.



WARNING: No direct exposure to the projection beam within the hazard distance shall be permitted for RG3 (Risk Group 3) IEC EN 62471-5:2015. Do not stare into the beam for RG2 (Risk Group 2) IEC EN 62471-5:2015.



CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Optical radiation safety precautions

This projector is classified as CLASS 1 LASER PRODUCT - RISK GROUP 3.

Users definition

These projectors are intended “FOR PROFESSIONAL USE ONLY”, this means installation can only be carried out by trained and authorized persons.

Throughout this manual, the terms SERVICE PERSONNEL, INSTALLER refers to persons having appropriate technical training and experience necessary to be knowledgeable of potential hazards to which they are exposed (including, but not limited to HIGH VOLTAGE ELECTRIC and ELECTRONIC CIRCUITRY, HIGH TEMPERATURES and HIGH BRIGHTNESS SOURCES) in performing a task, and of measures to minimize the potential risks to themselves or other persons.

The term USER or OPERATOR of RG2 projectors refers to any other person than SERVICE PERSONNEL or INSTALLER. The term USER or OPERATOR of RG3 projectors refers to any person trained and authorized to operate professional RG3 projectors. The USER or OPERATOR may only perform the maintenance tasks set forth in the user manual or the maintenance tasks for which they are trained and authorized. All other maintenance tasks and service tasks must be performed by qualified SERVICE PERSONNEL.

1.2 Important safety instructions

To prevent the risk of electrical shock

- This product should be operated from a mono phase AC power source. Ensure that the mains voltage and capacity match the projectors electrical ratings. If you are unable to install the AC requirements, contact your electrician. Do not defeat the purpose of grounding.
- This apparatus must be grounded (earthed) via the supplied 3 conductor AC power cable. If none of the supplied power cables are the correct one, consult your dealer.
- Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord. To disconnect the cord, pull it out by the plug. Never pull the cord itself.
- Do not operate the projector with a damaged cord. Replace the cord.
- Do not operate the projector if the projector has been dropped or damaged - until it has been examined and approved for operation by a qualified service technician.
- Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
- If an extension cord is necessary, a cord with a current rating at least equal to that of the projector should be used. A cord rated for less amperage than the projector may overheat.
- Do not expose this projector to rain or moisture.
- Do not immerse or expose this projector in water or other liquids.
- Do not spill liquid of any kind on this projector.
- Should any liquid or solid object fall into the cabinet, unplug the set and have it checked by qualified service personnel before resuming operations.
- Do not disassemble this projector, always take it to an authorized trained service person when service or repair work is required.
- Do not use an accessory attachment which is not recommended by the manufacturer.
- Lightning - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the device due to lightning and AC power-line surges.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
- If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.

- Ensure that the main power cord complies with the national regulations at the site where the equipment is used.
- Do not use unauthorized replacements.
- Make sure that no objects enter into the vents and openings of the set.
- The projector is designed for indoor use only. Never operate the unit outdoors.

To prevent personal injury

- To prevent injury and physical damage, always read this manual and all labels on the system before powering the projector or adjusting the projector.
- To prevent injury, take note of the weight of the projector. The projector weighs about 23.7 kg (52.3 lbs) without lens and rigging frame.
- To prevent injury, ensure that the lens and all covers are correctly installed. See installation procedures.
- Warning: high intensity light beam. NEVER look into the lens ! High luminance could result in damage to the eye.
- **Warning: extremely high brightness projector:** This projector embeds extremely high brightness (radiance) lasers; this laser light is processed through the projectors optical path. Native laser light is not accessible by the end user in any use case. The light exiting the projection lens has been diffused within the optical path, representing a larger source and lower radiance value than native laser light. Nevertheless the projected light represents a significant risk for the human eye when exposed directly within the beam. This risk is not specific related to the characteristics of laser light but solely to the high thermal induced energy of the light source; which is comparable with lamp based systems. Thermal retinal eye injury is possible when exposed within the Hazard Distance. The Hazard Distance (HD) is defined from the projection lens surface towards the position of the projected beam where the irradiance equals the maximum permissible exposure as described in the chapter "[High Brightness precautions: Hazard Distance](#)", page 16.
- Based on international requirements, no person is allowed to enter the projected beam within the zone between the projection lens and the related Hazard Distance (HD). This shall be physically impossible by creating sufficient separation height or by placing optional barriers. Within the restricted area operator training is considered sufficient. The applicable separation heights are discussed in "[High Brightness precautions: Hazard Distance](#)", page 16.
- Don't put your hand in front of the beam.
- This product contains no user serviceable parts. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.
- A special device ("rigged frame") based on an external frame must be used when the projector is deployed in a hanging configuration, or when several projector must be stacked. See installation manuals for the correct use of these devices.
- Never stack more than 2 projectors in a hanging configuration (truss) and never stack more than 3 projectors in a base stand configuration (table mount).
- When using the projector in a hanging configuration, always mount 2 safety cables. See installation manual for the correct use of these cables.
- Do not place this equipment on an unstable cart, stand, or table. The product may fall, causing serious damage to it and possible injury to the user.
- It is hazardous to operate without lens or shield. Lenses, shields or ultra violet screens shall be changed if they have become visibly damaged to such an extent that their effectiveness is impaired. For example by cracks or deep scratches.
- Never point or allow light to be directed on people or reflective objects within the HD zone.
- All operators shall have received adequate training and be aware of the potential hazards.
- In case of using an external cooling system position the hoses of the cooling system so that they will not be tripped over, pulled, or contact hot surfaces.

To prevent fire hazard

- Do not place flammable or combustible materials near the projector!
- Barco projection products are designed and manufactured to meet the most stringent safety regulations. This projector radiates heat on its external surfaces and from ventilation ducts during normal operation, which is both normal and safe. Exposing flammable or combustible materials into close proximity of this projector could result in the spontaneous ignition of that material, resulting in a fire. For this reason, it is absolutely necessary to leave an "exclusion zone" around all external surfaces of the projector whereby no flammable or combustible materials are present. The exclusion zone in the exhaust area must be not less than 100 cm (40"). The exclusion zone on the intake area must be not less than 50 cm (20").

- Do not place any object in the projection light path at close distance to the projection lens output. The concentrated light at the projection lens output may result in damage, fire or burn injuries.
- Do not cover the projector or the lens with any material while the projector is in operation. Keep flammable and combustible materials away from the projector at all times. Mount the projector in a well ventilated area away from sources of ignition and out of direct sun light. Never expose the projector to rain or moisture. In the event of fire, use sand, CO₂ or dry powder fire extinguishers. Never use water on an electrical fire. Always have service performed on this projector by qualified service personnel. Always insist on genuine Barco replacement parts. Never use non-Barco replacement parts as they may degrade the safety of this projector.
- Ensure no misalignment can occur. Prolonged exposure of wooden walls at close distance (< 20 cm) can represent a fire risk. After alignment the projector shall be securely mounted to the pedestal.
- Slots and openings in this equipment are provided for ventilation. To ensure reliable operation of the projector and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the projector too close to walls, or other similar surface. This projector should never be placed near or over a radiator or heat register. This projector should not be placed in a built-in installation or enclosure unless proper ventilation is provided.
- Projection rooms must be well ventilated or cooled in order to avoid build up of heat. It is necessary to vent hot exhaust air from projector and cooling system to the outside of the building.
- Let the projector cool completely before storing. Remove cord from the projector when storing.

To prevent battery explosion

- Danger of explosion if battery is incorrectly installed.
- Replace only with the same or equivalent type recommended by the manufacturer.
- For disposal of used batteries, always consult federal, state, local and provincial hazardous waste disposal rules and regulations to ensure proper disposal.

To prevent projector damage

- This apparatus must be grounded (earthed) via the supplied 3 conductor AC power cable.
- Always remove lens cap before switching on the projector. If the lens cap is not removed, it may melt due to the high energy light emitted through the lens. Melting the lens cap may permanently damage the surface of the projection lens.
- The air inlets of the projector must be cleaned on a regular basis. Cleaning the booth area would be monthly-minimum. Neglecting this could result in disrupting the air flow inside the projector, causing overheating. Overheating may lead to the projector shutting down during operation.
- The projector must always be installed in a manner which ensures free flow of air into its air inlets.
- If more than one projector is installed in a common projection booth, the exhaust air flow requirements are valid for EACH individual projector system. Note that inadequate air extraction or cooling will result in decreased life expectancy of the projector as a whole as well as causing premature failure of the lasers.
- In order to ensure that correct airflow is maintained, and that the projector complies with Electromagnetic Compatibility (EMC) and safety requirements, it should always be operated with all of its covers in place.
- Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. The device should not be placed in a built-in installation or enclosure unless proper ventilation is provided.
- Ensure that nothing can be spilled on, or dropped inside the projector. If this does happen, switch off and remove all power from the projector. Do not operate the projector again until it has been checked by qualified service personnel.
- Do not block the projector cooling fans or free air movement around the projector.
- Do not use this equipment near water.
- **Special care for Laser Beams:** Special care should be used when DLP projectors are used in the same room as high power laser equipment. Direct or indirect hitting of a laser beam on to the lens can severely damage the Digital Mirror Devices™ in which case there is a loss of warranty.
- Never place the projector in direct sunlight. Sunlight on the lens can severely damage the Digital Mirror Devices™ in which case there is a loss of warranty.
- Save the original shipping carton and packing material. They will come in handy if you ever have to ship your equipment. For maximum protection, repack your set as it was originally packed at the factory.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Never use strong solvents, such as thinner or benzene, or abrasive

cleaners, since these will damage the cabinet. Stubborn stains may be removed with a cloth lightly dampened with mild detergent solution.

- To ensure the highest optical performance and resolution, the projection lenses are specially treated with an anti-reflective coating, therefore, avoid touching the lens. To remove dust on the lens, use a soft dry cloth. For lens cleaning follow the instructions precisely as stipulated in the projector manual.
- Only connect the projector to signal sources and voltages as described in the technical specification. Connecting to unspecified signal sources or voltages may lead to malfunction and permanent damage of the unit.
- Allowed ambient temperature range: $t_a = 5^{\circ}\text{C}$ (41°F) to 40°C (104°F)
- Rated humidity = 10% RH to 80% RH Non-condensed.
- Do not operate the projector outside its temperature and humidity specifications as this may result in overheating and malfunction.

On servicing

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage potentials and risk of electric shock.
- Refer all servicing to qualified service personnel.
- Attempts to alter the factory-set internal controls or to change other control settings not specially discussed in this manual can lead to permanent damage to the unit and cancellation of the warranty.
- Replacement parts: When replacement parts are required, be sure the service technician has used original Barco replacement parts or authorized replacement parts which have the same characteristics as the Barco original part. Unauthorized substitutions may result in degraded performance and reliability, fire, electric shock or other hazards. Unauthorized substitutions may void warranty.
- Safety check: Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Malfunction unit

Remove all power from the product and refer servicing to qualified service technicians under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled into the equipment.
- If the product has been exposed to rain or water.
- If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of the other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

Stacking and transporting

- Stack maximum 2 rental flight cases high. Never higher.
- Surface on which flight case is standing must be level to ensure that the total load is evenly spread out among the four wheels. The surface must also be able to support the load safely.
- Before stacking or transporting flight cases, check the wheels and their fixation screws for wear or defects.
- Before stacking or transporting flight cases, check that the four lock handles on each flight case are in good working order and locked securely.
- When stacked, make sure the wheels of the upper flight case are precisely positioned in the stacking dishes of the flight case below.
- Stacked flight cases may not be moved. Before stacking, the lower flight case must already be in its final resting position before placing the second upon it.
- Never stack loaded flight cases in a truck or other transport medium, unless each flight case is rigidly strapped tight.
- In the event of a wheel breaking, flight cases must be rigidly strapped tight to prevent a stack collapsing.
- Use an appropriate forklift to raise flight cases and take the necessary precautions to avoid personnel injury.

Safety Data Sheets for Hazardous Chemicals

For safe handling information on chemical products, consult the Safety Data Sheet (SDS). SDSs are available upon request via safetydatasheets@barco.com.

1.3 Product safety labels

Light beam related safety labels

Safety labels explanation and location:

Refer to user manual for further information!



Hazard RG3:
Not for household use symbol.



Hazard RG3:
Optical radiation warning symbol.




WARNING! DO NOT LOOK INTO THE BEAM. NO DIRECT EYE EXPOSURE TO THE BEAM IS PERMITTED. CLASS 1 LASER PRODUCT RG3. HAZARD DISTANCE: REFER TO THE SAFETY MANUAL.
 IEC 60825-1:2014 | CAN/CSA-E60825-1:15
 EN 60825-1:2014+ A11: 2021 | EN/IEC 62471-5:2015

ATTENTION! NE PAS REGARDER LE FAISCEAU. EVITER TOUTE EXPOSITION DIRECTE DES YEUX AU FAISCEAU. PRODUIT LASER DE CLASSE 1 RG3. DISTANCE DE SECURITE: CONSULTER LE MANUEL DE SECURITE.
 IEC 60825-1:2014 | CAN/CSA-E60825-1:15
 EN 60825-1:2014+ A11: 2021 | EN/IEC 62471-5:2015

警告! 请勿直视光束。眼睛不要直接暴露在光束中 1类激光产品RG3 危害距离: 参见用户手册
 IEC 60825-1:2014 | CAN/CSA-E60825-1:15
 EN 60825-1:2014+ A11: 2021 | EN/IEC 62471-5:2015

警告! 请勿注視光源。禁止眼睛曝露在光源照射範圍雷射危險等級: 1類雷射產品RG3 安全危害距離: 請參考安全手冊
 IEC 60825-1:2014 | CAN/CSA-E60825-1:15
 EN 60825-1:2014+ A11: 2021 | EN/IEC 62471-5:2015

THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR LASER PRODUCTS UNDER 21 CFR 1040, EXCEPT WITH RESPECT TO THOSE CHARACTERISTICS AUTHORIZED BY VARIANCE NUMBER 2016-V-0144 EFFECTIVE ON DECEMBER 12, 2019.

EMC This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

警告: 此为A级产品, 在居住环境中, 运行此设备可能会造成无线电干扰。

CANADA This Class A digital apparatus complies with the Canadian ICES-003. Cet appareil numerique de la Classe A est conforme à la norme NMB-003 du Canada.

警告使用者: 此為甲類資訊技術設備, 於居住環境中使用時, 可能會造成射頻擾動, 在此種情況下, 使用者會被要求採取某些適當的對策。

WARNING! DO NOT LOOK INTO THE BEAM. NO DIRECT EYE EXPOSURE TO THE BEAM IS PERMITTED. CLASS 1 LASER PRODUCT RG3. HAZARD DISTANCE: REFER TO THE SAFETY MANUAL.

ATTENTION! NE PAS REGARDER LE FAISCEAU. EVITER TOUTE EXPOSITION DIRECTE DES YEUX AU FAISCEAU. PRODUIT LASER DE CLASSE 1 RG3. DISTANCE DE SECURITE: CONSULTER LE MANUEL DE SECURITE.

警告! 请勿直视光束。眼睛不要直接曝露在光束中 1类激光产品RG3 危害距离: 参见用户手册

警告! 请勿注視光源。禁止眼睛曝露在光源照射範圍雷射危險等級: 1類雷射產品RG3 安全危害距離: 請參考安全手冊

IEC 60825-1:2014 | EN 60825-1: 2014+ A11: 2021 | CAN/CSA-E60825-1: 15 | EN/IEC 62471-5:2015

THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR LASER PRODUCTS UNDER 21 CFR 1040, EXCEPT WITH RESPECT TO THOSE CHARACTERISTICS AUTHORIZED BY VARIANCE NUMBER 2016-V-0144 EFFECTIVE DECEMBER 12, 2019.

EMC This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

警告: 此为A级产品, 在居住环境中, 运行此设备可能会造成无线电干扰。

警告使用者: 此為甲類資訊技術設備, 於居住環境中使用時, 可能會造成射頻擾動, 在此種情況下, 使用者會被要求採取某些適當的對策。

CANADA This Class A digital apparatus complies with the Canadian ICES-003. Cet appareil numerique de la Classe A est conforme à la norme NMB-003 du Canada.

1.4 High Brightness precautions: Hazard Distance



HD

Hazard Distance (HD) is the distance measured from the projection lens at which the intensity or the energy per surface unit becomes lower than the applicable exposure limit on the eye or on the skin. The light beam is considered (to be) unsafe for exposure if the distance from a person to the light source is less than the HD.

Restriction Zone (RZ) based on the HD

The HD depends on the amount of lumens produced by the projector and the type of lens installed. See chapter “HD in function of modifying optics”, page 19.

To protect untrained end users (as cinema visitors, spectators) the installation shall comply with the following installation requirements: Operators shall control access to the beam within the hazard distance or install the product at a height that will prevent spectators' eyes from being in the hazard distance. Radiation levels in excess of the limits will not be permitted at any point less than 2.0 meter (SH) above any surface upon which persons other than operators, performers, or employees are permitted to stand or less than 1.0 meter (SW) lateral separation from any place where such persons are permitted to be. In environments where unrestrained behavior is reasonably foreseeable, the minimum separation height should be greater than or equal to 3.0 meter to prevent potential exposure, for example by an individual sitting on another individual's shoulders, within the HD.

These values are minimum values and are based on the guidance provided in IEC 62471-5:2015 section 6.6.3.5.

The installer and user must understand the risk and apply protective measures based upon the hazard distance as indicated on the label and in the user information. Installation method, separation height, barriers, detection system or other applicable control measure shall prevent hazardous eye access to the radiation within the hazard distance.

For example, projectors that have a HD greater than 1 m and emit light into an uncontrolled area where persons may be present should be positioned in accordance with “the fixed projector installation” parameters, resulting in a HD that does not extend into the audience area unless the beam is at least 2.0 meter above the floor level. In environments where unrestrained behavior is reasonably foreseeable, the minimum separation height should be greater than or equal to 3.0 meter to prevent potential exposure, for example by an individual sitting on another individual's shoulders, within the HD. Sufficiently large separation height may be achieved by mounting the image projector on the ceiling or through the use of physical barriers.

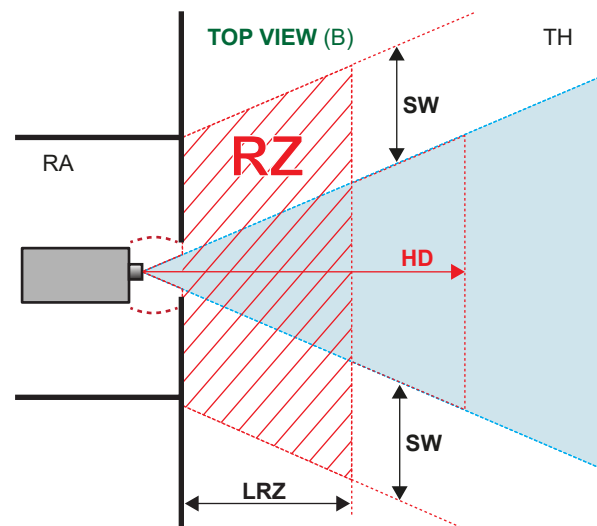
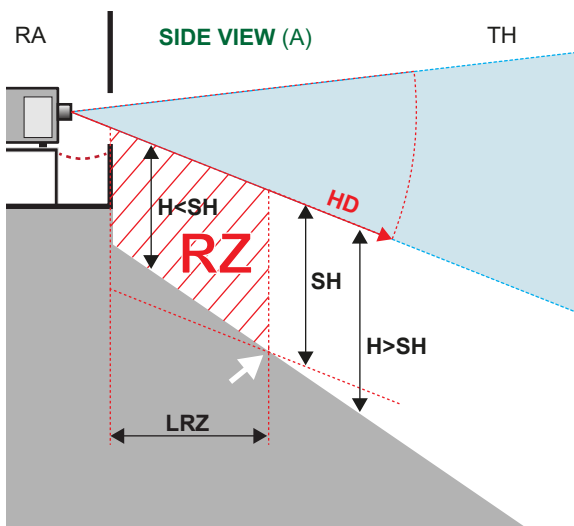


Image 1-1

- A** Side view
- B** Top view
- RA** Restricted Access location (boot area of projector).
- TH** Theater
- RZ** Restriction Zone in the theater

- HD** Hazard Distance
- LRZ** Length Restriction Zone in the theater
- H** Height between surface floor and the light beam
- SH** Separation Height
- SW** Separation Width

Based on national requirements, no person is allowed to enter the projected beam within the zone between the projection lens and the related hazard distance (HD). This shall be physically impossible by creating sufficient separation height or by placing barriers. The minimum separation height takes into account the surface upon which persons other than operator, performers or employees are permitted to stand.

On [Image 1–2](#) a typical setup is displayed. It must be verified if these minimum requirements are met. If required a restricted zone (RZ) in the theater must be established. This can be done by using physical barrier, like a red rope as illustrated in [Image 1–2](#).

The restricted area sticker can be replaced by a sticker with only the symbol.

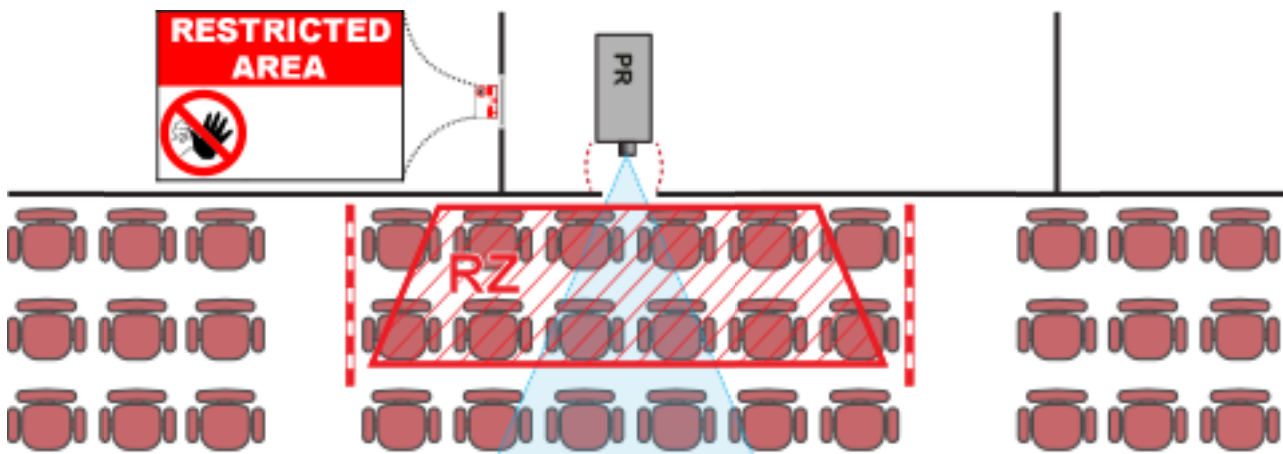


Image 1–2

USA market

For LIPs (Laser Illuminated Projectors) installed in the USA market other restriction zone conditions apply.

LIPs for installation in restrained environment (cinema theaters, business rooms, class rooms, museums ...) shall be installed at height vertically above the floor such that the bottom plane of the hazard distance zone shall be no lower than 2.5 meters above the floor. Horizontal clearance to the hazard distance zone shall be not less than 1 meter. Alternatively, in case the height of the separation barrier for the horizontal clearance is at least 1 meter high then the horizontal clearance (SW) can be reduced to:

- 0 meter if the height of the hazard zone is minimum 2.5 meter.
- 0.1 meter if the height of the hazard zone is minimum 2.4 meter.
- 0.6 meter if the height of the hazard zone is minimum 2.2 meter.

LIPs for installations in unrestrained environment (concerts, ...) shall be installed at a height vertically above the floor such that the bottom plane of the Hazard distance Zone shall be no lower than 3 meters above the floor. Horizontal clearance to the hazard distance zone shall be not less than 2.5 meters. Any human access horizontally to the Hazard Zone, if applicable, shall be restricted by barriers. If human access is possible in an unsupervised environment, the horizontal or vertical clearances shall be increased to prevent exposure to the hazard distance zone.

The LIP shall be installed by Barco or by a trained and Barco-authorized installer or shall only be transferred to laser light show variance holders. This is applicable for dealers and distributors since they may need to install the LIP (demo install) and/or they transfer (sell, rent, lease) the LIP. Dealers and distributors shall preserve sales and installation records for a period of 5 years. Variance holders may currently hold a variance for production of Class IIIB and IV laser light shows and/or for incorporating RG3 LIPs. Laser light show variance for RG3 LIPs can be requested by mailing the application to RadHealthCustomerService@fda.hhs.gov.

The installation checklist for laser illuminated RG3 projectors must be fully completed after the installation. The installation checklist can be downloaded from the Barco website. The installer shall preserve the checklist for a period of 5 years. A copy can remain on-site.

Install one or more readily accessible controls to immediately terminate LIP projection light. The power input at the projector side is considered as a reliable disconnect device. When required to switch off the projector, disconnect the power cord at the projector side. In case the power input at the projector side is not accessible (e.g. truss mount), the socket outlet supplying the projector shall be installed nearby the projector and be easily accessible, or a readily accessible general disconnect device shall be incorporated in the fixed wiring.

1.5 HD for fully enclosed projection systems



HD

Hazard Distance (HD) is the distance measured from the projection lens at which the intensity or the energy per surface unit becomes lower than the applicable exposure limit on the eye or on the skin. The light beam is considered (to be) unsafe for exposure if the distance from a person to the light source is less than the HD.

Restriction Zone (RZ) based on the HD

The projector is also suitable for rear projection applications; projecting a beam onto a diffuse coated projection screen. As displayed in [Image 1–3](#) two areas should be considered: the restricted enclosed projection area (RA) and the observation area (TH).

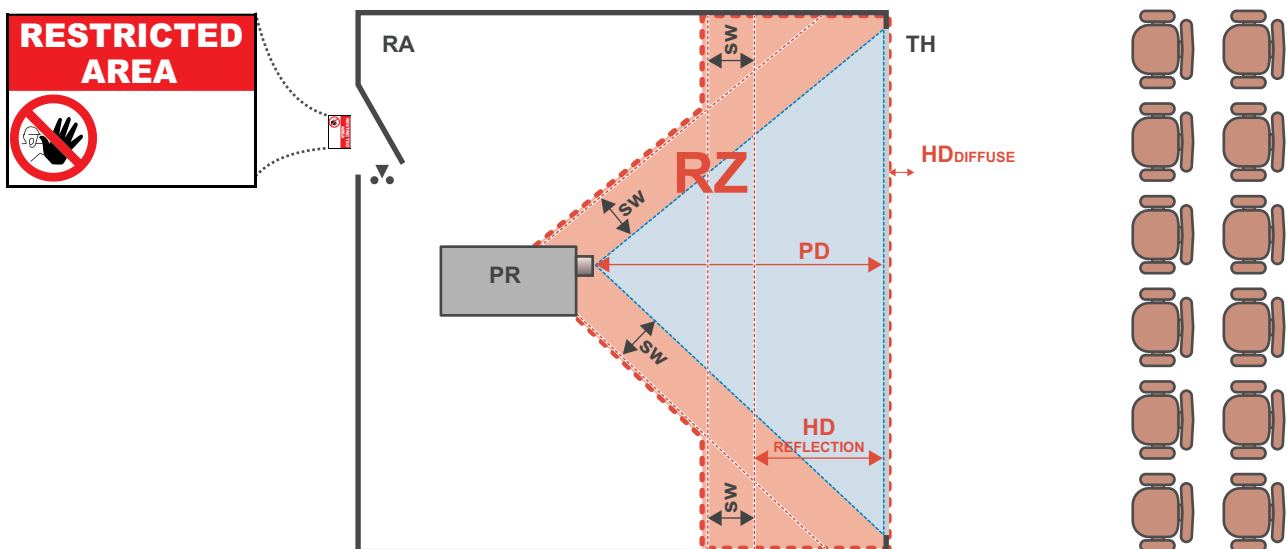


Image 1–3

RA Restricted Access location (enclosed projection area).
PR Projector.
TH Theater (observation area).

RZ Restriction Zone.
PD Projection Distance.
SW Separation Width. Must be minimum 1 meter.

For this type of setup 3 different HD shall be considered:

- HD as discussed in “[High Brightness precautions: Hazard Distance](#)”, page 16, relevant for intrabeam exposure.
- $HD_{\text{reflection}}$: the distance that has to be kept restrictive related to the reflected light from the rear projection screen.
- HD_{diffuse} : the relevant distance to be considered while observing the diffuse surface of the rear projection screen.

As described in “[High Brightness precautions: Hazard Distance](#)”, page 16, it is mandatory to create a restricted zone within the beam areas closer than any HD. In the enclosed projection area the combination of two restricted zones are relevant: The restricted zone of the projected beam toward the screen; taking into account 1 meter Separation Width (SW) from the beam onward. Combined with the restricted zone related to the rear reflection from the screen ($HD_{\text{reflection}}$); also taking into account a 1 meter lateral separation.

The $HD_{\text{reflection}}$ distance equals 25% of the difference between the determined HD distance and the projection distance to the rear projection screen. To determine the HD distance for the used lens and projector model see chapter “[HD in function of modifying optics](#)”, page 19.

$$HD_{\text{reflection}} = 25\% (HD - PD)$$

The light emitted from the screen within the observation shall never exceed the RG2 exposure limit, determined at 10 cm. The HD_{diffuse} can be neglected if the measured light at the screen surface is below 5000 cd/m² or 15000 LUX.

1.6 HD in function of modifying optics

Hazard distance

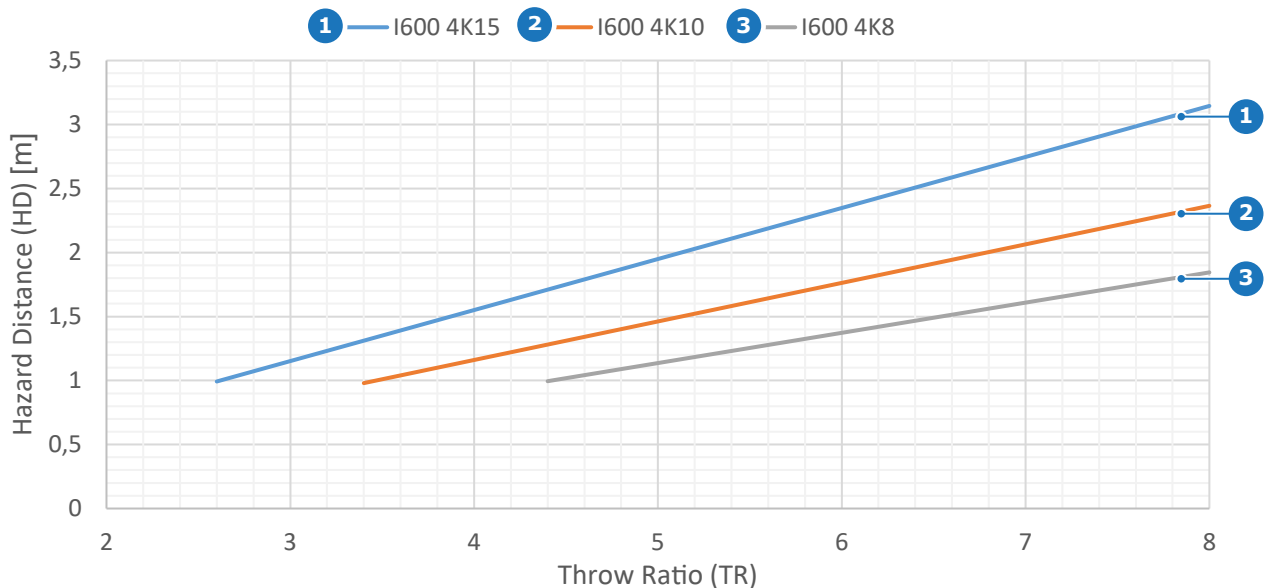


Image 1–4

HD Hazard Distance
TR Throw Ratio



No hazard distance measures applicable when the hazard distance is shorter than 1 meter. Like with any bright light source, do not stare into the beam and prevent close exposure to children.

1.7 HD calculation of multi-projector stacks

Sometimes two or more projectors are stacked (projecting on the same surface). In this case, because of the overlap of the images, possibly a system Hazard Distance needs to be applied instead of a single projector hazard distance.

Only projectors stacked along one axis (horizontal or vertical) should be considered. Physical stacking of projectors in two dimensions (for example 2x2), can be reduced to separate “N”x1 systems.

The information needed is:

- The Hazard Distance (**HD**) of a single projector with the given lens.
- The distance (**h**) between two adjacent projector lens centers in the stack.



For 3 or more projectors, in case the distances between adjacent lenses are not equal, take the shortest distance.


HD calculation:

- For stacking two-projectors:
 - **If the single projector hazard distance $HD \geq 9 \cdot h$** , then the system hazard distance to implement is $1.15 \cdot HD$.
 - **If the single projector hazard distance $HD < 9 \cdot h$** , then keep the original HD and risk zone per projector.
- For stacking “N” projectors along the same axis, “N” being 3 or more:
 - **If the single projector hazard distance $HD \geq 12 \cdot h$** , then the system hazard distance to implement is $(\frac{N}{2} + 0.15) \cdot HD$.
 - **If the single projector hazard distance $9 \cdot h \leq HD < 12 \cdot h$** , then the system hazard distance to implement is $1.15 \cdot HD$.

- If the single projector hazard distance $HD < 9 \cdot h$, then keep the original HD and risk zone per projector.

1.8 Compliance

UK Compliance

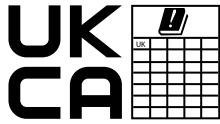

This product is fit for use in the UK.

Authorised Representative: Barco UK Ltd

Address: Building 329, Doncastle Road
Bracknell RG12 8PE, Berkshire, United Kingdom

L'information des consommateurs sur la règle de tri



1.9 Download Product Manual

Download product manual

Product manuals and other related documentation are available online at <https://www.barco.com>. Search or browse to the product support page or scan the QR code on the product ID-label or on the box label. To see all service documentation (e. g., spare part list, service manuals, field loadable software ...) you must be registered and logged in.

IMPORTANT! Read Installation instructions before connecting equipment to the mains power supply.

I600 introduction

2

2.1	Projector orientation.....	22
2.2	Projector components	22
2.3	Projector airflow.....	22
2.4	Projector status	23
2.5	Pulse Prospector	24

About this chapter

This chapter and by extension this whole document, the **I600 user guide**, is intended for the user who want's to get familiar with the projector hardware parts. It describes the input and communication boards, the remote control unit, local keypad, how to power up the projector, the different power states, product specifications and much more. It does not contain installation instructions and does not describe the Pulse graphic user interface. Refer to the **I600 installation manual** for detailed installation instructions and to the **Pulse OSD user guide** for all software features of the projector.



The Pulse software has regular new releases due to continuous improvements. Hence, the **Pulse OSD** user guide is subject to updates. Download the latest version of the user guide from the Barco website using following link: <https://www.barco.com/support>.



For detailed product specifications see the appendix chapters: “**Specifications**”, page 55, and following.

2.1 Projector orientation

Orientation convention

This manual refers to the left side of the projector as the side at your left hand when standing behind the projector and looking at the projection screen in front of the projector.

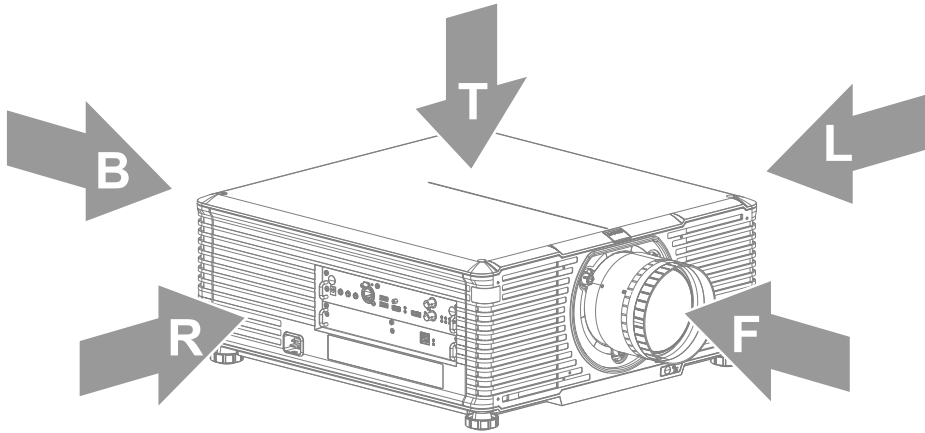


Image 2-1

T Top
L Left
F Front

R Right
B Back

2.2 Projector components

Component location

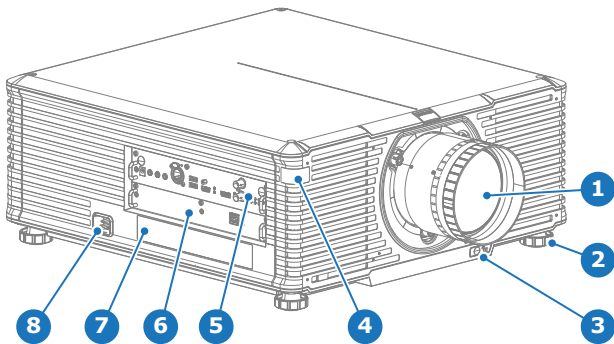


Image 2-2

1 Projection lens
2 Adjustable feet (x4)
3 Lens unlock button
4 Infra Red receiver front
5 Control & Communication
6 Optional input slot
7 Product ID label
8 Mains input socket

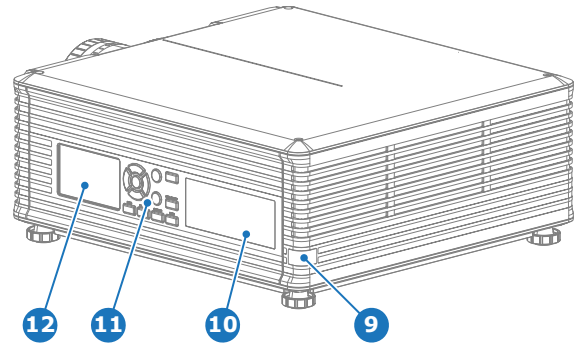


Image 2-3

9 Infra Red receiver back
10 Safety label
11 Local keypad
12 LCD touch panel

2.3 Projector airflow

Air inlets and outlets

The projector has 1 air inlet channel and 1 air outlet. The air outlet is located at the front side of the projector. The air inlet is located at the back side of the projector.

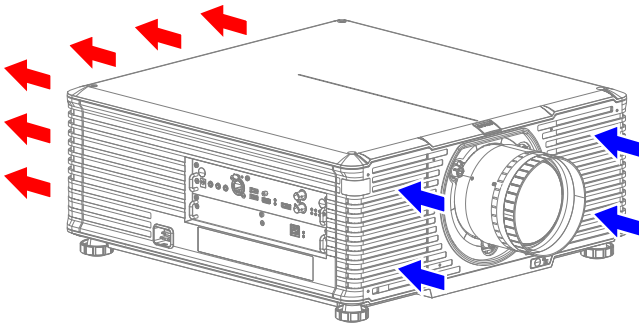


Image 2-4

CAUTION: Never block the air inlets or outlets of the projector. Always ensure that clean cool air, compliant with the specified ambient temperature, can freely enter the air inlets of the projector.

2.4 Projector status

LED indication

The Control & Communication module contains four status LEDs at the right side of the front panel. These LEDs allows a quick status analyses of the projector. For explanatory see table hereunder.

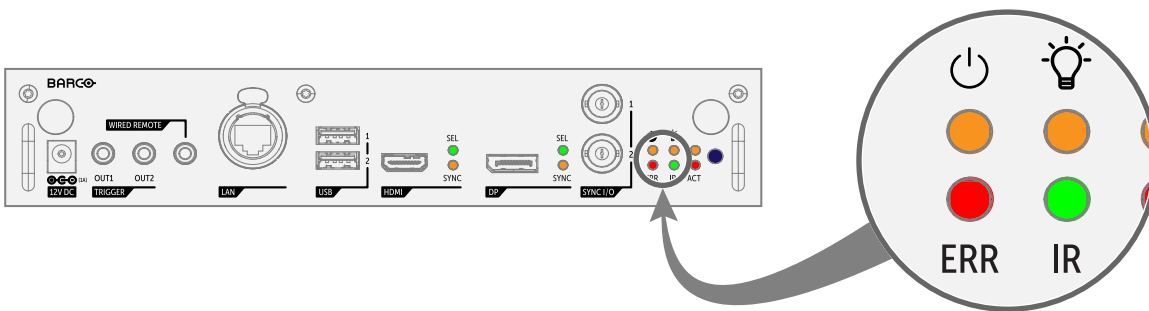




Image 2-5 Location of projector status LEDs.

LED	Color status	Description
 Power	Off	Projector powers up
	RED	Projector is in Standby mode
	ORANGE	Projector is in Ready mode
	GREEN	Projector is on
 Illumination	Off	Light source is off
	RED	No light source detected
	ORANGE	Light source is on in ECO mode
	GREEN	Light source is on in normal mode
	GREEN-ORANGE	Light source is on in CLO mode
ERR	Off	No error
	RED toggles on/off	Error
	ORANGE toggles on/off	Warning
IR	RED	IR signal received
	GREEN	IR signal acknowledged

2.5 Pulse Prospector

About Pulse Prospector

Pulse Prospector is a built-in web application in the projector. The application provides all the necessary tools to configure and control the connected projector remotely. It is readily available on the connected projector without any additional software installation. It is accessible via a web browser and is fully supported on iOS and Android devices.

Pulse Prospector is supported from projector software version 2.5 onwards.

Prerequisites

- Projector software package 2.5 or later must be installed.
- In order to connect a device (e.g., laptop) with the projector, both the device and the projector must operate within the same network (or the device needs to have full access to the projector network).



It is recommended to upgrade the web browser to the latest version available for the best viewing experience, compatibility and security.

How to connect with Pulse Prospector

1. Start a web browser.
2. Enter the projectors IP address + /9991 (xxx.xxx.xxx.xxx/9991).



Tip: The projector IP address is visible on the projector touch screen when the dashboard of the Pulse OSD is displayed.



Note: Depending on the configuration of the browser, a security warning could be displayed. To prevent this warning in the future, the product certificate must be trusted as a root certificate in the browser. For more info, contact the local IT responsible.

Depending on the projector model and installed Pulse software version, either the Pulse Prospector login page or home page is displayed.

Pulse Prospector user guide

All features of the Pulse Prospector are described in a separate user guide which is applicable for all Pulse based projectors. Hence, each menu or menu group in the user guide is preceded with a “**Location and availability**” section wherein the relevant projector models and accounts are mentioned.

The Pulse software has regular new releases due to continuous improvements. Hence, the Pulse Prospector user guide is subject to updates. Download the latest version of the user guide from the Barco website using following link: <https://www.barco.com/support>.

3

Local keypad

3.1	Local keypad functions.....	26
3.2	Local keypad backlight.....	26
3.3	LCD touch panel.....	27

3.1 Local keypad functions

Keypad overview

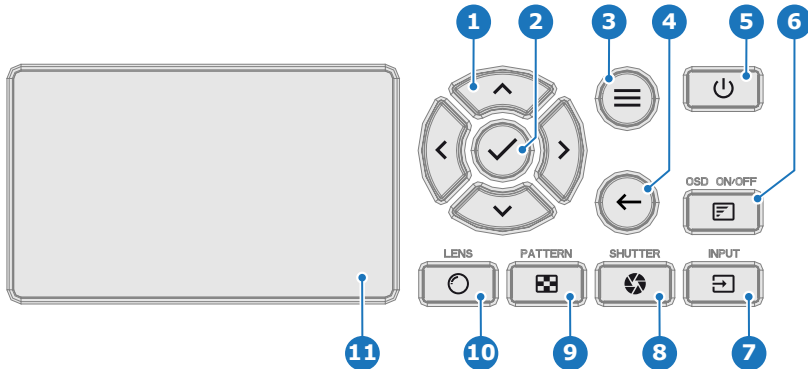


Image 3-1

- | | |
|---|--|
| <ul style="list-style-type: none"> 1 Menu navigation 2 Menu confirmation, OK button 3 Menu open / close 4 Menu back 5 Power on / off 6 Projector OSD on / off | <ul style="list-style-type: none"> 7 Input selection 8 Shutter open / close 9 Test patterns 10 Lens adjustment 11 LCD touch panel |
|---|--|

Functionality

The local keypad gives direct access to several functions, in addition, access to the Pulse menu system.

The local keypad has a backlight that can be switched on and off manually. By default the light turns off after 5 minutes.



Refer to the **Pulse OSD** user guide for detailed guidance on all software features of the projector.





The Pulse software has regular new releases due to continuous improvements. Hence, the **Pulse OSD** user guide is subject to updates. Download the latest version of the user guide from the Barco website using following link: <https://www.barco.com/support>.

3.2 Local keypad backlight

Button backlight status

The **Power** and **Shutter** buttons are equipped with white, blue and red backlit LEDs. The other keys are only equipped with white and blue backlit LEDs. The LEDs are controlled according to the features available.

Button	Color status	Description
	Blinking WHITE (slow)	Projector starts up (booting)
	Blinking WHITE (fast)	Firmware update
	Solid WHITE	Projector is in Standby or Ready mode
	Blinking BLUE	Projector goes to ON mode
	Solid BLUE	Projector is ON
	Blinking RED	Error condition
	Off (no color)	Projector is OFF, starts up, or is in Standby or Ready mode.
	Solid WHITE	Projector is ON, shutter is open
	Solid RED	Projector is ON, shutter is closed

3.3 LCD touch panel

Functionality

The LCD touch panel has two main functions:

1. Showing the menus, adjustment information and if enabled a mirror of the OSD (On Screen Display).
2. Information regarding the status of the projector:
 - Projector status
 - Network address
 - Active source
 - Current firmware version
 - Operation Data
 - Active functions (Enabled Functions).

Toggle between the two main function by using the **Menu** button on the local keypad, or on the remote control unit.

The LCD touch panel will fade out 30 seconds after the last key operation.



Refer to the **Pulse OSD** user guide for detailed guidance on all software features of the projector.

Navigation

Use the arrow keys on the local keypad or on the remote control unit to navigate through the menus on the LCD touch panel.

In addition to the remote control unit and the local keypad, it is also possible to navigate in the menus with the touch functionality in the LCD panel:

- Press the icons to select the functions.
- Select switches to toggle.
- Select and drag sliders to adjust slider value.



The LCD menus can occasionally be slightly different in layout compared with the OSD menu, due to a more optimal layout regarding to the touch functionality of the LCD.

Basic Remote Control Unit

4

4.1	Basic remote functions	30
4.2	Basic remote batteries	30

About the basic remote

The I600 projector is standard delivered with a basic remote control unit (without batteries). While this remote control unit has a more limited amount of available features compared with the optional Pulse RCU, it will be able to help you out with basic controls.



For more information about the optional Pulse RCU see chapter [“Pulse Remote Control Unit”](#), page 33. For ordering information see Barco website.

4.1 Basic remote functions

Functions

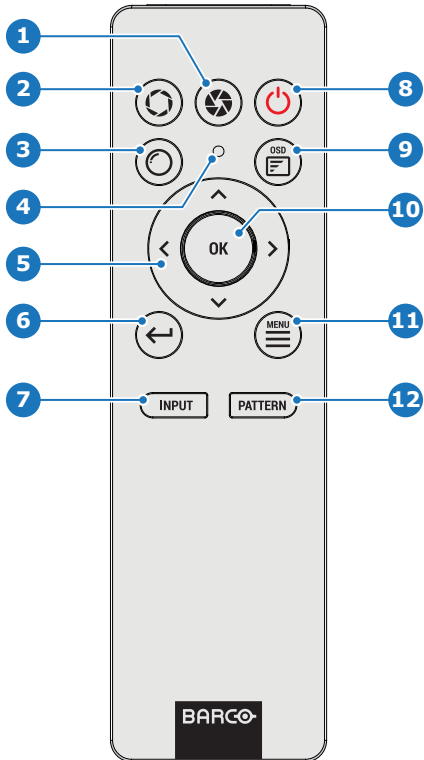


Image 4-1

- | | | | |
|---|------------------------------------|----|-------------------------------|
| 1 | Close shutter | 7 | Open <i>Source</i> menu |
| 2 | Open shutter | 8 | Power on / off |
| 3 | Open <i>Lens</i> menu | 9 | OSD menu on / off |
| 4 | Button pressed indicator | 10 | Menu confirmation |
| 5 | Menu navigation keys | 11 | GUI activate / deactivate |
| 6 | Move back one level in menu system | 12 | Open <i>Test pattern</i> menu |



The Power on / off button only shifts power between Ready and ON mode.



When pressing the GUI activate / deactivate button while the projector is in stand-by mode, will also power up the projector.

4.2 Basic remote batteries

Battery placement & replacement

The basic remote control is powered by two (2) standard AAA batteries. The needed batteries are not included in the packaging.

The battery compartment is on the back side of the basic remote control. The following image illustrates how to open the battery compartment.

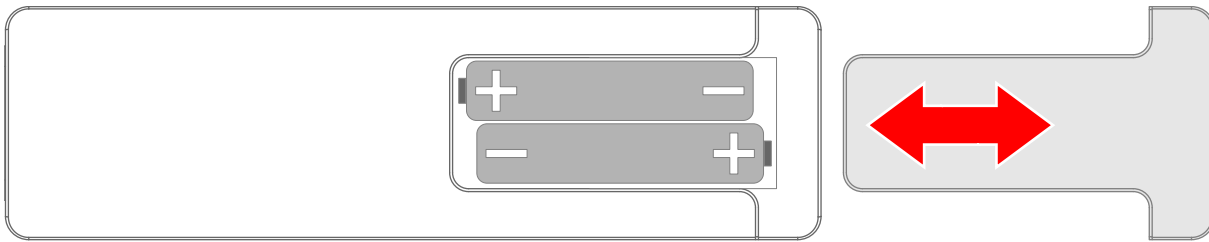


Image 4-2 Position of batteries in basic remote.



CAUTION: Replace batteries with the correct battery type. Only use AAA size batteries. There is a risk of explosion if the battery is replaced with an incorrect type.

Make sure the polarities match the + and - marks, as depicted on the inside of the battery compartment. There is a risk of explosion if the batteries are installed incorrectly.

Pulse Remote Control Unit

5

5.1	Pulse RCU functions	34
5.2	Pulse RCU battery installation	34
5.3	Pulse RCU on/off button.....	36
5.4	Pulse RCU “button pressed indicator”	36
5.5	Pulse RCU “RGB filter” button	36
5.6	Pulse RCU “Projector OSD on/off” button	37
5.7	Using the XLR connector of the RCU	37
5.8	Using the mini-jack connector of the RCU.....	37
5.9	Pulse RCU silicone protection sleeve (optional)	38

5.1 Pulse RCU functions

Functions

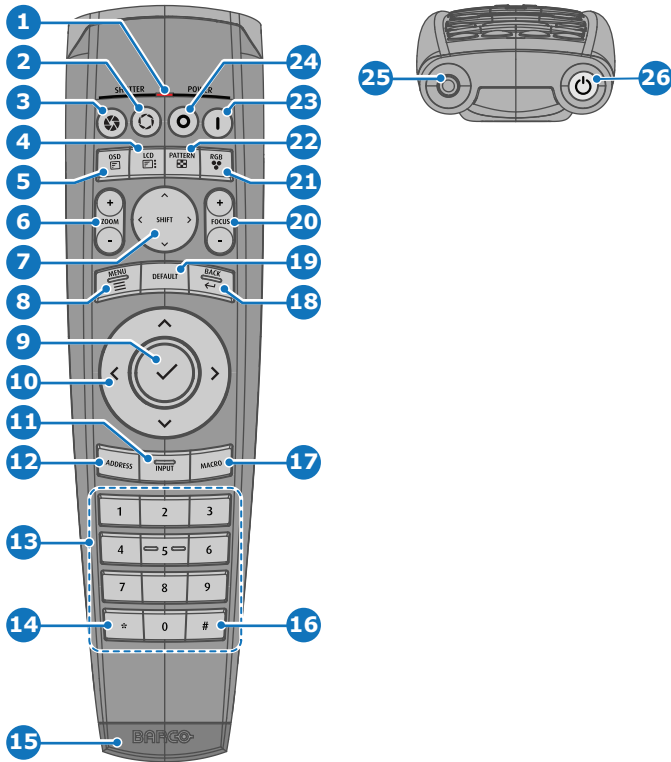


Image 5-1

- | | | | |
|-----------|---------------------------|-----------|--------------------------------------|
| 1 | Button pressed indicator | 14 | Backspace (while entering values) |
| 2 | Shutter open | 15 | XLR connector |
| 3 | Shutter close | 16 | Decimal mark (while entering values) |
| 4 | LCD/Touch panel on / off | 17 | Macro button (Not in use) |
| 5 | Projector OSD on / off | 18 | Menu back |
| 6 | Lens zoom | 19 | Default value button |
| 7 | Lens shift | 20 | Lens focus |
| 8 | Menu open / close | 21 | RGB filter |
| 9 | Menu selection, OK button | 22 | Test patterns |
| 10 | Menu navigation | 23 | Power on |
| 11 | Input selection | 24 | Power off |
| 12 | Address button | 25 | 3.5 mm jack |
| 13 | Numeric buttons | 26 | RCU on / off |

5.2 Pulse RCU battery installation

About the batteries for the remote control



Batteries are no longer included in the packaging. It is up to the user to purchase the correct batteries.

Use 2 AA size (alkaline) batteries in the remote control.

Before using your remote control, first install the batteries.

How to install

1. Push the battery cover tab with the fingernail a little backwards (1) and pull, at the same time, the cover upwards (2).

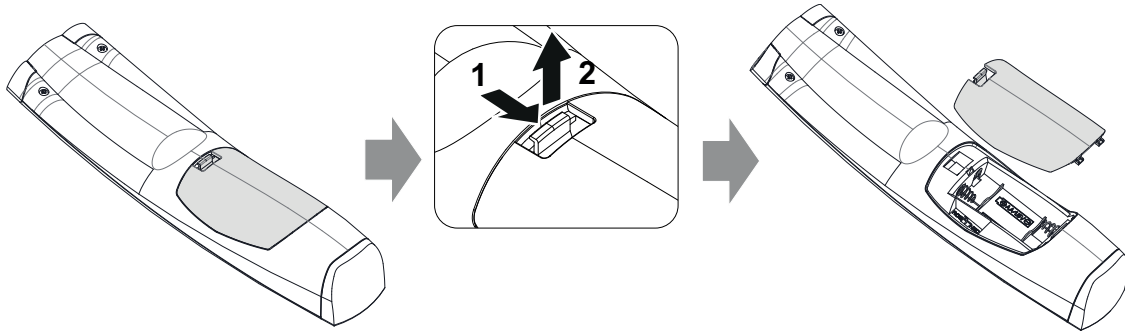


Image 5-2

2. Insert the two AA size batteries, making sure the polarities match the + and - marks inside the battery compartment.



Tip: Use alkaline batteries for optimum range and lifetime.

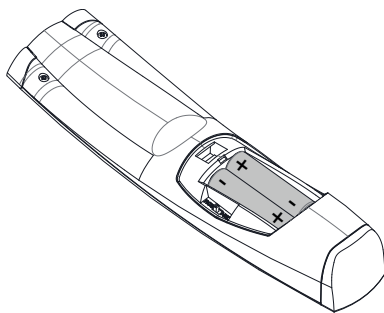


Image 5-3

3. Insert (1) both lower tabs of the battery cover in the gaps at the bottom of the remote control, and press (2) the cover until it clicks in place.

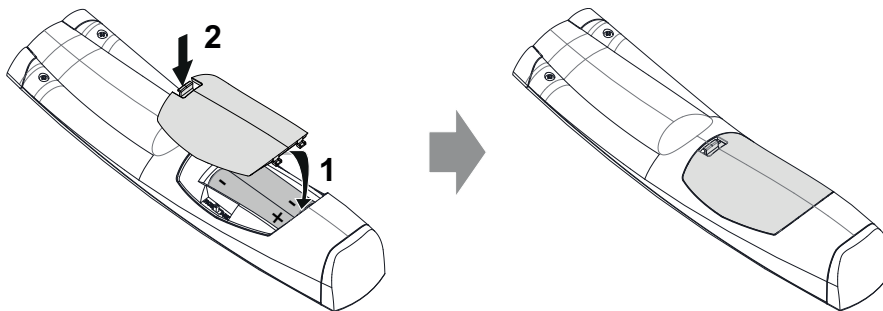


Image 5-4



When replacing batteries, the broadcast address of the RCU will be reset to its default value '0'.



CAUTION: Replace with the correct battery type. Use two AA size batteries. There is a risk of explosion if the battery is replaced with an incorrect type.



CAUTION: Replace the battery as explained above. There is a risk of explosion if the battery is incorrectly installed.

5.3 Pulse RCU on/off button

Function of the remote control on/off button

The Pulse remote control unit has at the front side an on/off button (reference 1 [Image 5–5](#)). Switching off the remote control prevents that unwanted commands are send due to an accidental key press. Furthermore, switching the RCU off will extend the battery lifetime of the remote control.

To activate the remote control, press the on/off button until the button pressed indicator will turn off (3-5 seconds).

To deactivate the remote control, press the on/off button again.

Default after (re)placing batteries, is “ON”.

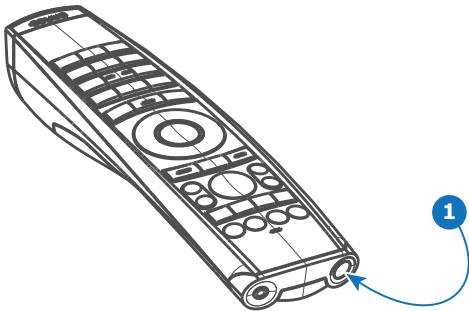


Image 5–5

5.4 Pulse RCU “button pressed indicator”

Functions button pressed indicator

- Rapidly flashes when commands are sent, this is the normal “button pressed” indication.
- 1 Short flash when remote control is switched ON by means of the on/off button.
- Continuously lit (up to 5 seconds) when address digits are expected after pressing the ADDR button.
- Slowly flashes (2 times a second) when the battery level is becoming low; typically when more than 85% of the useful life is past.

5.5 Pulse RCU “RGB filter” button

Filtering the color of the projected image

By pressing the RGB filter button on the RCU you can place a color filter on the output of the projector. This feature can be useful during the installation and configuration of a multi-projector or multi-channel setup. By having one projector project a red image and another project a green image, it is easier to spot and adjust the overlap section.

By pressing this button multiple times, you will have different active filters, in the following cycle:

- Red + Green + Blue (default)
- Red only
- Green only
- Blue only
- Red + Green
- Green + Blue
- Red + Blue
- Red + Green + Blue
- etc



After powering up, the colors will always revert back to full RGB.

5.6 Pulse RCU “Projector OSD on/off” button

Functions Projector on/off button

While the light source is on, you can toggle on and off the projection of the On-screen display by pressing the projector OSD on/off button.

From Pulse 2.3 onward, this button now supports another function. If “*Stealth mode*” has been configured for the LCD display, pressing this button a long time (5 seconds or more) will activate or deactivate Stealth mode. For more info on Stealth mode, see Pulse software user guide.

5.7 Using the XLR connector of the RCU



Connecting a cable with the XLR connector will reset the broadcast address of the RCU to its default value '0'.

Revised RCU

Revised Remote Control Units produced from April 2023 onward will require the projector to run software 2.3.x (or newer) in order to properly use the XLR connector. If not yet updated to the most recent version, update the projector software. For more information, see “[Software update](#)”, page 52.

How to use the XLR connector

1. Remove the XLR cover by pulling it backwards.

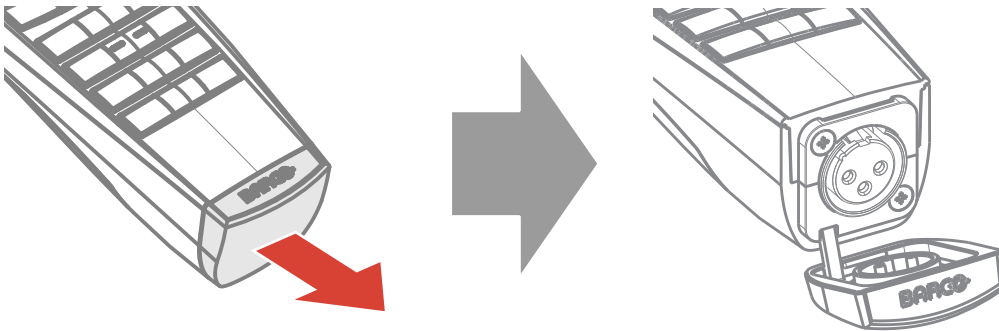


Image 5–6

2. Connect a cable with XLR plug into the XLR connector of the RCU.
3. Connect the other end of the cable with the XLR input of the projector.

5.8 Using the mini-jack connector of the RCU



Connecting a cable with the mini-jack connector will reset the broadcast address of the RCU to its default value '0'.

How to use the mini-jack connector

1. Connect a cable with the mini-jack connector (reference 2 [Image 5–7](#)) of the RCU.
2. Connect the other end of the cable with the mini-jack input of the projector.

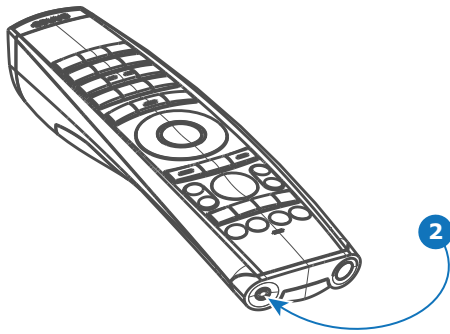



Image 5-7

 **Note:** While the mini-jack cable is connected, the IR receivers of the projector are switched off.

5.9 Pulse RCU silicone protection sleeve (optional)

Introduction

Barco offers a silicone form fitting protection sleeve for the Pulse RCU. The silicone material keeps it comfortably, non slip and soft touch. All buttons and openings remain accessible. The sleeve is quick and easy installed. For ordering information see Barco website.

How to install

1. Pull off the rubber XLR-lid from the RCU.



Image 5-8

2. Place back side (XLR side) of the RCU into the sleeve and pull the other side of the sleeve over the front side of the RCU.

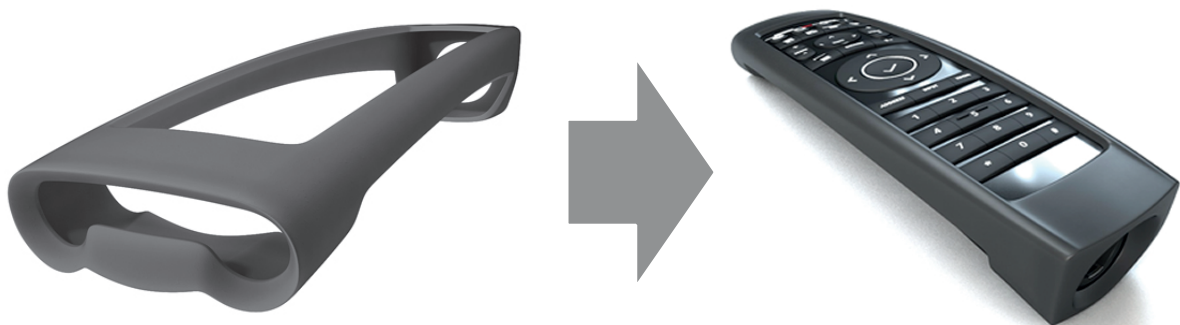


Image 5-9

Powering On/Off

6

6.1	Power modes	40
6.2	Power On the projector	40
6.3	Power Off the projector	40
6.4	Power mode transitions	41

6.1 Power modes



Wake on DMX activity

When the projector is in STANDBY mode, DMX commands using DMX over XLR are not processed. This means that it is not possible to wake up the projector using specific “power on” DMX commands. For projectors where this is an issue, the XLR menu now has the command “Wake on DMX activity”. When enabled, the projector will wake up if it detects any activity on the DMX input. When using DMX over Ethernet (using ArtNet), DMX commands are processed, even when the projector is in STANDBY mode.

6.2 Power On the projector

How to power on the projector

1. Ensure that the mains input of the projector is connected with the power net.

The projector starts up to **READY** mode as soon as the projector is connected with power net. The **Power on/off** button will blink until **Ready** mode is achieved. Once in **Ready** mode, the **Power on/off** button will be lit **WHITE**. The start up screen is displayed on the touch panel. Once the startup is completed, the status screen will be displayed.



Image 6-1

2. Press the **Power on/off** button on the projector, or the **Power On** button on the remote control.

The projector will continue to **ON** mode. The **Power on/off** button will blink until the projector is ready for projection. Once the projector is fully started up, the **Power on/off** button will be lit **BLUE**.



Image 6-2

6.3 Power Off the projector

How to power off the projector

1. While the projector is in **ON** mode, press and hold the **Standby** button on the local keypad, or the **Power Off** button on the remote control, to shut down the light source of the projector.



Note: If the **auto lights source off** feature is enabled in the service menu (see Pulse user guide) the projector will automatically go to **READY** mode after a time-out (default 15 minutes).

The projector will switch from **ON** to **READY** mode first in order to run through a cool down phase.

2. While the projector is in **READY** mode, press and hold the **Standby** button on the local keypad, or the **Power Off** button on the remote control, to bring the projector from the **READY** mode in the **STANDBY** mode.



Note: If the **auto standby** feature is enabled in the service menu (see Pulse user guide) the projector will automatically go to **STANDBY** mode after a time-out (default 15 minutes).

3. While the projector is in **STANDBY** mode, press and hold the **Standby** button on the local keypad, or the **Power Off** button on the remote control, to bring the projector from the **STANDBY** mode in the **ECO STANDBY** mode.



Note: If the **auto standby** feature is enabled in the service menu (see Pulse user guide) the projector will automatically go to **ECO STANDBY** mode after a time-out (default 15 minutes).



Some actions like apply a grey test pattern are done during the two minutes of the cool down phase in order to minimize the potential effect of burn-in and increase the projector lifetime.



CAUTION: Never switch off the projector by means of unplugging mains cord or by cut down of mains power.



Barco advises to keep the projector always powered and use the **ECO STANDBY** mode for low power consumption.

How to unplug the projector

1. Follow the previous power off procedure to switch off the projector.
2. Wait at least two minutes.



Caution: It is very important to wait few minutes before unplugging the power cord. If the cool down phase is not adhered, projector lifetime could be degraded.

3. Remove the power cord from the AC outlet.

6.4 Power mode transitions

Power transition diagram

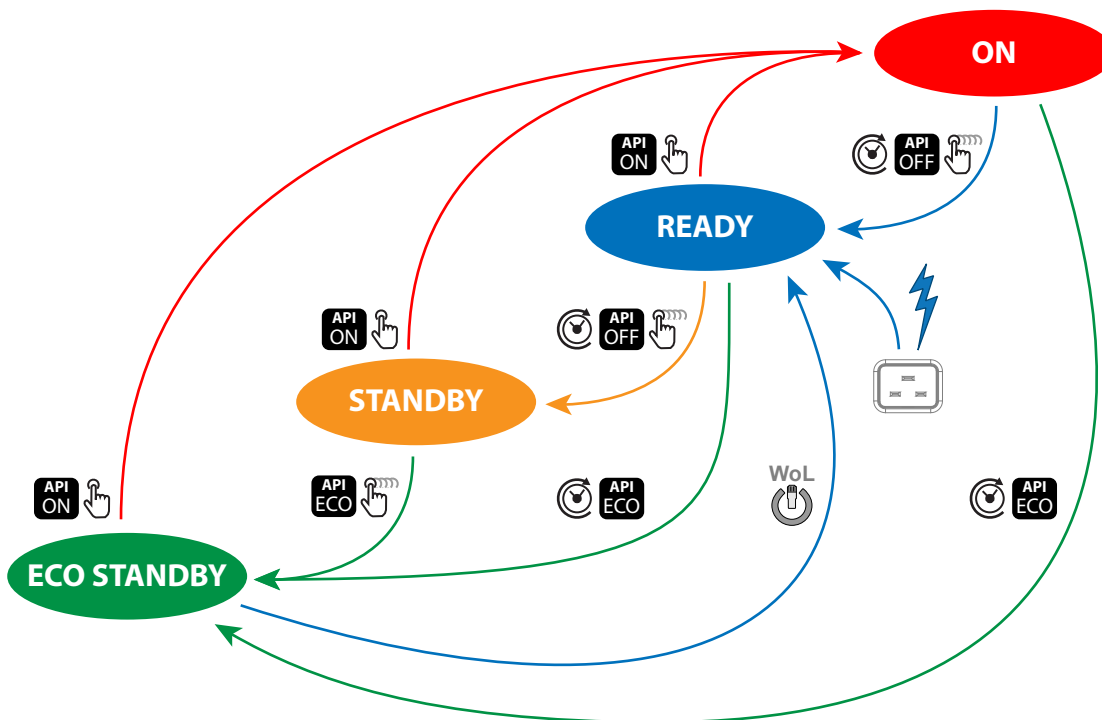


Image 6-3

Symbol	Description
	Short pressing the Power on/off button on the local keypad or on the remote control unit.
	Long pressing the Power on/off button on the local keypad or on the remote control unit.
	Wake-On-LAN (WOL). Only works if a network was connected with the LAN port of the projector while the projector went to ECO STANDBY .
	API command to change the power state of the projector (Power ON, Power OFF, Go to ECO). See Pulse user guide for more info (E.g. PJLink).

Symbol**Description**

Auto light source off and **auto standby** features. Default disabled (factory settings). For configuration see power saving settings in the Pulse user guide.



The projector starts default up in **READY** mode when plugging in the power cord.

Wake-On-LAN (WOL)

Wake-On-LAN (WOL), the standard ethernet network command, can be used to awakened or to turn on the projector by network message.

Used alone, the WOL command allows to switch in **READY** mode. A JSON command must be performed in addition to make the projector turn in to **ON** mode:

1. Send WOL.
2. Wait for connection to façade/prospector (the unit does provide feedback when it's ready).
3. Wait for ready state.
4. Sleep 5 seconds.
5. Send JSON "power on" command (to switch in **ON** mode).

**Wake-On-LAN (WOL)**

The link speed of the projector network interface in ECO mode is reduced to 10Mbit/s. This is standard practice in the industry to not waste power. Hence, the network connected with the projector must support such a low link speed to enable the remote wake up of the projector. This implies that all peripherals (switchers, routers...) in the network path must support WOL and configured correctly to support WOL.

Inputs & Communication

7

7.1	Control & Communication module.....	44
7.2	Pulse Quad Combo input Mk II	45
7.3	Pulse Quad Combo input Mk III	46
7.4	Pulse Quad DP 1.2 input	47
7.5	Pulse SFP input.....	48

7.1 Control & Communication module

Front panel Control & Communication module

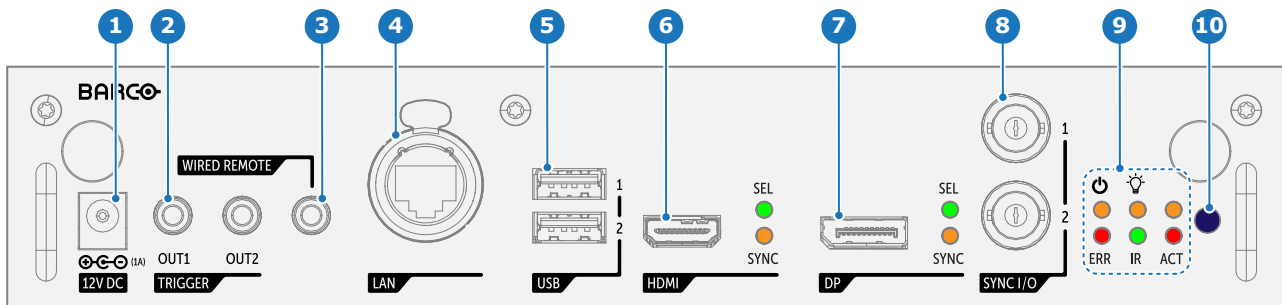


Image 7-1

- | | |
|--|---|
| <p>1 12V DC
2 TRIGGER
3 WIRED REMOTE
4 LAN
5 USB</p> | <p>6 HDMI™
7 DP
8 SYNC I/O
9 Projector status LEDs
10 IR receiver</p> |
|--|---|

Functionality

Nr	Name	Description
1	12V DC	12 V DC output, maximum 1A available when projector is not in standby.
2	TRIGGER	Two 3.5 mm mini jack connectors (OUT1 & OUT2) for controlling peripherals like motorized screens, curtains etc. Give 12V DC, 0.5A (6W) output when projector is switched on. Note: If the TRIGGER outputs are loaded too heavy, there is a risk that the projector will go in reset mode, and restart. This causes no damage to the projector, but is an undesirable response. This will also happen if the startup current for the external equipment is too high, even though the nominal power consumption is less than 0,5A
3	WIRED REMOTE	Connect the RCU via a 3.5 mm mini jack with the wired remote input to control the projector without interference.
4	LAN	Standard RJ45 connector for external projector control over IP and Art-Net. Note: Ethernet should only be connected to either the 10/100 base-T port of the Control & Communication module, or the HDBaseT input of the HDBaseT input module, or the HDBaseT input of the Quad Combo Input Mk II. Using HDBaseT inputs of different modules simultaneously will lead to undefined behavior.
5	USB	2 x USB 2.0 type A. These USB ports will simplify the service procedures for firmware updates or for downloading the log files without a network connection. The USB ports can also be used to insert the Pulse WiFi module (USB-dongle). If the only file on the USB device is the firmware file (a “*.fw” file), the projector will automatically start one of the following processes: <ul style="list-style-type: none"> • cornet<version nr>.fw: The projector will upgrade or downgrade, depending on the version number. • LogExtractor.fw: The log files will be downloaded. Note: Make sure that any used USB-stick is FAT32 compatible and contains no other files or folders.
6	HDMI™	Standard HDMI 2.1 input port for source connection to the projector.
7	DP	Standard DisplayPort™ (1.4), for source connection to the projector.
8	SYNC I/O	BNC sync port in/out for projector control. This is mainly used in multiple projector installations with requirement of synchronization between the units.
9	Status LEDs	Projector status LEDs (see chapter “ Projector status ”, page 23).
10	IR	Infra Red receiver.

7.2 Pulse Quad Combo input Mk II

Front panel Quad Combo Input Mk II

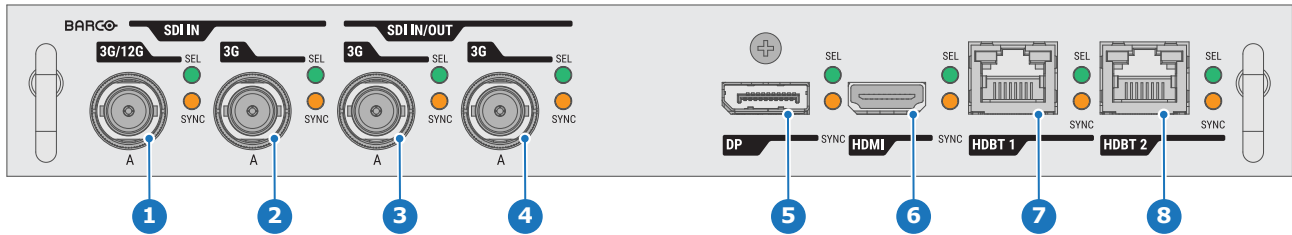


Image 7-2

- | | |
|---|--|
| <ul style="list-style-type: none"> 1 Quad SDI channel A: 3G/12G input 2 Quad SDI channel B: 3G input 3 Quad SDI channel C: 3G SDI input + 3G/12G output 4 Quad SDI channel D: 3G SDI input / output | <ul style="list-style-type: none"> 5 DisplayPort Input 6 HDMI™ input 7 HDBaseT input 1 8 HDBaseT input 2 |
|---|--|

Functionality of the Quad Combo input Mk II

The Quad Combo Input Mk II support 12G input and throughput on the SDI connectors.

Compared with the Mk I the Mk II includes the following:

- **SDI input A** supports **12G** input signals.
- **SDI input C** functions as a **loop-through output** for any signal placed on **input A**.
- **SDI input D** functions as a **loop-through output** for any signal placed on **input B**.
- **HDBaseT input 1** supports **network connectivity**.



CAUTION: Ethernet should only be connected to either the 10/100 base-T port (on the communication panel) or the HDBaseT input (on the Quad Combo Input). Using both at the same time will lead to undefined behavior.

SDI input & output – How does it work?

When connecting an SDI source to the projector and the signal is HD or 3G, you can choose any of the four input connectors.

When connecting multiple projectors with the same signal, you can connect the signal as follows:

- Connect the source signal to Input A or B of the first projector.
- If the source signal is connected to **input A**, connect **input/output C** to the Input of the following projector.
- If the source signal is connected to **input B**, connect **input/output D** to the Input of the following projector.
- Continue in the same fashion until all projectors are connected.

When connecting a 12G SDI source to the projector, you can only connect that source to input A.



Only Input A accepts 12G SDI signals . While it is technically possible to connect a 12G SDI source to Input B and connect that source to another projector in line (using Input/Output D), this first projector itself will not be able to process the 12G signal.

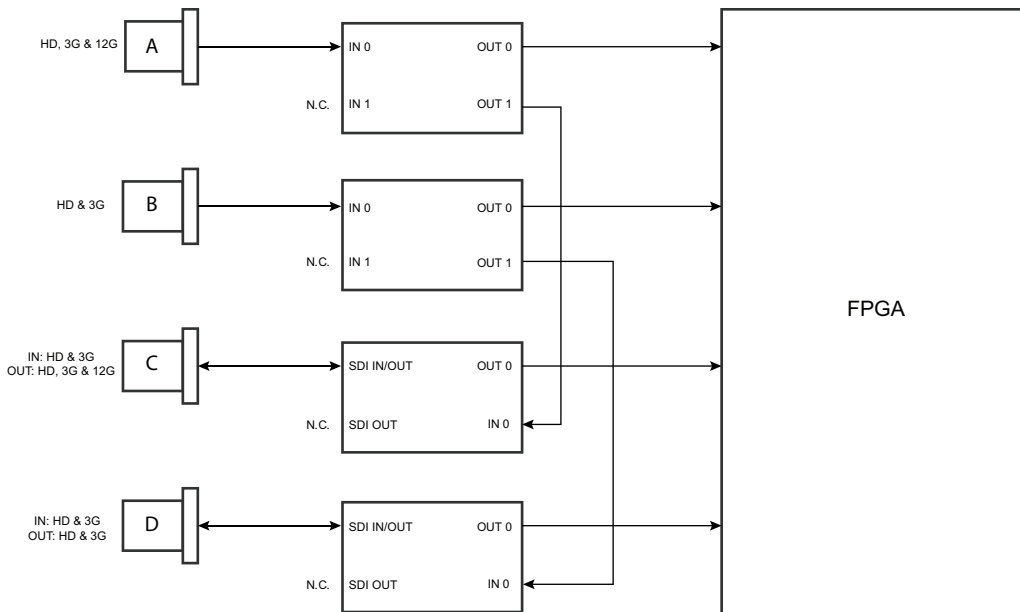


Image 7-3

LED behavior

- The SYNC LED lights up ORANGE when valid input sync is detected.
- The SEL LED lights up GREEN when the input is selected.
- The SEL LED blinks GREEN when the input/output is selected and configured as output.



For specifications about the supported inputs for SDI, HDMI, HDBaseT and DisplayPort 1.2 see chapter “Specifications”, page 55.

7.3 Pulse Quad Combo input Mk III

Front panel Quad Combo Input Mk III

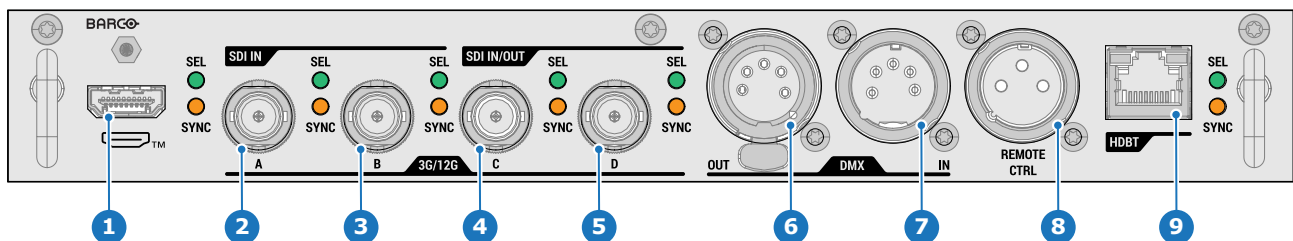


Image 7-4

- | | |
|---|---|
| <ul style="list-style-type: none"> 1 HDMI™ input¹ 2 Quad SDI channel A: 3G/12G input 3 Quad SDI channel B: 3G/12G input 4 Quad SDI channel C: 3G/12G input/output 5 Quad SDI channel D: 3G/12G input/output | <ul style="list-style-type: none"> 6 DMX interface input 7 DMX interface output 8 XLR for wired projector control 9 HDBaseT input |
|---|---|

HDMI™

Supports HDMI 2.1 features (FRL up to 4 lanes 12G)

SDI ports – How does it work?

- The **SDI port A, B, C** and **D** supports **3G/12G** input signals.
- The **SDI port C** functions as a **loop-through output** for any signal placed on **port A**.

1. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

- The **SDI port D** functions as a **loop-through output** for any signal placed on **port B**.

When connecting multiple projectors with the same signal, you can connect the signal as follows:

- Connect the source signal to Input A or B of the first projector.
- If the source signal is connected to **input A**, connect **input/output C** to the Input of the following projector.
- If the source signal is connected to **input B**, connect **input/output D** to the Input of the following projector.
- Continue in the same fashion until all projectors are connected.

DMX interface

DMX is used as communication bus between different devices in the light technic. Each device has an input and an output, so that the bus can be looped between the different devices. According the standard a five wire cable with XLR connector is used.

You can use the DMX input port to connect a DMX device (DMX console) to the projector. This way you can control the projector from that DMX device (console). The DMX output port can be connected with the next device in the loop.

DMX

Pin	Description
1	Earth
2	Cold
3	Hot
4	Return - (or not used)
5	Return + (or not used)



DMX

DMX-512 Lighting protocol over RS-485 interface. Carries information of 512 channels from a lighting controller to lighting devices. Standardized by USITT.

HDBaseT port

HDBaset 3.0 (up to 4k60 RGB 444).

The HDBaseT port does not supports network connectivity.

LED behavior

- The SYNC LED lights up ORANGE when valid input sync is detected.
- The SEL LED lights up GREEN when the input is selected.
- The SEL LED blinks GREEN when the input/output is selected and configured as output.



For specifications about the supported inputs for SDI, HDMI, HDBaseT and DisplayPort 1.2 see chapter "[Specifications](#)", [page 55](#).

7.4 Pulse Quad DP 1.2 input

Front panel Quad DP 1.2 input

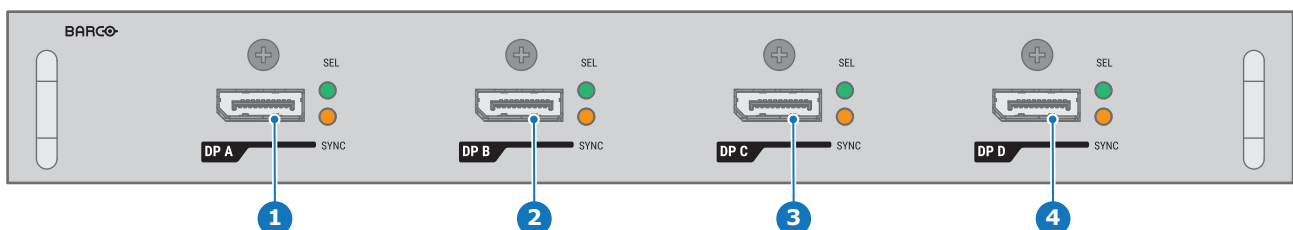


Image 7-5

- 1 Quad DisplayPort channel A input
- 2 Quad DisplayPort channel B input
- 3 Quad DisplayPort channel C input
- 4 Quad DisplayPort channel D input

LED behavior

- The SYNC LED lights up ORANGE when valid input sync is detected.
- The SEL LED lights up GREEN when the input is selected.



For specifications about the supported inputs for DisplayPort 1.2 see chapter “Specifications”, page 55.

7.5 Pulse SFP input



The Barco SFP Input Board has been designed and tested to work alongside the Barco SFP Output Board.

However, it is possible that the SFP Input board can also work with other third-party devices that support 12G over fiber. Due to the many third-party options available on the market, the input board could not be tested for every option available.

Overview SFP input

The SFP Input board is used to connect 12G SDI over fiber. The SFP input is delivered without any connector. It is up to the customer to buy the necessary connectors, transceivers and cables. These parts can be mounted on the indicated places on the front panel of the board.

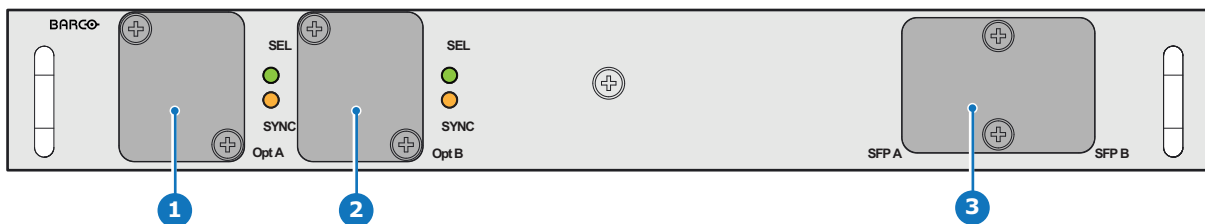


Image 7-6

- 1 Neutrik Duo optical connector or Neutrik Quad optical connector
- 2 Neutrik Duo optical connector or Neutrik Quad optical connector
- 3 2x12G SDI/10GE transceiver



For specifications about the supported inputs for SFP see chapter “Specifications”, page 55.

LED behavior

- The SYNC LED lights up ORANGE when valid input sync is detected.
- The SEL LED lights up GREEN when the input is selected.

Use cases

The SFP can be configured as follows:

1. SFP+ transceiver + Fiber connection (integrated or separated)
2. Neutrik OpticalCon Duo + SFP+ transceiver + internal fiber
3. Neutrik OpticalCon Quad + SFP+ transceiver + internal fiber
4. Loop-through mode



See projector installation manual for detailed instructions on how to install/configure the SFP input.



WARNING: Only by Barco trained and qualified technicians are allowed to install the SFP input.



Optical Transceiver to comply with Laser Class 1, IEC60825-1: 2014

Projector maintenance

8

8.1	Software update	52
8.2	Cleaning the lens	53
8.3	Cleaning the exterior of the projector	54

8.1 Software update



CAUTION: Do not power off or unplug the projector while the software update is ongoing. Similarly, do not remove the USB flash drive while the software update is ongoing.

Prerequisites

First download the latest projector software package from the Barco's website.

Required tools

USB flash drive

How to update the software using Pulse Prospector

1. Ensure the projector is in Ready mode.
2. Connect to Pulse Prospector of the projector.
3. Log in as Power user or higher
4. Select *Service > Firmware > Update* in the sidebar.
5. Drag and drop the projector update file in to the dotted area in the *Firmware Update* pane.

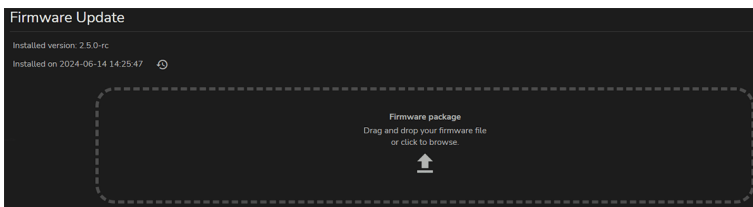


Image 8-1



Note: Do NOT turn off, power down, or remove mains power supply while the upgrade is in progress.



Note: During the firmware update, the projector will restart at some point in the process.

The firmware update process will start, and continue until finished.



For more info on the Pulse Prospector, see the Pulse Prospector user guide.

How to update the software if the projector isn't connected to the network

1. Take a clean USB flash drive and create the following folder structure:

/Barco/Firmware



Note: Make sure the flash drive is compatible either with FAT32 or NTFS².

2. Place the correct projector update file (format .fw) in the Firmware folder.
3. Ensure the projector is in Ready mode.
4. Log in with the credentials of Power user or higher.
5. Plug the flash drive in the USB port on the Communication Panel.

A window will be prompted with the available software update packages.

² NTFS is only supported from Pulse 2.5 and later.

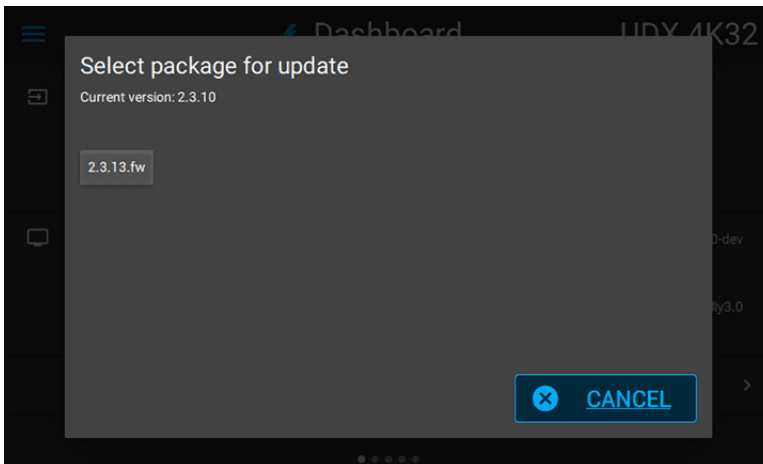


Image 8–2 Example of software packages available on the flash drive.

6. Select the desired package and confirm.

A software update dialog will be prompted, requesting confirmation.

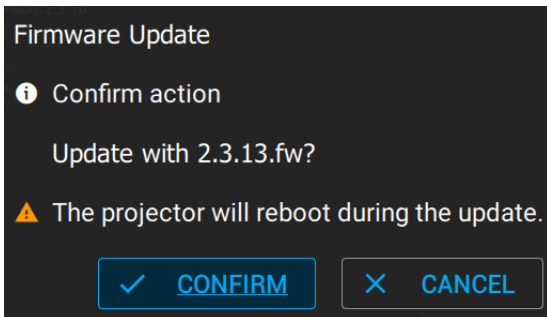



Image 8–3 Example of a Software update dialog prompt

7. Select *Confirm* to start the software update process.

-  **Note:** Once initiated, the update procedure can take up to 20 minutes to complete. During this process the projector will reboot at least once. The LCD display will show the current status of the update during the update process.

8. Once the LCD display shows that the update process has been completed, it is safe to remove the USB flash drive.



CAUTION: While it is technically possible to “downgrade” the software to an older version using this method, it is **NOT** recommended and should be avoided as much as possible. Certain features will no longer be supported, projectors can display unwanted behavior during the downgrade and in some rare cases, this may even bring damage to the device. Always contact Barco if you want to make sure a downgrade will not hurt your device.

8.2 Cleaning the lens



To minimize the possibility of damage to optical coatings, or scratches to lens surfaces follow the cleaning procedure as described here precisely.

Required tools

- Compressed air
- Clean cotton cloth
- Clean micro fiber lens cleaning cloth (e.g. Toraysee® cloth(s))
- Lens cleaner (e.g. Zeiss lens cleaner, Purosol® or any water based lens cleaner)

How to clean the lens?

1. Blow off dust with clean compressed air (or pressurized air cans³).
2. Clean with lens cleaner together with a clean lens cleaning cloth to remove the dust and contamination. Use big wipes in one single direction.



Warning: Do not wipe back and forwards across the lens surface as this tends to grind dirt into the coating.

3. Use a dry lens cleaning cloth to remove left liquid or stripes. Polish with small circles.
4. If there are still fingerprints on the surface, wipe them off with lens cleaner together with a clean lens cleaning cloth. Polish again with a dry one.



If smears occur when cleaning lenses, replace the cloth. Smears are the first indication of a dirty cloth.

8.3 Cleaning the exterior of the projector

How to clean the exterior of the projector ?

1. Switch off the projector and unplug the projector from the mains power net.
2. Clean the housing of the projector with a damp cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution.

3. Pressurized air cans are not efficient if there is too much dust on the surface, the pressure is too low

Specifications

A

A.1	I600-4K8 specifications	56
A.2	I600-4K10 specifications	57
A.3	I600-4K15 specifications	59
A.4	Specifications SDI inputs	61
A.5	Specifications HDMI inputs	62
A.6	Specifications HDBaseT inputs	63
A.7	Specifications DisplayPort 1.2 inputs	64
A.8	Specifications SFP inputs	65

A.1 I600-4K8 specifications

Notes	The specifications in this document are preliminary
Projector type	4K UHD 1-chip DLP digital projector
Technology	0.8" DMD™
IR for NVG	No
Resolution	3840 x 2400 (4K UHD) 1920 x 1200 (native)
Brightness	8000 ISO lumen
Brightness uniformity	>90%
Contrast ratio	1.200:1
Light source	Blue laser phosphor with inorganic phosphor wheel
Light source lifetime	20.000hrs
Aspect ratio	16:10 Native
Color space	REC 709
Orientation	360° rotation no restrictions
Sealed DLP™ core	Yes
24/7 operation	Yes
Processing	Pulse electronics
Color correction	P7 RealColor™
CLO (constant light output)	Yes
Keystone correction	Yes
Image processing	Embedded warp & blend
3D	Active stereoscopic 3D / Passive stereo compatible Max 4K @120Hz or WUXGA at 240Hz 1xHDMI™/1xDP frame sequential or through the optional 4xDP1.2 input board
Picture-by-picture	Two sources simultaneously *
Lens type	ILD
Optical lens shift	Vertical up to 110% depending on lens Horizontal up to 30% depending on lens
Throw Ratio	From 0.37 to 7.4
Lens range	ILD lenses - 0.37:1 / 0.5:1 / 0.65-0.8:1 / 0.8-1.0:1 / 1.0-1.4:1 / 1.4-2.1:1 / 2.1-4.0:1 / 4.0-7.4:1
Prime lenses	N/A
Inputs	HDMI™2.1 (HDCP2.2) / DP1.4 / RJ45 Ethernet / USB(5v) / 12V out / BNC 3D sync in-out
Optional Inputs	Quad DP1.2 Fiber SFP HDBaseT V3

	Input Module DP1.2 HDMI™2.0 DUAL HDBaseT Quad 12G (+loop)
Input resolutions	Including and up to: 1920x1200@240Hz 3840x2400@120Hz
Input color depth	up to 36 bpp
Software tools	Projector Toolset + Android app + iOS app + IMS
Control	IR RJ45
Network connection	10/100/1000 Mbit, Wifi (through optional dongle)
User interface	LCD touch local keypad remote control wired remote control
Web browser	Yes
Power requirements	100-240V / 15A-6A / 50-60Hz
Power consumption	640W Typical
Standby power	< 0.5W
Noise level (typical at 25°C/ 77°F)	40dB(A)
Operating temperature	5°-40°C / 41°-104°F (sea level)
Operating humidity	10% - 80% RH (non-condensed)
Storage temperature	-20 to 60 °C
Storage humidity	10 - 90% RH (non-condensed)
Dimensions (WxLxH)	without feet: 504x524x207mm / 19.8 x 20.6 x 8.1in
Weight	without lens: below 23.7 kg / 52.3 lbs
Standard accessories	Power cord, wireless remote control
Housing	Plastic cover
Certifications	Compliant with UL: UL 62368-1, EN IEC 62368-1, and GB 4943.1; Complies with FCC rules & regulations: Part 15 Class A and CE EN55022 Class A, GB/T 9254.1 A级 and GB 17625.1; RoHS;
Warranty	Limited 3 years on parts and labor Extendable up to 5 years Service: single swap
Blend	horizontal and vertical edge blending
*	Supported when using of the optional 4x1.2 DP input board

A.2 I600-4K10 specifications

Notes	The specifications in this document are preliminary
Projector type	4K UHD 1-chip DLP digital projector
Technology	0.8" DMD™

IR for NVG	No
Resolution	3840 x 2400 (4K UHD) 1920 x 1200 (native)
Brightness	10000 ISO lumen
Brightness uniformity	>90%
Contrast ratio	1.200:1
Light source	Blue laser phosphor with inorganic phosphor wheel
Light source lifetime	20.000hrs
Aspect ratio	16:10 Native
Color space	REC 709
Orientation	360° rotation no restrictions
Sealed DLP™ core	Yes
24/7 operation	Yes
Processing	Pulse electronics
Color correction	P7 RealColor™
CLO (constant light output)	Yes
Keystone correction	Yes
Image processing	Embedded warp & blend
3D	Active stereoscopic 3D / Passive stereo compatible Max 4K @120Hz or WUXGA at 240Hz 1xHDMI™/1xDP frame sequential or through the optional 4xDP1.2 input board
Picture-by-picture	Two sources simultaneously *
Lens type	ILD
Optical lens shift	Vertical up to 110% depending on lens Horizontal up to 30% depending on lens
Throw Ratio	From 0.37 to 7.4
Lens range	ILD lenses - 0.37:1 / 0.5:1 / 0.65-0.8:1 / 0.8-1.0:1 / 1.0-1.4:1 / 1.4-2.1:1 / 2.1-4.0:1 / 4.0-7.4:1
Prime lenses	N/A
Inputs	HDMI™2.1 (HDCP2.2) / DP1.4 / RJ45 Ethernet / USB(5v) / 12V out / BNC 3D sync in-out
Optional Inputs	Quad DP1.2 Fiber SFP HDBaseT V3 Input Module DP1.2 HDMI™2.0 DUAL HDBaseT Quad 12G (+loop)
Input resolutions	Including and up to: 1920x1200@240Hz 3840x2400@120Hz
Input color depth	up to 36 bpp

Software tools	Projector Toolset + Android app + iOS app + IMS
Control	IR RJ45
Network connection	10/100/1000 Mbit, Wifi (through optional dongle)
User interface	LCD touch local keypath remote control wired remote control
Web browser	Yes
Power requirements	100-240V / 15A-6A / 50-60Hz
Power consumption	860W Typical
Standby power	< 0.5W
Noise level (typical at 25°C/ 77°F)	40dB(A)
Operating temperature	5°-40°C / 41°-104°F (sea level)
Operating humidity	10% - 80% RH (non-condensed)
Storage temperature	-20 to 60 °C
Storage humidity	10 - 90% RH (non-condensed)
Dimensions (WxLxH)	without feet: 504x524x207mm / 19.8 x 20.6 x 8.1in
Weight	without lens: below 23.7 kg / 52.3 lbs
Standard accessories	Power cord, wireless remote control
Housing	Plastic cover
Certifications	Compliant with UL: UL 62368-1, EN IEC 62368-1, and GB 4943.1; Complies with FCC rules & regulations: Part 15 Class A and CE EN55022 Class A, GB/T 9254.1 A级 and GB 17625.1; RoHS;
Warranty	Limited 3 years on parts and labor Extendable up to 5 years Service: single swap
Blend	horizontal and vertical edge blending
*	Supported when using of the optional 4x1.2 DP input board

A.3 I600-4K15 specifications

Notes	The specifications in this document are preliminary
Projector type	4K UHD 1-chip DLP digital projector
Technology	0.8" DMD™
IR for NVG	No
Resolution	3840 x 2400 (4K UHD) 1920 x 1200 (native)
Brightness	14000 ISO lumen
Brightness uniformity	>90%

Contrast ratio	1.200:1
Light source	Blue laser phosphor with inorganic phosphor wheel
Light source lifetime	20.000hrs
Aspect ratio	16:10 Native
Color space	REC 709
Orientation	360° rotation no restrictions
Sealed DLP™ core	Yes
24/7 operation	Yes
Processing	Pulse electronics
Color correction	P7 RealColor™
CLO (constant light output)	Yes
Keystone correction	Yes
Image processing	Embedded warp & blend
3D	Active stereoscopic 3D / Passive stereo compatible Max 4K @120Hz or WUXGA at 240Hz 1xHDMI™/1xDP frame sequential or through the optional 4xDP1.2 input board
Picture-by-picture	Two sources simultaneously *
Lens type	ILD
Optical lens shift	Vertical up to 110% depending on lens Horizontal up to 30% depending on lens
Throw Ratio	From 0.37 to 7.4
Lens range	ILD lenses - 0.37:1 / 0.5:1 / 0.65-0.8:1 / 0.8-1.0:1 / 1.0-1.4:1 / 1.4-2.1:1 / 2.1-4.0:1 / 4.0-7.4:1
Prime lenses	N/A
Inputs	HDMI™2.1 (HDCP2.2) / DP1.4 / RJ45 Ethernet / USB(5v) / 12V out / BNC 3D sync in-out
Optional Inputs	Quad DP1.2 Fiber SFP HDBaseT V3 Input Module DP1.2 HDMI™2.0 DUAL HDBaseT Quad 12G (+loop)
Input resolutions	Including and up to: 1920x1200@240Hz 3840x2400@120Hz
Input color depth	up to 36 bpp
Software tools	Projector Toolset + Android app + iOS app + IMS
Control	IR RJ45
Network connection	10/100/1000 Mbit, Wifi (through optional dongle)
User interface	LCD touch local keypad remote control wired remote control
Web browser	Yes

Power requirements	100-240V / 15A-6A / 50-60Hz
Power consumption	1200W Typical
Standby power	< 0.5W
Noise Level	40dB(A)
Operating temperature	5°-40°C / 41°-104°F (sea level)
Operating humidity	10% - 80% RH (non-condensed)
Storage temperature	-20 to 60 °C
Storage humidity	10 - 90% RH (non-condensed)
Dimensions (WxLxH)	without feet: 504x524x207mm / 19.8 x 20.6 x 8.1in
Weight	without lens: 23.7 kg / 52.3 lbs
Standard accessories	Power cord, wireless remote control
Housing	Plastic cover
Certifications	Compliant with UL: UL 62368-1, EN IEC 62368-1, and GB 4943.1; Complies with FCC rules & regulations: Part 15 Class A and CE EN55022 Class A, GB/T 9254.1 A级 and GB 17625.1; RoHS;
Warranty	Limited 3 years on parts and labor Extendable up to 5 years Service: single swap
Blend	horizontal and vertical edge blending
*	Supported when using of the optional 4x1.2 DP input board

A.4 Specifications SDI inputs



For readability, the video timings listed are summarized. For the full list of video timings, refer to the appendices.



HD-SDI follows the SMPTE 292M standard.
3G SDI follows the SMPTE 425M standard Level A.
12G-SDI⁴ follows the SMPTE ST-2082-1 and ST-2082-10 standards.

SDI specifications

Specification	Value
Color space	YCbCr
Color depth	10 bpc
Chroma sampling	4:2:2
Audio	not supported
For future release	<ul style="list-style-type: none"> • 3D support • Interlaced support • Segmented frame support

4. Quad Combo Input Mk II only.

Specification	Value		
Video timings progressive ⁵	Type	Port type	Format
	HD-SDI	Single link Quad link	<ul style="list-style-type: none"> Up to 1920 x 1080 @24 Hz Up to 1920 x 1080 @25 Hz Up to 1920 x 1080 @30 Hz Up to 1280 x 720 @50 Hz Up to 1280 x 720 @60 Hz
	3G-SDI Level A ⁶	Single link Quad link	Up to 2048 x 1080 @50 Hz Up to 2048 x 1080 @60 Hz
	3G-SDI "BarcoLink"	Single link Quad link	1920 x 1200 @50 Hz, @59.94 Hz and @60 Hz
	12G-SDI (Channel A only)	Single link	3840 x 2160 @50 Hz and @60 Hz 4096 x 2160 @50 Hz and @60 Hz
12G-SDI "BarcoLink 4k" (Channel A only)	Single link	3840 x 2400 @50 Hz, @59.94 Hz and @60 Hz.	

A.5 Specifications HDMI inputs



For readability, the video timings listed are summarized. For the full list of video timings, refer to the appendices.

HDMI specifications

Specification	Value
Pixel rate	25 – 600 MHz pixel clock
HDCP support	<ul style="list-style-type: none"> HDCP 1.x HDCP 2.2 RGB 4:4:4
Color space	<ul style="list-style-type: none"> YCbCr 4:2:0 YCbCr 4:2:2 YCbCr 4:4:4 RGB 4:4:4
Color depth	<ul style="list-style-type: none"> 24 bpp 30 bpp 36 bpp
3D support	<ul style="list-style-type: none"> Field sequential 3D (Active 3D) <ul style="list-style-type: none"> Frame-packed Top Bottom progressive Side-by-side progressive Passive 3D not supported.
For future release	<ul style="list-style-type: none"> Interlaced support
Audio	Not supported

5. For the full list of video timings, see Appendix user guide

6. Quad Combo Input Mk I only.

Specification	Value
Video timings ⁵	<ul style="list-style-type: none"> Up to 4096 x 2160 @24 Hz Up to 4096 x 2160 @25 Hz Up to 4096 x 2160 @30 Hz Up to 2048 x 1080 @48 Hz Up to 4096 x 2160 @50 Hz Up to 4096 x 2160 @60 Hz
Native video timings	<ul style="list-style-type: none"> UDM-W: 1920 x 1200 @60 Hz UDM-4K: 3840 x 2400 @60 Hz

A.6 Specifications HDBaseT inputs



For readability, the video timings listed are summarized. For the full list of video timings, refer to the appendices.

HDBase T specifications

Specification	Value						
Pixel rate	25 – 297 MHz pixel clock						
Color space	<ul style="list-style-type: none"> YCbCr 4:2:2 YCbCr 4:4:4 RGB 4:4:4 						
Color depth	<ul style="list-style-type: none"> 24 bpp 30 bpp 36 bpp 						
HDCP support	HDCP 1.x supported on HDBaseT Input 1						
Network support	Yes, on HDBaseT Input 1						
For future release	<ul style="list-style-type: none"> 3D support Interlaced support 						
Not supported	<ul style="list-style-type: none"> Audio Power over HDBaseT 						
Video timings progressive ⁵	<table border="1"> <thead> <tr> <th>Layout mode</th> <th>Supported formats</th> </tr> </thead> <tbody> <tr> <td>Standard layout (1x1 layout)</td> <td> <ul style="list-style-type: none"> Up to 4096 x 2160 @24 Hz Up to 4096 x 2160 @25 Hz Up to 4096 x 2160 @30 Hz Up to 2048 x 1080 @48 Hz Up to 2560 x 1600 @50 Hz Up to 2560 x 1600 @60 Hz </td> </tr> <tr> <td>2 Column mode (2x1 layout)</td> <td> <ul style="list-style-type: none"> 1920 x 2160 @50 Hz 1920 x 2160 @60 Hz 2048 x 2160 @50 Hz 2048 x 2400 @60 Hz </td> </tr> </tbody> </table>	Layout mode	Supported formats	Standard layout (1x1 layout)	<ul style="list-style-type: none"> Up to 4096 x 2160 @24 Hz Up to 4096 x 2160 @25 Hz Up to 4096 x 2160 @30 Hz Up to 2048 x 1080 @48 Hz Up to 2560 x 1600 @50 Hz Up to 2560 x 1600 @60 Hz 	2 Column mode (2x1 layout)	<ul style="list-style-type: none"> 1920 x 2160 @50 Hz 1920 x 2160 @60 Hz 2048 x 2160 @50 Hz 2048 x 2400 @60 Hz
	Layout mode	Supported formats					
Standard layout (1x1 layout)	<ul style="list-style-type: none"> Up to 4096 x 2160 @24 Hz Up to 4096 x 2160 @25 Hz Up to 4096 x 2160 @30 Hz Up to 2048 x 1080 @48 Hz Up to 2560 x 1600 @50 Hz Up to 2560 x 1600 @60 Hz 						
2 Column mode (2x1 layout)	<ul style="list-style-type: none"> 1920 x 2160 @50 Hz 1920 x 2160 @60 Hz 2048 x 2160 @50 Hz 2048 x 2400 @60 Hz 						
Native video timings	<ul style="list-style-type: none"> UDX-U-series: 1600 x 1200 @60 Hz UDX-W-series: 1920 x 1200 @60 Hz UDX-4k-series: 3840 x 2160 @60 Hz 						



CAUTION: The HDBaseT inputs can bridge a distance of 100 m but are sensitive to radiated electromagnetic interference: radiated electromagnetic interference (e.g. from GSM or switching inductive or capacitive loads) within the limits of electromagnetic compatibility requirements of 3 V/m can cause random flashes or temporary loss of the projected image.

As such, shielded CAT-6 cables with metal RJ-45 connectors are recommended; choose cable length no longer than required and route HDBT cable optimally screened from possible sources of electromagnetic emission.

A.7 Specifications DisplayPort 1.2 inputs



For readability, the video timings listed are summarized. For the full list of video timings, refer to the appendices.

DisplayPort 1.2 specifications

Pixel rate	Up to 600 MHz pixel clock		
Color space	<ul style="list-style-type: none"> • YCbCr 4:2:2 • YCbCr 4:4:4 • RGB 4:4:4 		
Color depth	<ul style="list-style-type: none"> • 24 bpp • 30 bpp • 36 bpp 		
Data rate support	<ul style="list-style-type: none"> • 1.62 Gbps: Reduced Bit Rate (RBR) • 2.7 Gbps: High Bit Rate (HBR) • 5.4 Gbps: High Bit Rate 2 (HBR2) 		
For future release	<ul style="list-style-type: none"> • Interlaced support • HDCP 1.4 		
Audio	not supported		
3D support	<ul style="list-style-type: none"> • Field sequential 3D (Active 3D) • Passive stereoscopic 3D (Passive stereo) converted to active 3D 		
Video timings progressive⁷	2D / 3D	Layout Mode⁸	Supported formats
	2D	Standard layout (1x1 layout)	<ul style="list-style-type: none"> • Up to 4096 x 2160 @24 Hz • Up to 4096 x 2160 @30 Hz • Up to 2048 x 1080 @48 Hz • Up to 4096 x 2160 @50 Hz • Up to 4096 x 2160 @60 Hz • Up to 2560 x 1600 @120 Hz
	2D	2 column mode (2x1 layout)	<ul style="list-style-type: none"> • 1920 x 2160 @60 Hz • 1920 x 2160 @120 Hz • 1920 x 2400 @60 Hz • 2048 x 2160 @60 Hz • 2048 x 2160 @120 Hz
2D	4 quadrant mode (2x2 layout)	<ul style="list-style-type: none"> • 960 x 1080 @120 Hz • 960 x 1200 @120 Hz • 1280 x 1080 @60 Hz • 1280 x 1080 @120 Hz • 1280 x 1600 @60 Hz 	

7. For the full list of video timings, see Appendix

8. Only 1x1 layout is supported on the Quad Combo input Mk1 and Mk2. The Quad DP1.2 input supports all layout configurations.

			<ul style="list-style-type: none"> • 1280 x 1600 @120 Hz • 1920 x 1080 @120 Hz • 1920 x 1200 @120 Hz • 2048 x 1080 @120 Hz
	2D	4 column mode (4x1 layout)	<ul style="list-style-type: none"> • 960 x 2160 @120 Hz • 960 x 2400 @120 Hz • 1024 x 2160 @60 Hz
	Active 3D	Standard layout (1x1 layout)	<ul style="list-style-type: none"> • 1600 x 1200 @120 Hz • 2560 x 1080 @120 Hz • 2560 x 1600 @120 Hz
	Active 3D	2 column mode (2x1 layout)	1920 x 2160 @120 Hz
	Active 3D	4 quadrant mode (2x2 layout)	<ul style="list-style-type: none"> • 1920 x 1080 @120 Hz • 1920 x 1200 @120 Hz • 2048 x 1080 @120 Hz
	Active 3D	4 column mode (4x1 layout)	<ul style="list-style-type: none"> • 960 x 2160 @120 Hz • 960 x 2400 @120 Hz • 1024 x 2160 @120 Hz
	Passive stereo	Standard layout (1x1 layout)	3840 x 2160 @60 Hz
	Passive stereo	2 column mode (2x1 layout)	1920 x 2160 @60 Hz
Native video timings	<ul style="list-style-type: none"> • UDM-W: 1920 x 1200 @60 Hz • UDM-4K: 3840 x 2400 @60 Hz 		



CAUTION: In order to display high resolution images (e.g.: 3840 x 2160 @60 Hz) via the DP1.2 input, the quality of the cable must be adequate, in addition the length of the cable can also influence the performance. In case there is an issue with one of these criteria the automatic link-training initiated by the DP-standard may decide to switch to a lower resolution.

A.8 Specifications SFP inputs



For readability, the video timings listed are summarized. For the full list of video timings, refer to the appendices.

SFP specifications

Color space	YCbCr		
Color depth	10 bpc		
Chroma sampling	4:2:2		
Audio support	not supported		
Video timings progressive⁹	Type	Port type	Format
	HD-SDI	Single link	<ul style="list-style-type: none"> • Up to 1920 x 1080 @24 Hz • Up to 1920 x 1080 @25 Hz • Up to 1920 x 1080 @30 Hz • Up to 1280 x 720 @50 Hz • Up to 1280 x 720 @60 Hz

9. For the full list of video timings, see Appendix

			<ul style="list-style-type: none"> • Up to 1280 x 720 @24 Hz • Up to 1280 x 720 @30 Hz • Up to 1280 x 720 @25 Hz
	3G-SDI	Single link	1920 x 1080 @50 Hz and @60 Hz 1920 x 1200 @50 Hz, @59.94 Hz and @60 Hz. 2048 x 1080 @50 Hz and @60 Hz
	12G-SDI	Single link	3840 x 2160 @50 Hz and @60 Hz 4096 x 2160 @50 Hz and @60 Hz 3840 x 2400 @50 Hz, @59.94 and @60 Hz

Dimensions

B

B.1	Projector outer dimensions	68
B.2	Mounting holes bottom plate	69

B.1 Projector outer dimensions

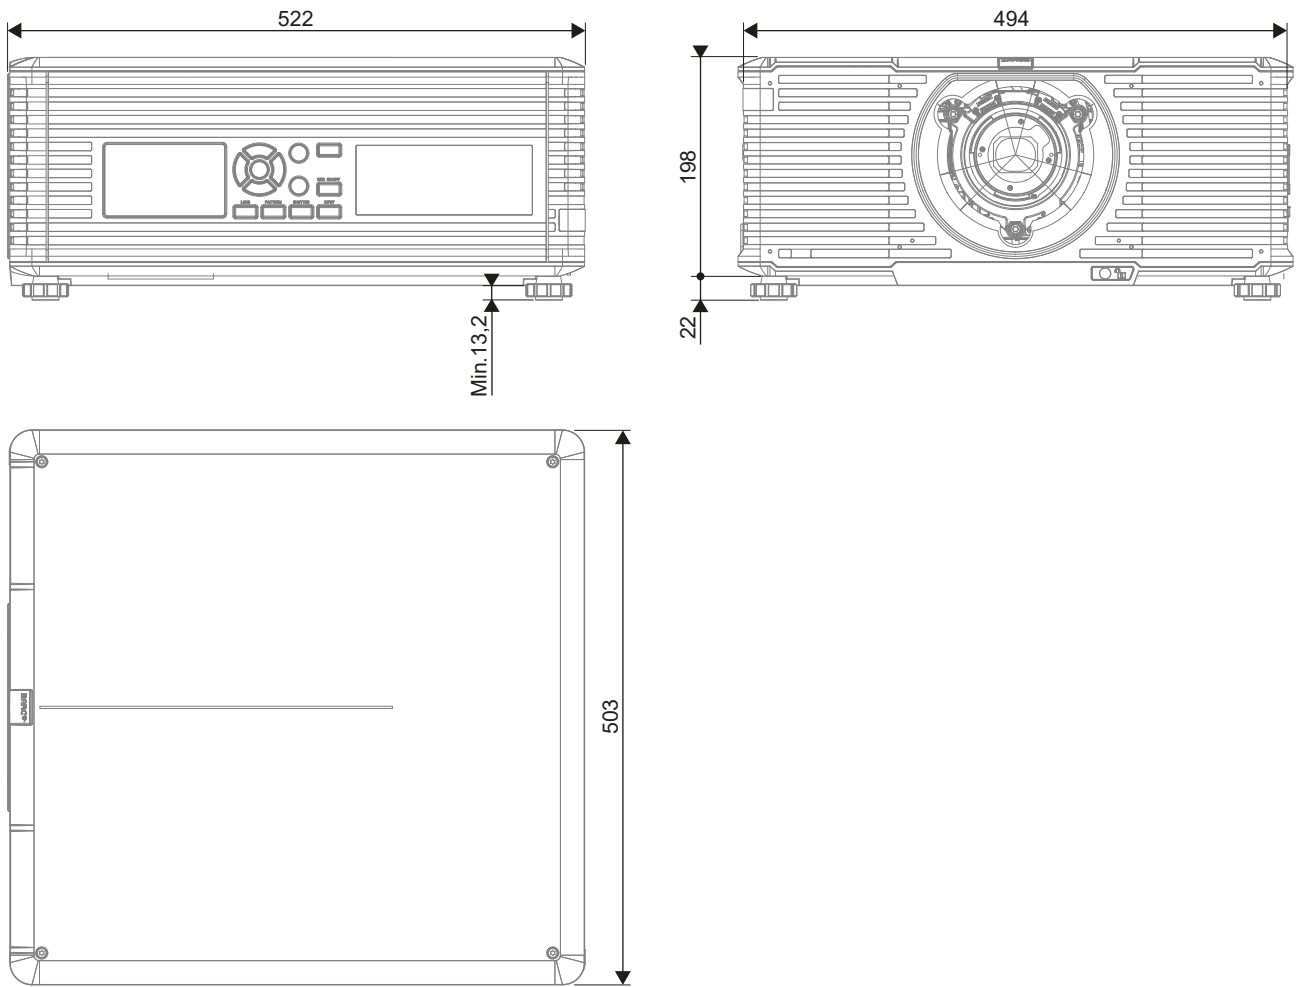


Image B-1 All dimensions given in mm.

B.2 Mounting holes bottom plate

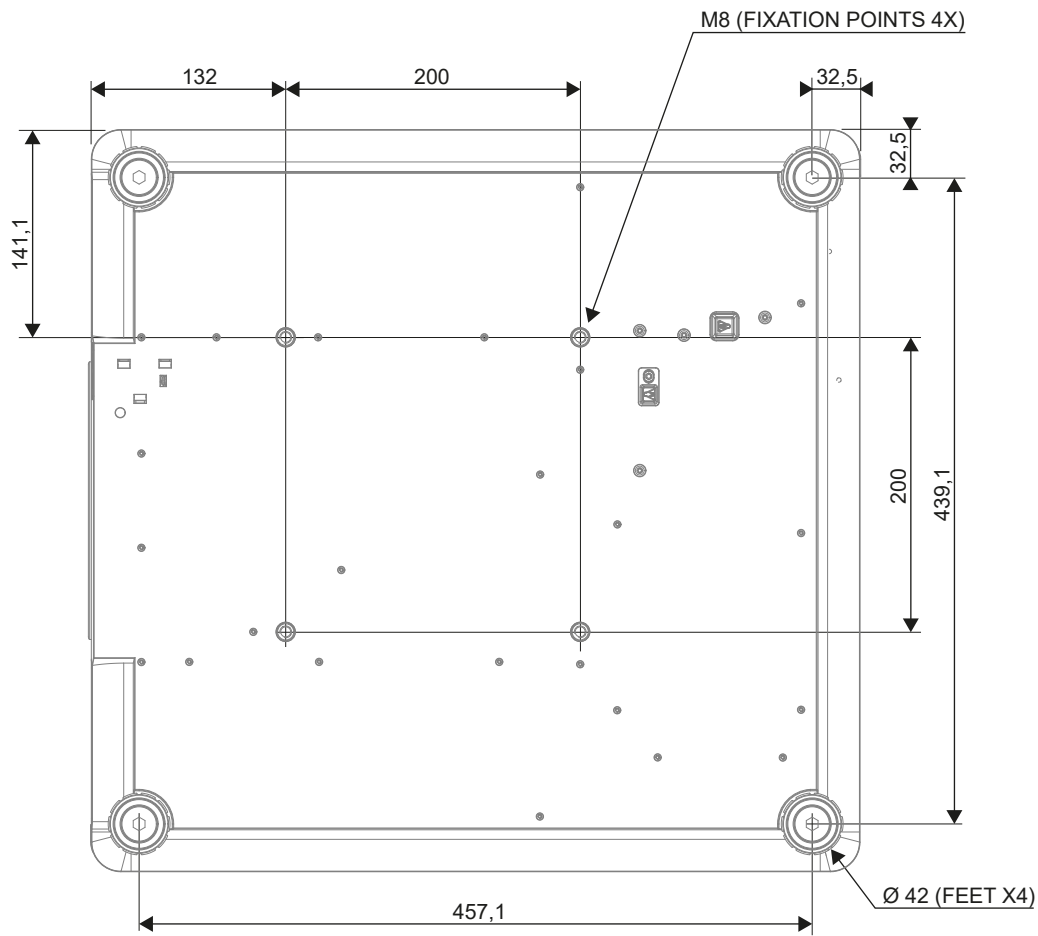


Image B-2 All dimensions given in mm.

Video timing tables

C

C.1	Overview video timings	72
C.2	Overview video timings SDI Inputs	73
C.3	Overview video timings HDMI 2.0 inputs	74
C.4	Overview video timings DisplayPort 1.2 inputs	75
C.5	Overview video timings HDBaseT inputs	78

About this chapter

This chapter contains the tables with video timings for video interfaces.

C.1 Overview video timings

List of compatible signals

The following table specifies the video signals that the projector can project. Barco Events projectors supports the signal with “X” in the Compatible signals column.

Note: Support for refresh rates 24.00, 30.00, 60.00 Hz automatically includes support of 1/1.001 x those refresh rates.

Resolution	Vertical refresh rate (Hz)	Compatible signal				
		HDMI 2.0 Inputs	12G SDI Input on Mk II Input board & Fiber Network Inputs	3G SDI Inputs	DisplayPort 1.2 Inputs	HDBaseT & HDMI 1.4 Inputs
640 x 480	60	X	—	—	X	X
720 x 480	60	X	—	—	—	X
720 x 576	50	X	—	—	—	X
800 x 600	60	X	—	—	X	X
1024 x 768	60	X	—	—	X	X
1280 x 720	24	—	X	X	—	—
1280 x 720	25	—	X	X	—	—
1280 x 720	30	—	X	X	—	—
1280 x 720	50	X	X	X	X	X
1280 x 720	60	X	X	X	X	X
1280 x 800	60	X	—	—	X	X
1280 x 960	60	X	—	—	X	X
1280 x 1024	60	X	—	—	X	X
1400 x 1050	60	X	—	—	X	X
1600 x 1200	60	X	—	—	X	X
1600 x 1200	120	—	—	—	X	—
1920 x 1080	24	X	X	X	X	X
1920 x 1080	25	X	X	X	—	X
1920 x 1080	30	X	X	X	—	X
1920 x 1080	50	X	X	X	X	X
1920 x 1080	60	X	X	X	X	X
1920 x 1080	120	—	—	—	X	—
1920 x 1200	50	X	X	X	X	X
1920 x 1200	60	X	X	X	X	X
1920 x 1200	120	—	—	—	X	—
2048 x 1080	24	X	—	—	X	X
2048 x 1080	25	X	—	—	X	X
2048 x 1080	30	X	—	—	X	X
2048 x 1080	48	X	—	—	X	X
2048 x 1080	50	X	X	X	X	X
2048 x 1080	60	X	X	X	X	X
2048 x 1080	120	—	—	—	X	—
2560 x 1600	50	X	—	—	X	X
2560 x 1600	60	X	—	—	X	X
2560 x 1600	120	—	—	—	X	—

Resolution	Vertical refresh rate (Hz)	Compatible signal				
		HDMI 2.0 Inputs	12G SDI Input on Mk II Input board & Fiber Network Inputs	3G SDI Inputs	DisplayPort 1.2 Inputs	HDBaseT & HDMI 1.4 Inputs
3840 x 2160	24	X	—	—	X	X
3840 x 2160	25	X	—	—	X	X
3840 x 2160	30	X	—	—	X	X
3840 x 2160	50	X	X	—	X	—
3840 x 2160	60	X	X	—	X	—
3840 x 2400	50	X	—	—	X	—
3840 x 2400	60	X	—	—	X	—
4096 x 2160	24	X	—	—	X	X
4096 x 2160	25	X	—	—	X	X
4096 x 2160	30	X	—	—	X	X
4096 x 2160	50	X	X	—	X	—
4096 x 2160	60	X	X	—	X	—

C.2 Overview video timings SDI Inputs

Overview

The following standard video formats are available for the projector.

Video timing (active pixels x active lines)	Vertical refresh rate (Hz) ¹⁰	Type	Port Type
1280 x 720	24	HD-SDI	Single Link & Quad Link
1280 x 720	25	HD-SDI	Single Link & Quad Link
1280 x 720	30	HD-SDI	Single Link & Quad Link
1280 x 720	50	HD-SDI	Single Link & Quad Link
1280 x 720	60	HD-SDI	Single Link & Quad Link
1920 x 1080	24	HD-SDI	Single Link & Quad Link
1920 x 1080	25	HD-SDI	Single Link & Quad Link
1920 x 1080	30	HD-SDI	Single Link & Quad Link
1920 x 1080	50	3G-SDI	Single Link & Quad Link
1920 x 1080	60	3G-SDI	Single Link & Quad Link
1920 x 1200	50	3G-SDI "BarcoLink"	Single Link & Quad Link
1920 x 1200	59.94	3G-SDI "BarcoLink"	Single Link & Quad Link
1920 x 1200	60	3G-SDI "BarcoLink"	Single Link & Quad Link
2048 x 1080	50	3G-SDI	Single Link & Quad Link

10. Support for refresh rates 24.00, 30.00 and 60.00 Hz automatically includes support of 1/1.001 x those refresh rates.

Video timing (active pixels x active lines)	Vertical refresh rate (Hz) ¹¹	Type	Port Type
2048 x 1080	60	3G-SDI	Single Link & Quad Link
3840 x 2160	50	12G-SDI ¹²	Single Link
3840 x 2160	60	12G-SDI ¹²	Single Link
3840 x 2400	50	12G-SDI "BarcoLink 4k" ¹²	Single Link
3840 x 2400	59.94	12G-SDI "BarcoLink 4k" ¹²	Single Link
3840 x 2400	60	12G-SDI "BarcoLink 4k" ¹²	Single Link
4096 x 2160	50	12G-SDI ¹²	Single Link
4096 x 2160	60	12G-SDI ¹²	Single Link

C.3 Overview video timings HDMI 2.0 inputs

Overview

The following standard video formats are available for the projector.

Note: support for refresh rates 24.00, 30.00, 60.00 Hz automatically includes support of 1/1.001 x those refresh rates

Video timing (active pixels x active lines)	Vertical refresh rate (Hz)	3D support?
640 x 480	60	
720 x 480	60	
720 x 576	50	
800 x 600	60	
1024 x 768	60	
1280 x 720	50	Frame packing Top – bottom
1280 x 720	60	Frame packing Top – bottom
1280 x 800	60	
1280 x 960	60	
1280 x 1024	60	
1400 x 1050	60	
1600 x 1200	60	
1920 x 1080	24	Frame packing Top – bottom

11. Support for refresh rates 24.00, 30.00 and 60.00 Hz automatically includes support of 1/1.001 x those refresh rates.

12. 12G SDI board only, and only on Channel A

Video timing (active pixels x active lines)	Vertical refresh rate (Hz)	3D support?
1920 x 1080	25	
1920 x 1080	30	
1920 x 1080	50	Side by Side (SbS) progressive
1920 x 1080	60	Side by Side (SbS) progressive
1920 x 1200	50	
1920 x 1200	60	
2048 x 1080	24	
2048 x 1080	25	
2048 x 1080	30	
2048 x 1080	48	
2048 x 1080	50	
2048 x 1080	60	
2560 x 1600	50	
2560 x 1600	60	
3840 x 2160	24	
3840 x 2160	25	
3840 x 2160	30	
3840 x 2160	50	
3840 x 2160	60	
3840 x 2400	50	
3840 x 2400	60	
4096 x 2160	24	
4096 x 2160	25	
4096 x 2160	30	
4096 x 2160	50	
4096 x 2160	60	

C.4 Overview video timings DisplayPort 1.2 inputs

Overview

The following standard video formats are available for the projector.

Note: support for refresh rates 24.00, 30.00, 60.00 Hz automatically includes support of 1/1.001 x those refresh rates

Video timing (active pixels x active lines)	Vertical refresh rate (Hz)	Available layout modes, other than standard layout (1 x 1 layout)¹³	Support for 3D?
640 x 480	60		
800 x 600	60		
960 x 1080	120	4 Quadrant mode (2 x 2 layout)	Active 3D
960 x 1200	120	4 Quadrant mode (2 x 2 layout)	Active 3D
960 x 2160	120	4 Column mode (4 x 1 layout)	Active 3D
960 x 2400	120	4 Column mode (4 x 1 layout)	Active 3D
1024x 768	60		
1024 x 2160	60	4 Column mode (4 x 1 layout)	
1024 x 2160	120	4 Column mode (4 x 1 layout)	Active 3D
1280 x 720	50		
1280 x 720	60		
1280 x 800	60		
1280 x 960	60		
1280 x 1024	60		
1280 x 1080	60	4 Quadrant mode (2 x 2 layout)	
1280 x 1080	120	4 Quadrant mode (2 x 2 layout)	Active 3D
1280 x 1600	60	4 Quadrant mode (2 x 2 layout)	
1280 x 1600	120	4 Quadrant mode (2 x 2 layout)	Active 3D
1400 x 1050	60		
1600 x 1200	60		
1600 x 1200	120		Active 3D
1920 x 1080	50		
1920 x 1080	60		
1920 x 1080	120	4 Quadrant mode (2 x 2 layout)	Active 3D
1920 x 1200	50		
1920 x 1200	60		

13. Other layout modes are only available on Input boards that have multiple DP inputs.

Video timing (active pixels x active lines)	Vertical refresh rate (Hz)	Available layout modes, other than standard layout (1 x 1 layout)¹⁴	Support for 3D?
1920 x 1200	120	4 Quadrant mode (2 x 2 layout)	Active 3D
1920 x 2160	60	2 Column mode (2 x 1 layout)	Passive stereo
1920 x 2160	120	2 Column mode (2 x 1 layout)	Active 3D
1920 x 2400	60	2 Column mode (2 x 1 layout)	
2048 x 1080	24		
2048 x 1080	25		
2048 x 1080	30		
2048 x 1080	48		
2048 x 1080	50		
2048 x 1080	60		
2048 x 1080	120	4 Quadrant mode (2 x 2 layout)	Active 3D
2048 x 2160	60	2 Column mode (2 x 1 layout)	
2048 x 2160	120	2 Column mode (2 x 1 layout)	Active 3D
2560 x 1080	120		Active 3D
2560 x 1440	120		Active 3D
2560 x 1600	50		
2560 x 1600	60		
2560 x 1600	120		
3840 x 2160	24		
3840 x 2160	25		
3840 x 2160	30		
3840 x 2160	50		
3840 x 2160	60		Passive Stereo
3840 x 2400	50		
3840 x 2400	60		
4096 x 2160	24		
4096 x 2160	25		
4096 x 2160	30		
4096 x 2160	50		
4096 x 2160	60		

14. Other layout modes are only available on Input boards that have multiple DP inputs.

C.5 Overview video timings HDBaseT inputs

Overview

The following standard video formats are available for the projector.

Note: support for refresh rates 24.00, 30.00, 60.00 Hz automatically includes support of 1/1.001 x those refresh rates.

Video timing (active pixels x active lines)	Vertical refresh rate (Hz)
640 x 480	60
720 x 480	60
720 x 576	50
800 x 600	60
1024 x 768	60
1280 x 720	50
1280 x 720	60
1280 x 800	60
1280 x 960	60
1280 x 1024	60
1400 x 1050	60
1600 x 1200	60
1920 x 1080	24
1920 x 1080	25
1920 x 1080	30
1920 x 1080	50
1920 x 1080	60
1920 x 1200	50
1920 x 1200	60
1920 x 2160	50
1920 x 2160	60
2048 x 1080	24
2048 x 1080	25
2048 x 1080	30
2048 x 1080	48
2048 x 1080	50
2048 x 1080	60
2048 x 2160	50
2048 x 2160	60
2560 x 1600	50
2560 x 1600	60
3840 x 2160	24

Video timing (active pixels x active lines)	Vertical refresh rate (Hz)
3840 x 2160	25
3840 x 2160	30
4096 x 2160	24
4096 x 2160	25
4096 x 2160	30

Regulatory

D

D.1	Contact information.....	82
D.2	Production information	82
D.3	Product compliance EU.....	82
D.4	Product compliance UK.....	83
D.5	Product compliance US.....	83
D.6	Product compliance Turkey	83
D.7	Product compliance EAC	84
D.8	Product compliance China.....	84
D.9	Product compliance Taiwan	85
D.10	Trademark notice.....	87
D.11	Product privacy statement	87

D.1 Contact information

Contact address

Barco NV

Beneluxpark 21, 8500 Kortrijk, Belgium

Importers contact information

To find your local importer, contact Barco directly or one of Barco's regional offices via the contact information given on Barco's web site, www.barco.com.

Registered offices

Registered office: Barco NV

President Kennedypark 35, 8500 Kortrijk, Belgium

Registered office: Barco (Wuxi) Technology Co., Ltd.

No. 38, Chunhui Middle Road, XiShan District, 214101 Wuxi CHINA

注册办事处: 巴可 (无锡) 科技有限公司

中国无锡市锡山区春晖中路38号, 邮编214101

D.2 Production information

Made in information

The made in country is indicated on the product ID label on the product itself.

Production date

The month and year of production is indicated on the product ID label on the product itself.

Factory address

Factory: Barco (Wuxi) Technology Co., Ltd.

No. 38, Chunhui Middle Road, XiShan District, 214101 Wuxi CHINA

工厂: 巴可 (无锡) 技有限公司

中国无锡市锡山区春晖中路38号, 邮编214101

D.3 Product compliance EU

Disposal Information



Waste Electrical and Electronic Equipment (WEEE)

This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service. For details, please visit the Barco website at: <https://www.barco.com/about/sustainability/waste-of-electronic-equipment-customers>

Disposal of batteries in the product



This product contains batteries covered by the Directive 2006/66/EC which must be collected and disposed of separately from municipal waste.

If the battery contains more than the specified values of lead (Pb), mercury (Hg) or cadmium (Cd), these chemical symbols will appear below the crossed-out wheeled bin symbol.

By participating in separate collection of batteries, you will help to ensure proper disposal and to prevent potential negative effects on the environment and human health.

EMC notices Europe

EN55032/CISPR32 Class A MME (MultiMedia Equipment)

Warning : This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

D.4 Product compliance UK

UK Compliance



This product is fit for use in the UK.

Authorised Representative: Barco UK Ltd

Address: Building 329, Doncastle Road
Bracknell RG12 8PE, Berkshire, United Kingdom

D.5 Product compliance US

Federal Communications Commission (FCC Statement)

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference at his own expense

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

FCC responsible: Barco Inc.
3059 Premiere Parkway Suite 400
30097 Duluth GA, United States
Tel: +1 678 475 8000

D.6 Product compliance Turkey

Turkey RoHS compliance



Türkiye Cumhuriyeti: AEEE Yönetmeliğine Uygundur.
[Republic of Turkey: In conformity with the WEEE Regulation]

D.7 Product compliance EAC

EurAsian Conformity (EAC)



This product complies with the Safety of Low-Voltage Equipment (LVE Technical Regulation 004/2011, CU TR 004/2011) and the Electromagnetic Compatibility of Technical Products (EMC Technical regulation, CU TR 020/2011) and Restriction of use of Hazardous Substances in radio and electronic devices (RoHS Technical regulation, CU TR 037/2016).

D.8 Product compliance China

EMC notices China

GB/T 9254.1 A级ITE(信息技术设备)

警告： 在居住环境中，运行此设备可能会造成无线电干扰。

中国大陆 RoHS (Information for China ROHS compliance)

根据中国大陆《电器电子产品有害物质限制使用管理办法》（也称为中国大陆RoHS），以下部分列出了Barco产品中可能包含的有毒和/或有害物质的名称和含量。

According to the “Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products” (Also called RoHS of Chinese Mainland), the table below lists the names and contents of toxic and/or hazardous substances that Barco’s product may contain.

零件项目(名称) Component name	有毒有害物质或元素 Hazardous substances and elements					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印制电路配件 Printed Circuit Assemblies	X	O	O	O	O	O
外接电(线)缆 External cables	O	O	O	O	O	O
内部线路 Internal wiring	X	O	O	O	O	O
镜头支架 Lens holder	O	O	O	O	O	O
光学镜头 Optical lenses	O	O	O	O	O	O
螺帽,螺钉(栓),螺旋(钉),垫圈,紧固件 Nuts, bolts, screws, washers, fasteners	X	O	O	O	O	O
激光发生器 Laser	O	O	O	O	O	O
电源供应器 Power Supply Unit	X	O	O	O	O	O
风扇 Fan	X	O	O	O	O	O
液晶显示面板 LCD panel	X	O	O	O	O	O

零件项目(名称) Component name	有毒有害物质或元素 Hazardous substances and elements					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
附電池遙控器 Remote control	X	O	O	O	O	O
本表格依据SJ/T 11364的规定编制 This table is prepared in accordance with the provisions of SJ/T 11364. O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。 O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572. X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 标准规定的限量要求。 X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.						



在中国大陆销售的相应电子信息产品（EIP）都必须遵照中国大陆《电子电气产品有害物质限制使用标识要求》标准贴上环保使用期限（EFUP）标签。Barco产品所采用的EFUP标签（请参阅实例，徽标内部的编号使用于指定产品）基于中国大陆的《电子信息产品环保使用期限通则》标准。

All Electronic Information Products (EIP) that are sold within Chinese Mainland must comply with the “Marking for the restriction of the use of hazardous substances in electrical and electronic product” of Chinese Mainland, marked with the Environmental Friendly Use Period (EFUP) logo. The number inside the EFUP logo that Barco uses (please refer to the photo) is based on the “General guidelines of environment-friendly use period of electronic information products” of Chinese Mainland.

D.9 Product compliance Taiwan

EMC notices Taiwan

BSMI Taiwan Class A statement

警告使用者：此為甲類資訊技術設備，於居住環境中使用，可能會造成射頻擾動，在此情況下，使用者會被要求採取某些適當的對策。

BSMI Reporting Obligor Information / 報驗義務人資訊

- 一、 商品在國內產製時，為商品之產製者或輸出者。
但商品委託他人產製，並以在國內有住所或營業所之委託者名義，於國內銷售或輸出時，為委託者。
- 二、 商品在國外產製時，為商品之輸入者。
但商品委託他人輸入，並以在國內有住所或營業所之委託者名義，於國內銷售時，為委託者。
- 三、 商品之產製者、輸出者、委託產製或委託輸出入者不明或無法追查時，為銷售者。
前項所稱產製者，包括具有下列情形之一者：
 - 一、 組裝者：商品由個別零組件以組裝銷售。
 - 二、 修改者：符合檢驗規定之商品於進入市場前，為銷售目的而修改。

限用物質含有情況標示聲明書 (Declaration of the Presence Condition of the Restricted Substances Marking)

設備名稱: 投影機, 型號 (型式): I600-4K8, I600-4K10, I600-4K15 Equipment name: Projector, Type designation: I600-4K8, I600-4K10, I600-4K15						
限用物質及其化學符號 Restricted substances and its chemical symbols						
單元 Unit	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr6+)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
印製電路板配件 Printed Circuit Assemblies	—	○	○	○	○	○
外接電 (線) 纜 External cables	○	○	○	○	○	○
內部線路 Internal wiring	—	○	○	○	○	○
光學鏡頭 Optical lenses	○	○	○	○	○	○
鏡頭支架 Lens holder	○	○	○	○	○	○
螺帽, 螺釘 (栓), 螺旋 (釘), 墊圈, 緊固件 Nuts, bolts, screws, washers, fasteners	—	○	○	○	○	○
激光發生器 Laser	○	○	○	○	○	○
電源供應器 Power Supply Unit	—	○	○	○	○	○
風扇 Fan	—	○	○	○	○	○
液晶顯示面板 LCD panel	—	○	○	○	○	○
遙控器 Remote Control	—	○	○	○	○	○
<p>備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.</p> <p>備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.</p> <p>備考3. “—” 係指該項限用物質為排除項目。 Note 3: The “—” indicates that the restricted substance corresponds to the exemption.</p>						

D.10 Trademark notice

HDMI™

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

DisplayPort™

DisplayPort™, the DisplayPort™ logo and DisplayPortHDR™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries.

USB Type-C™

USB Type-C and USB-C are a registered trademarks of USB Implementers Forum

HDBaseT™

HDBaseT™ and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance.

PJLink™

The PJLink™ is a registered trademark of Japan Business Machine and Information System Industries Association.

DLP™

DLP® and the DLP logo are registered trademarks of Texas Instruments.



All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

D.11 Product privacy statement

About

Learn more about Barco's Product Privacy Statement: <https://www.barco.com/en/about/trust-center/product-privacy-statement>

Which data is captured and why

User names and IP addresses are captured for general secure operation of the product.

Data retention mechanism

An administrator should modify or delete a user (upon user request, or when the user doesn't work for the company anymore), either via the Users feature, or via a factory reset executed as administrator.

Logs may contain user names and IP addresses and are subject to the retention policy, but can't be deleted by the user. The user can send a request to dataprotection@barco.com.

Glossary

DMX

DMX-512 Lighting protocol over RS-485 interface. Carries information of 512 channels from a lighting controller to lighting devices. Standardized by USITT.

HD

Hazard Distance (HD) is the distance measured from the projection lens at which the intensity or the energy per surface unit becomes lower than the applicable exposure limit on the eye or on the skin. The light beam is considered (to be) unsafe for exposure if the distance from a person to the light source is less than the HD.

Index

A

Address
 Production 82
Airflow 22

B

Backlight 26
Basic RCU 29–30
 Batteries 30
Battery
 Disposal 83

C

Cleaning
 Exterior 54
 Lens 53
Communication 43–44
 DMX 47
Compliance 20, 81
 China 84
 EAC 84
 EU 82
 Taiwan 85
 Turkey 83
 UK 83
 US 83
Components
 Projector 22
Contact
 Address 82
Control 44

D

Dimensions 67
 Mounting holes 69
 Outer dimensions 68
DisplayPort 1.2 inputs

 Specifications 64
Disposal 81–82
 Battery 83
DMX input 47
DMX interface 47
DMX out 47
Download
 Product manual 20

E

Enclosed projection 18
EurAsian Conformity (EAC) 84
Exterior
 Cleaning 54

F

Fiber
 Input 48
 SFP 48
Function
 Button pressed indicator 36

G

General considerations 10

H

Hazard Distance 16, 18
 Modifying optics 19
 Multi-projector 19
 Projector stacks 19
Hazardous Chemicals 15
HDBaseT inputs
 Specifications 63
HDMI inputs
 Specifications 62
High Brightness precautions 16

I

Importer 82
 Info tri 20
 Input 43
 Fiber 48
 Quad Combo Mk II 45
 Quad Combo Mk III 46
 Quad DP 1.2 47
 SFP 48
 Small Form-factor Pluggable 48

L

LCD 27
 LED behavior
 Quad Combo Mk II 45
 Quad DP 1.2 47
 SFP 48
 Lens
 Cleaning 53
 Link speed 42
 Local keypad 25–26
 Functions 26

M

Maintenance 51
 mini-jack
 RCU 37

N

Notice
 Optical radiation 10
 Notice on safety 10

O

Orientation
 Projector 22
 OSD 27
 Overview video timings 72

P

Power
 Modes 40
 Power mode
 Transition 41
 Power Off 39–40
 Power On 39–40
 Privacy 87
 Projector
 Components 22
 Orientation 22
 Pulse Prospector
 Connecting 24
 Requirements 24
 Pulse RCU 33
 battery 34

Functionality overview 34
 on/off button 36
 Projector OSD on/off 37
 protection sleeve 38
 RGB button 36
 RGB filter 36
 Stealth Mode 37

Q

Quad Combo Mk II
 Introduction 45
 LED behavior 45
 Quad Combo Mk III 46
 Quad DP 1.2
 Introduction 47
 LED behavior 47

R

RCU
 mini-jack 37
 XLR 37
 RCU Basic 29
 RCU batteries 30
 RCU functions 30
 RCU Pulse 33
 Rear projection 18
 Regulatory 81
 Remote control 29, 33
 RoHS
 China 84
 Taiwan 86

S

Safety 9
 Battery explosion 13
 Fire hazard 12
 Hazard Distance 16, 18
 Hazardous Chemicals 15
 Personal injury 12
 Projector damage 13
 Safety Data Sheet (SDS) 15
 Servicing 14
 Stacking 14
 Safety Data Sheet (SDS) 15
 Safety instructions 11
 Safety labels 15
 SDI inputs
 Specifications 61
 SFP
 Introduction 48
 LED behavior 48
 SFP inputs
 Specifications 65
 Software update 52
 Software upgrade 52
 Source
 Fiber 48
 SFP 48
 Small Form-factor Pluggable 48

- Specifications 55
 - DisplayPort 1.2 inputs 64
 - HDBaseT inputs 63
 - HDMI inputs 62
 - I600-4K10 57
 - I600-4K15 59
 - I600-4K8 56
 - SDI inputs 61
 - SFP inputs 65
- Standard source files 71
- Start 21
- Status 23
- Switching Off 40
- Switching On 40

T

- Touch panel 27
- Trademarks 87
- Turkey RoHS 83

U

- UK Compliance 20, 83
- User definition 11

V

- Video timings
 - DisplayPort Inputs 75
 - HDBaseT Inputs 78
 - HDMI Inputs 74
- Video Timings
 - SDI Inputs 73

W

- Wake-On-DMX 40
- Wake-On-LAN 42
- WEEE 20, 82–83
- WOL 42

X

- XLR
 - RCU 37



R5917789 /01 | 2024-07-18

www.barco.com